


Wireless Microphone

H16

User Manual



ID Diagram

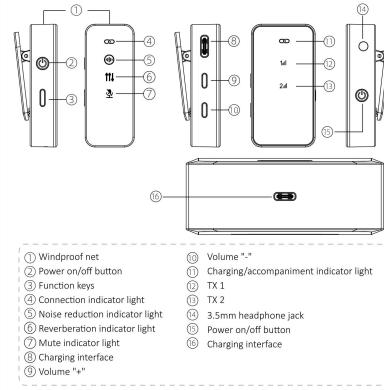

Some Android models will have incompatibility problems due to the system, please consult customer service for details

ID Diagram

Step 1: Long press the power button on the microphone, and the connection indicator light will flash, indicating successful power on. Step 2: Connect one end of the receiving end to the phone interface. Step 3: The indicator light for the connection between the receiver and transmitter remains on, indicating a successful connection. Open the camera live streaming app on your phone and use the microphone to listen.

Note: Some brands of Android phones can be used normally only when they go to the settings (search "OTG"-turn on OTG power supply)

About UI

Microphone Transmitter

State	Operation	LED
Power on	Automatic startup after leaving the warehouse/press and hold the power button for 3 seconds to start up	The green light at the connection location is flashing
Power off	Automatic shutdown upon entering the warehouse/Press and hold the power button for 3 seconds to shut down	All lights off
Not connected		The green light at the connection location is flashing
Connected already		The green light at the connection location is flashing
Noise reduction	Click the noise reduction button to turn on noise reduction. Click again to restore normal state. (First default enabled)	The green light at the noise reduction indicator position stays on for a long time
Reverberation	Double click the noise reduction button to turn on reverberation. Double click again to restore normal state. Default closed	The green light at the noise reduction indicator position stays on for a long time
Mute	Click the power button	The red light of the mute indicator position is always on
Charge		The red light at the charging indicator position is always on
Fully charged		The red light at the charging position is off
Low electricity		The red light at the charging position flashes rapidly

Note: Noise reduction with memory function, reopening the machine will remember the settings before the last shutdown

About UI

Receiver

State	Operation	LED
Power on	Volume+Increase Volume; Volume-Decrease Volume	TX1, TX2 connection indicator green light flashes slowly
Volume control	Automatic startup after leaving the warehouse/press and hold the power button for 3 seconds to start up	TX1, TX2 connection indicator light flashes three times; Default three gears, with memory
Power off	Automatic shutdown upon entering the warehouse/Press and hold the power button for 3 seconds to shut down	All lights off
Not connected	Click the power on/off button	TX1, TX2 connection indicator green light flashes slowly

Packing List

Content of packing
 (1) Microphone transmitter
 (2) Lightning receiver
 (3) Charging box
 (4) Charging cable
 (5) User manual

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.