


# Retro 3


使用说明书

User's Manual


取扱説明書

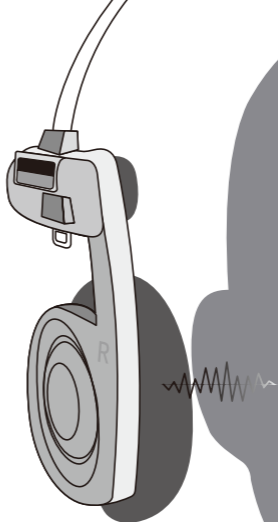

# 1 包装清单

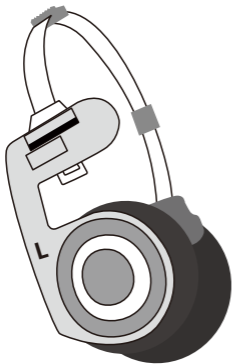

真无线蓝牙对耳耳机

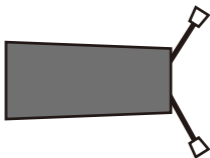


收纳袋



替换耳罩



 说明书



USB充电线



Type-C耳机线


## 2 开机/关机



开机：左右耳机同时长按2/3秒，亮灯代表开机。




关机：长按右边耳机2/3秒就会自动关机开机。

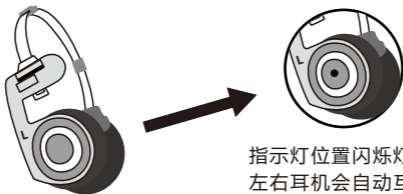

指示灯位置闪烁灯光  
左右耳机会自动互连

## 3 蓝牙连接

确保耳机开机，打开手机蓝牙，找到蓝牙“Retro 3”，点击连接配对。配对成功，左耳机（L）蓝灯慢闪。

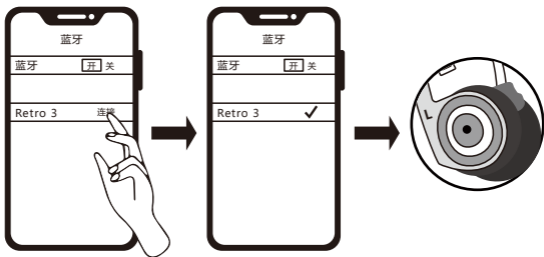

打开手机蓝牙，点击连接Retro 3

手机提示连接成功

Retro3左耳机蓝灯慢闪  
伴有轻微语音提示

### 提示

- 1、如未能搜索到“Retro 3”，请尝试关闭设备的蓝牙开关，重新开启以搜索。
- 2、如仍未搜索到“Retro 3”，请尝试重启您的设备后再次尝试。

按以上方法仍然无法配对时，请插充电线充电2-3秒后再拔下，开机。左右耳机会再次自动配对。

## 4 按键功能

### • 下一曲/上一曲

长按右耳机功能键，听到“嘀”变下一首

长按左耳机功能键，听到“嘀”变上一首

## •拒接来电

来电状态下，按耳机功能键1秒

## •接听/挂断电话

来电状态下，按左或右耳机功能键  
通话状态下，按左或右耳机功能键



按键功能区

## •播放/暂停音乐

 
播放音乐状态下，单按左或右耳机功能键

## •音量【+】/音量【-】

连续按两次右键  
连续按两次左键


# 5 数据线使用说明

### a.USB充电线



USB充电线用于给耳机充电使用

## b.耳机线

 

当蓝牙没电时，可插上配置的typec耳机线变成有线耳机，  
实现随时随地听歌。

## 6 产品参数

型号：Retro 3

喇叭单元：40mm

阻抗： $60\Omega \pm 10\%$

灵敏度： $117 \pm 3\text{dB}$

频响范围：15Hz—25KHz

重量：约75g

蓝牙版本：5.3


续航时间：约18h

电池容量：220毫安


输入输出电压：5V/1A



## 7 电量查看

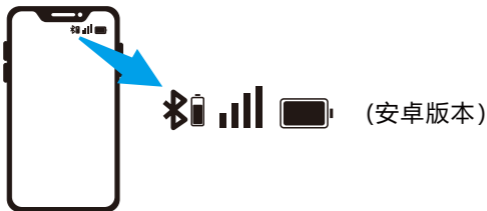

**手机查看耳机电量：**连接手机后可以在手机状态栏查看

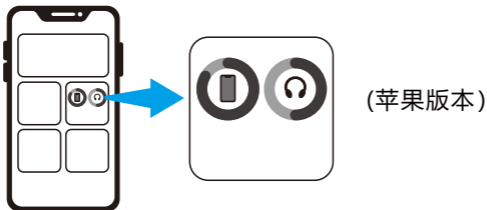

**手机查看耳机电量：**IOS用户需要在主页面打开电池小组件查看电量

## 8 折叠收纳




① 将头梁调节至头梁滑块平分头梁大约3等分位置

② 对折耳机头梁连接处




③ 将耳机头梁连接处往里收紧，扣上连接扣

# 1 梱包内容

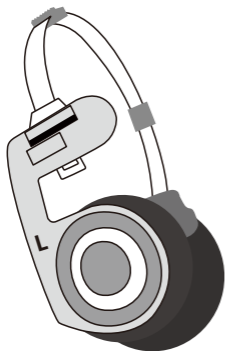

ヘッドホン

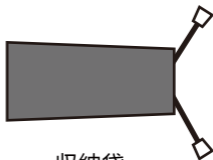


収納袋



交換用イヤーパッド



 取扱説明書



充電ケーブル(USB)



ヘッドホンケーブル(Type-C)


## 2 電源ON/OFF



ON(オン):ヘッドホンの左右を同時に2~3秒押して、ライトが光までONになる。




OFF(オフ):右ボタンを2~3秒に長押しして、オフになる。

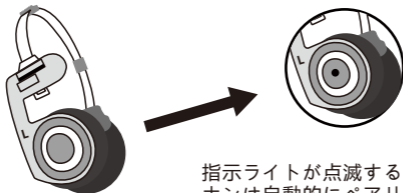


指示ライトが点滅すると、左右ヘッドホンは自動的にペアリングします。

## 3 ペアリング方法

- 1、スマホのBluetooth設定をオンします。
- 2、「Retro 3」を接続してください。
- 3、ペアリングできたら知らせる通知音が鳴ります。

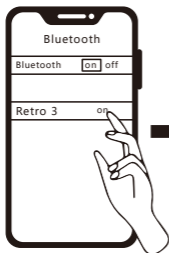

Bluetooth設定

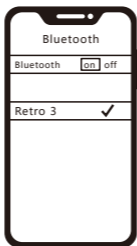

ペアリング



知らせる通知音が鳴ります

### ペアリングできない解決対策

- 1、端末に「Retro 3」が見つからない場合：端末側のBluetoothの設定を一旦オフにして、最初からペアリングをやりなおす。
- 2、どうしても「Retro 3」が見つからない場合デバイスを再起動して、もう一度最初からペアリングをやりなおす。

以上の方法で試行しても接続できない場合、ヘッドホンに充電ケーブルを入れて2~3秒充電してから抜いて、最初からONしてください。左右のヘッドホンは再び自動的にペアリングされます。

## 4 ボタン操作

### ・一時停止/再生

音楽が流す状態で、右或いは左ボタンを1秒押す

### •音量【+】/音量【-】

右ボタンを連続2回押すと音量+  
左ボタンを連続2回押すと音量-

### •次の曲へ/前の曲へ

右ボタンを約2秒間長押すと次の曲へ  
左ボタンを約2秒間長押すと前の曲へ



ボタン機能区

### •着信拒否

 
着信状態で、右或いは左ボタンを1秒押す

### •着信受話/着信終了

着信状態で、右或いは左ボタンを1回押す  
受話状態で、右或いは左ボタンを1回押す


## 5 ケーブルの使用方法

### a.充電ケーブル



充電ケーブルでヘッドホンを充電します

## b.ヘッドホンケーブル

 

Bluetooth電源が切れている場合は、ヘッドホンケーブルを使用して有線ヘッドホンになり、機能を正常に実現することができます

# 6 主な仕様

型番: Retro 3

ドライバーユニット: 40mm

インピーダンス:  $60\Omega \pm 10\%$

感度:  $117 \pm 3\text{dB}$

再生周波数帯域: 15Hz—25KHz

重量: 約75g

適合規格: Bluetooth Ver.5.3

通信距離: 約10m

再生時間: 約18h

バッテリー: 220mAh


入力出力電圧: 5V/1A



## 7 電池残量表示



スマホ端末に接続して、端末の画面上部に表示されます

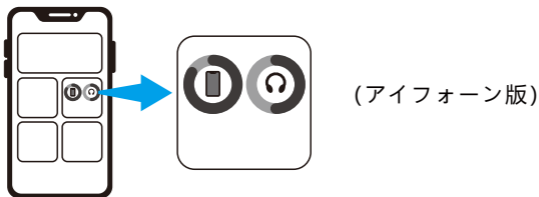

アイオーエス (iOS) システムは「電池」ボタン内に、接続中のBluetooth端末のバッテリー残量が表示されます。

## 8 折り畳み方法





① 伸縮アームを三等分ぐらい長さに調整します

② ヘッド部を中に折ります



③ 固定用スナップを接続します

# 1 Packing Contents

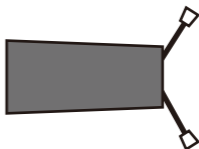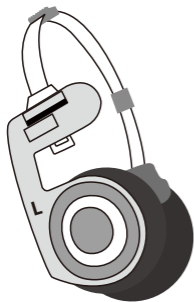

Storage Bag

 


Replacement Ear Pads



User's Manual

Wireless Headphones



Charging Cable(USB)



Headphone cable(Type-C)


## 2 Power On/Off



**Power On:** Touch the left and right earphone at the same time for 2/3 seconds, the light will be OK.




**Power Off:** Long press the right side 2/3 seconds to light up the red light will automatically shutdown.

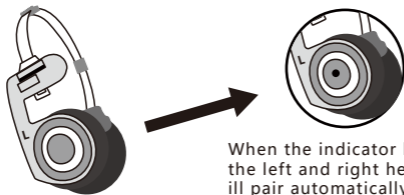

When the indicator light flashes, the left and right headphones will pair automatically.

## 3 Bluetooth Connect

Turn on the Bluetooth settings on your phone, Connect the 'Retro 3'. In pairing mode, the blue light on the left headphone will flash slowly. If pairing is successful, the right display will appear.

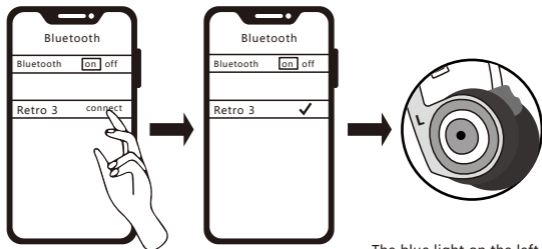

Turn on the Bluetooth settings , Apper the right display  
Connect the 'Retro 3'.

The blue light on the left headphone will flash slowly, with slight voice prompts.

### How to pair?

- 1、 If you cannot find the 'Retro 3' on your device: turn off the Bluetooth settings on your device and start pairing again from the beginning.
- 2、 If you still cannot find the 'Retro 3', restart the device and pair it again from the beginning.

If you still cannot connect after trying the above methods, insert the charging cable into the headphones and charge them for 2-3 seconds, then unplug them and turn them on from the beginning. The left and right headphones will pair automatically again.

## 4 Key Function

### •Play/Pause Music

Press the left or right headset button when music is playing.

## •Volume [+] / Volume [-]

Double press the right button consecutively.  
Double press the left button consecutively.

## •Reject call

Press the headset function button for 1 second in incoming call status.

## •Next song/Previous song

Long press the right headset function button, hear 'beep' to change to the next song.

Long press the left headphone function button, hear 'beep' to the previous song.

## •Answer and hang up

Press the left or right headset function key when in incoming call status.

 
Press the left or right headset function key when in call status.



Key Function Area


# 5 Cable

## a. Charging Cable



Charge the headphones with the charging cable.

## b.Headphone cable

 

When Bluetooth power is off, the headphone cable can be used to become a wired headphone and achieve normal functionality.

# 6 Product

Model: Retro 3

Speaker unit: 40mm

Impedance:  $60\ \Omega \pm 10\%$

Sensitivity:  $117 \pm 3\text{dB}$

Frequency response range: 15Hz-25KHz

Weight: about 75g

Bluetooth version: 5.3

Battery life: approximately 18 hours

Battery capacity: 220mAh

Input/output voltage: 5V/1A



# 7 Battery Check



Check the battery level of the headset on the mobile phone:  
After connection, check it on the status bar above the mobile phone



Check the battery level of the headset on the mobile phone:  
iOS users need to open the "Battery" widget on the main page to check the battery level

# 8 Fold and Storage



① Adjust the head beam to the position where the head beam slider bisects the head beam to about 3 equal parts

② Fold the connection of the headphone beam



③ Tighten the connection of the headphone beam inward Fasten the connecting buckle

## FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

# Warranty Rules

## 1. Warranty period

The warranty period of this product is 1 year from the date of purchase.

## 2. Warranty Object

Warranty only contains headphones. Other accessories are not covered by the warranty.

## 3. Outside the warranty

Even during warranty, the following conditions are not included within the warranty

- If you cannot return defective product.
- If you cannot provide purchase proof (such as order number).
- Failure or damage caused by improper handling such as transportation or dropping after purchase.

Model	Retro 3
Warranty Period	Since purchasing in one year
Purchasing Date	Year      Month      Day
Buyer:	Name: _____
	Address: _____
	Phone Number:(          )      —