 


DESK TOP CD PLAYER

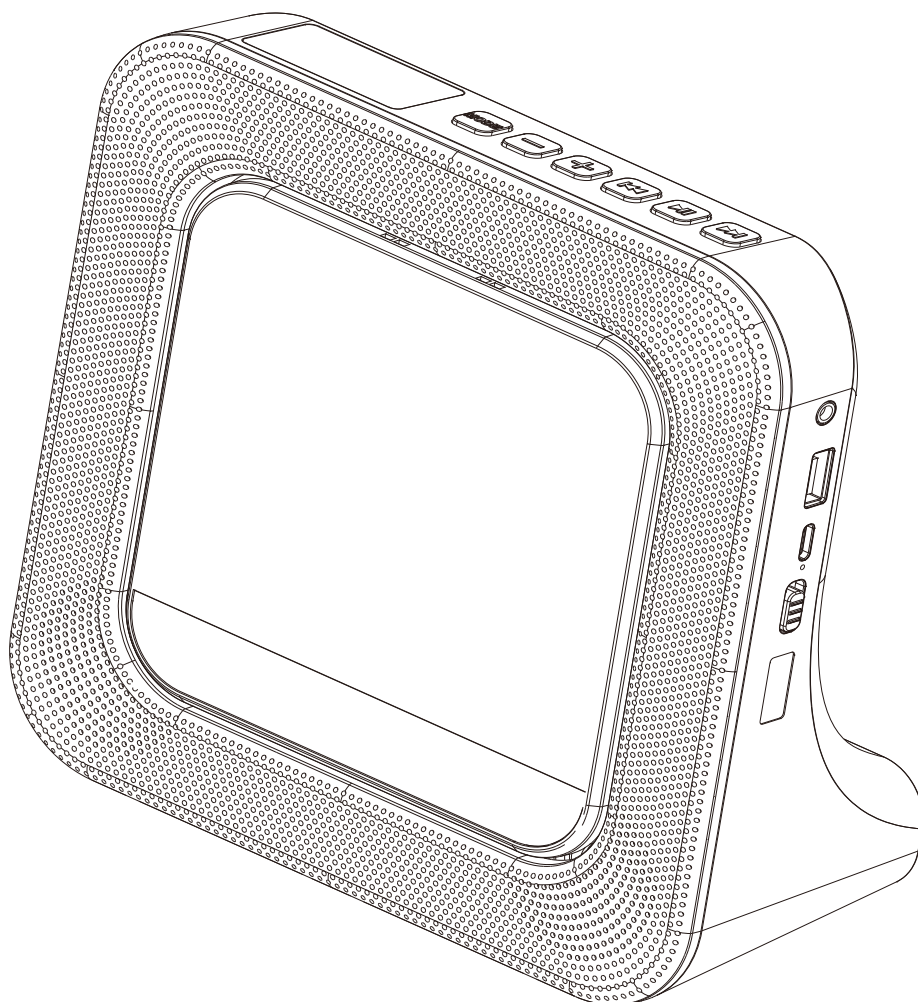

MODEL: **KC-807**

USER MANUAL

PLEASE READ THIS USER MANUAL COMPLETELY BEFORE OPERATING
THIS UNIT AND RETAIN THIS BOOKLET FOR FUTURE REFERENCE.



TABLE OF CONTENTS

PRECAUTIONS BEFORE USE-----	1
LOCATION OF CONTROLS-----	2
LOCATION OF CONTROLS REMOTE -----	3
INSTALLATION-----	4
BASIC OPERATION-----	4
CD OPERATION-----	5- 6
USB STICK PLAY OPERATION-----	6
BLUETOOTH TRANSMIT -----	6
BLUETOOTH OPERATION-----	7
FM RADIO OPERATION-----	7- 8
SPECIFICATION-----	8
CARE AND MAINTENANCE-----	9
TROUBLESHOOTING-----	10

PRECAUTIONS BEFORE USE

- 1.** Usage of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure or fire or electrical shock. Keep below instructions in mind.
- 2.** Do not cover or block any ventilation openings. When placing the device on a shelf, leave 5cm (2") free space around the whole device.
- 3.** Stop operation immediately if any liquid or solid object fall into the cabinet. Unplug the player and have it checked by qualified personnel.
- 4.** Keep the player away from heat sources such as radiators, heaters, stoves, candles and other heat-generating products or naked flame. Working temperature between 0° and 35°C.
- 5.** Avoid using the player near strong magnetic fields
- 6.** This player must operate on a power source as specified on the specification label.
- 7.** Unplug this player during lightning storms or when unused for a long period.
- 8.** Make sure this player is adjusted to a stable position. Damage caused by using this player in an unstable position vibrations or shocks or by failure to follow any other warning or precaution contained within this user manual will not be covered by warranty.
- 9.** To clean the device, use a soft dry cloth. Do not use solvents or petrol based fluids.

  LOCATION OF CONTROLS

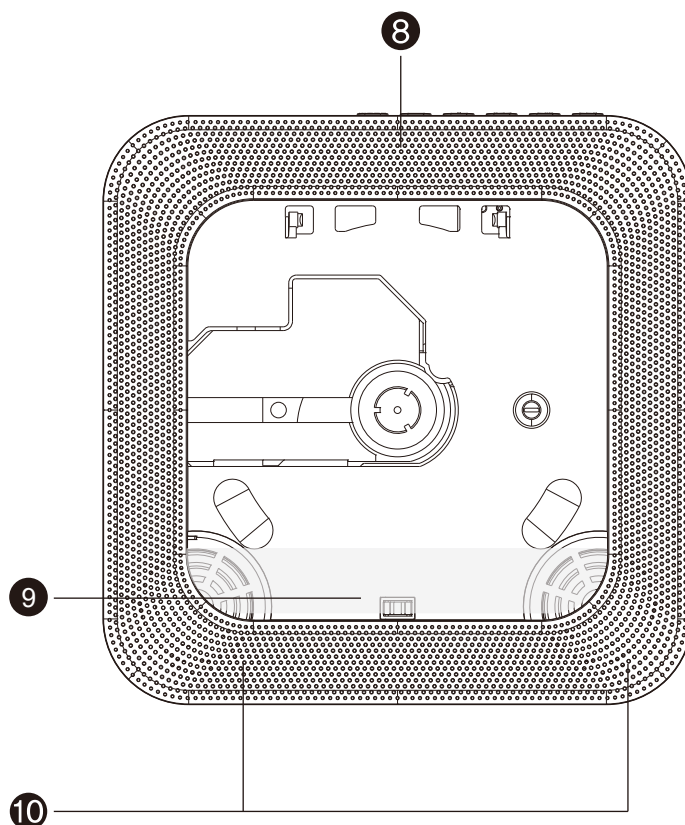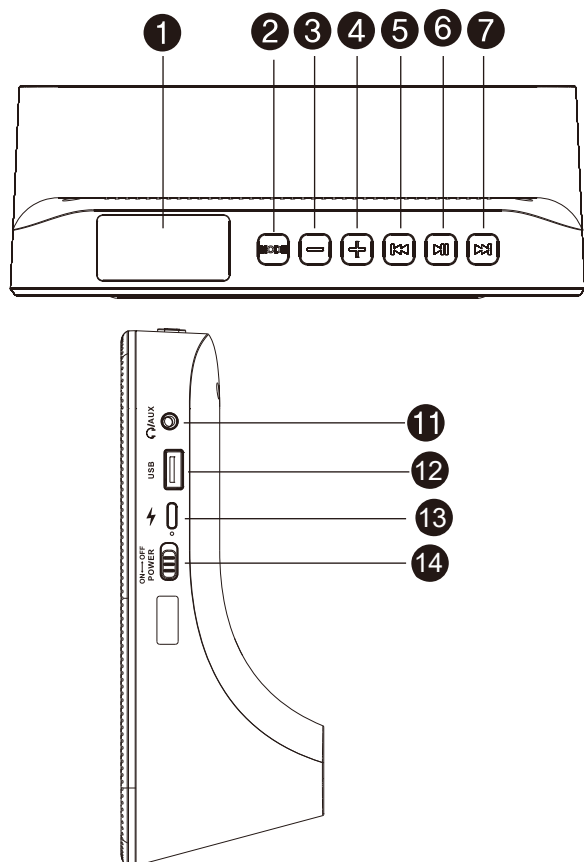

1.LCD screen

2.MODE button

Press to change mode after turn on
CD/USB/FM/BT/AUX

Press and hold to BT transmit for CD/USB

3.Volume - button

press to decrease volume incrementally
Press and hold to decrease fast,

4.Volume + button

press to increase volume incrementally
Press and hold to increase fast,

5.Previous Track

Press to skip to previous track for CD/USB/BT

Press and hold to fast backward CD/USB

In FM mode:

Press to switch radio stations

Press and hold to tune down and
stop at nearest radio station

6.Play/Pause button

press to pause/resume play on CD/USB/BT,
Press to scan radio station in FM mode
Press and hold to turn on/off the LED
light in cd case

7.Next Track

Press to skip to next track for CD/USB/BT

Press and hold to fast forward CD/USB

In FM mode:

Press to switch radio stations

Press and hold to tune down and
stop at nearest radio station

8.Remote sensor

9.CD door open/close

10.Speakers

 
11.Earphone/Audio in Jack

12.USB socket

13.DC 5V in power port


14.Power switch

REMOTE CONTROLS

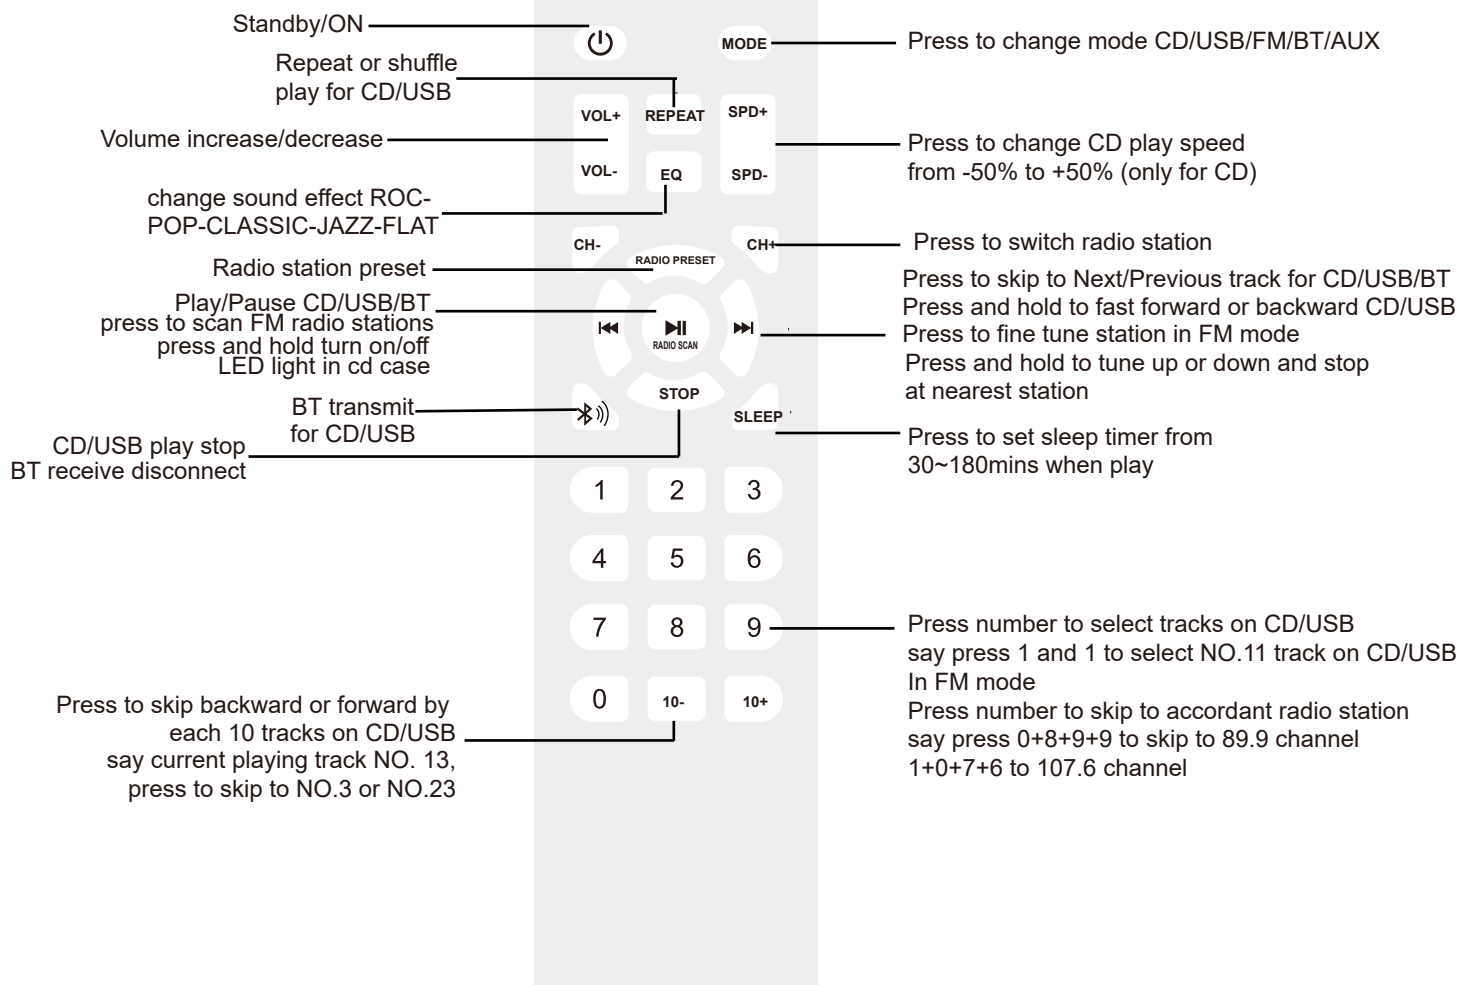


REMOTE BATTERY LOADING

 1. Press down the tab on the remote control battery door, in the direction of the arrow, to remove it.
2. Insert the 2 x AAA batteries, taking care to the + and - markings and position the batteries the correct way around.
3. Replace the battery cover, making sure that it "clicks" shut.

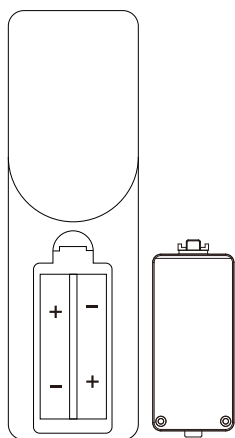

Caution about the use of Batteries:

 - ✦ Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- ✦ Replacement of a battery with an incorrect type that can result in an explosion or the leakage of flammable liquid or gas.
- ✦ Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- ✦ Attention should be drawn to the environmental aspects of battery disposal.

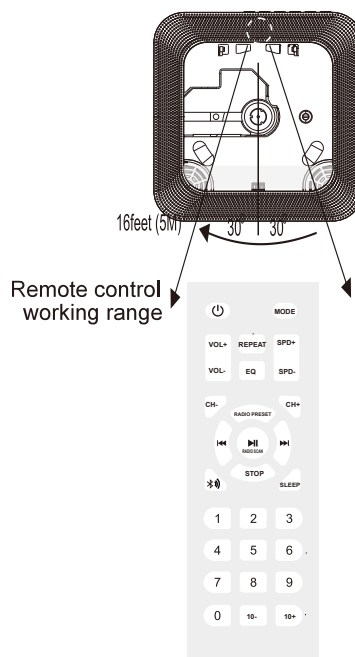

INSTALLATION

CONTENT OF DELIVERY

- Main unit
- DC power cable
- Instruction manual
- Remote control

POWER SUPPLY

- This CD player is powered by a DC 5V 2A charger (not including). Use your mobile charger with USB output port to power this player
- Connect the provided DC power cable to type C 5V in port on the cd player and the charger to USB port, and then connect the charger to mains.

BASIC OPERATION

POWER ON / OFF

Slide the power button on the right side of cd player to turn on;

Slide the power button off to turn off and save power when finish using;

Please take note:

1. Remote only functions after the player being turn on;
2. Press the power button on the remote to have player standby or reactive

ADJUSTING VOLUME

Press the vol+ or vol- button to increase or decrease incrementally.

Press and hold vol+ or vol- button to increase or decrease rapidly.

HEADPHONE

Use headphones with a 3.5mm jack plug and connect them to the headphones socket on the right side of the system. The speaker will be muted.

 


To prevent possible hearing damage, do not listen at high volume levels for long periods.

AUDIO IN CONNECTION

Use this function to emplyfy audios from external deivce with earphone or audio out.

1. Use audio cable to connect the 3.5mm AUX input jack of the player to the 3.5mm headphone or line-out jack of the external audio source.
2. Press **MODE** button repeatedly till "LINE" shows up on the screen.
3. Use the audio source to control playback (eg., stop, play, next, previous)
4. Use the audio source or /and the cd player to increase or decrease volume.

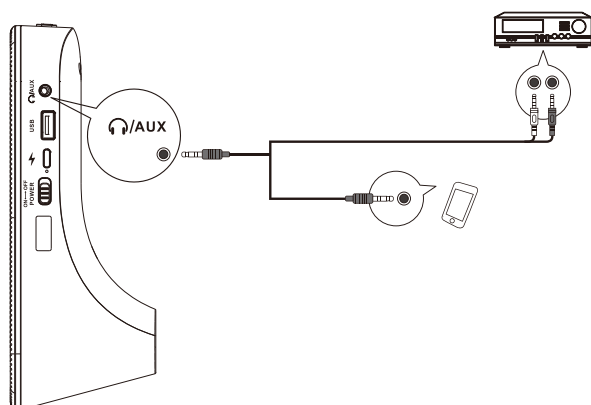

CD PLAY OPERATION

● LOAD IN DISC

1. Press the bottom middle position of CD door to open CD door.
2. Load in the CD disc into compartment with its label facing up and close the CD door.

● PLAYING DISC

- ❖ Switch the power button on to turn on the CD player, may you press the **MODE** button to switch to CD mode. The screen will show "CD" and then "rEAd", and then begin to read the disc in the player. It will start playing from track 1.

Note: LCD screen will show "NdSC" if there is no disc or the inserted disc is not playable after turn on. Please load in the right disc and close the CD door to start CD playing.

- ❖ To pause play, press the **▶||** button while a disc is playing. "PAUS" will display on the screen.
- ❖ Press the **▶||** button to resume playback when paused.
- ❖ Press the **▶▶** button to skip to next track. The screen will update the track number and display the playing time. Press and hold **▶▶** button to advance quickly through current track. Release the button to resume normal playback.
- ❖ Double click the **◀◀** button to skip back to the previous track. The screen will update the track number and display the playing time. Press and hold the **◀◀** button to rewind through current track quickly. Release the button to resume normal playback. Note: Quickly double click **◀◀** button to skip to the previous track. A single click will skip to the beginning of the current track.

As this CD player was with minimalist design and only few controls on the unit. Use the remote to access more functions.

REPEAT AND SHUFFLE PLAY

Single track repeat: press the **REPEAT** button on the remote, the repeat sign "ONE" shows on the screen and then disappear. The current track will replay repeatedly until play stopped.

All tracks repeat: press the **REPEAT** button on the remote repeatedly until the repeat sign "ALL" shows on the screen and then disappear. The player will replay all tracks until play stopped.

Shuffle play: press the **REPEAT** button on the remote repeatedly until the random sign "SHL" shows on the screen and then disappear. The player will play randomly until play stopped.

Resume sequential play: press the **REPEAT** button on the remote repeatedly until "OFF" shows on the screen and then disappear. The player will play tracks sequentially and stop after the last track played.



CD PLAY SPEED ADJUSTING

When playing CD, press the **SPD+** or **SPD-** button on the remote to adjust the play speed from 0.5 to 1.5 times of normal. The screen will display speed level from SP-5 to SP 5 accordingly and then disappear.

To resume normal speed, press **SPD+** or **SPD-** button till SP-0 shows up on the screen.

Note: Play speed adjusting is only available for CD.

SLEEP TIMER SETTING

When playing, press the **SLEEP** button on the remote repeatedly to set the sleep timer cycle through 180 to 0 minutes (OFF). The sleep timer will be set automatically after sign () fix on the screen. When time up, the player will turn off automatically.

Note: Sleep timer works once at a time.

EQ SETTING

When playing, press the **EQ** button on the remote repeatedly to change sound effect cycle through CLAS-ROC-POP-JAZZ-FLAT

Note: FLAT is with normal sound.

QUICK TRACK SELECTING

Use the numeric and the 10+ or 10- buttons on the remote to skip track quickly.

Say press 1 and 1 to select NO.11 track on CD;

Press **10-** or **10+** button to skip backward or forward by each 10 tracks

USB PLAY OPERATION

1. Insert a USB device (MAX with 128GB, MP3 or WMA formats) into the USB port.
2. Press the **"MODE"** button on the cd player or the remote to switch to USB mode, the LCD screen shall show "USB"
3. The player will play first track on the USB Stick
4. The USB play operations are similar as CD play except for play speed adjusting.

BLUETOOTH TRANSMITTING OPERATION

When playing a CD or USB, you can transmit the sound via Bluetooth and sync it with other Bluetooth such as Bluetooth earbuds, Bluetooth speaker and more.

1. Before transmitting, it is recommended to turn off the Bluetooth on other surrounding devices.
2. Turn on the Bluetooth of the device you want to sync with this player.
3. **Press and Hold** the **MODE** button on the player, or **press** the bluetooth transmit button on remote, the Bluetooth transmit icon will flash on the screen.
4. Ensure that the player and the Bluetooth device are within pairing range (within 10 meters) and wait for a few seconds.
5. Once successfully paired, you will hear the sound from the Bluetooth device. The Bluetooth transmit icon on the player's screen will remain steady.
6. If the pairing fails, repeat steps 2-4 to retry the pairing process.

BLUETOOTH PLAY OPERATION

The CD player has a Bluetooth reception function. Make sure the working distance is within 10 meters. Different environment may have effect on the working distance.

1. Press the "**MODE**" on the cd player or remote to switch to bluetooth mode, the LCD screen shall show and "bLUE"
2. Activate the Bluetooth function on your Bluetooth device and select "**KC-807**". There is a prompt after paired successfully.
3. Press the "**▶||**" button on the player or remote to start or pause the playback.
4. Press "**◀◀ / ▶▶**" on the player or remote to skip to the previous or next track.
5. Adjust volume both on the cd player and the Bluetooth device.
6. Repeat step 1 and 2 if connecting fails till succeeds.

The player will automatically connect to your bluetooth device the next time it is within range and has bluetooth enabled.

RADIO

1. Press the "**MODE**" button on the player or remote repeatedly to switch to FM mode. The screen shall indicate some station frequency.
2. Press the "**▶||**" button on the player or remote to have it scan and store all the available radio station till finish, the player will play first radio station stored.
3. Press "**◀◀ / ▶▶**" button on the player to switch stations. Or press the **CH-/CH+** button on the remote to switch stations.
4. Press and hold "**◀◀ / ▶▶**" button on the player or remote control to tune down or up and stop at the nearest station to current.
5. If necessary, press the "**◀◀ / ▶▶**" button on the remote control to fine tune the station.

RADIO PRESET OPERATION

When radio scan, the available stations are stored sequentially according to frequency. **Use the remote** to preset radio stations with desired sequence.

To set a preset manually:

1. Enter FM mode and press "**▶||**" RADIO SCAN button to scan all available radio stations
2. Press "**CH-**" or "**CH+**" buttons to select the desired station to be set into manual preset.
3. Press "**RADIO PRESET**" button to start preset, current station code, say P-01 will flash;
4. Press "**CH-**" or "**CH+**" buttons to change the station code;
5. Press "**RADIO PRESET**" button to confirm preset;
6. Repeat steps of 2~5 to store at most 30 stations into preset;

Please take note:

- Manual preset will override the auto preset
- Press "**▶||**" RADIO SCAN button to clear manual preset when play radio



To select a preset:

- 1.Switch to FM mode
- 2.Press "**CH-**" or "**CH+**" button to select the pre-stored station (P01 to P30)

TECHNICAL SPECIFICATIONS


DC Power	DC 5V 2A
EQ type	Classic,POP,Jazz,Rock,Normal
FM Frequency Range	87.5 – 108.0 MHz
Speaker output Power	2W+2W RMS
Earphone jack	3.5mm
CD format	CD/CD-R/MP3/WMA
Bluetooth® Version	Paring NO.:KC-807 Version 5.3 2.4 GHz
USB memory format	Max. 128GB MP3 & WMA FAT32
Unit size:	189*189*69mm 7.4*7.4*2.7 inches
Weight:	0.52kgs 1.15Lb

CARE AND MAINTENANCE


1. Unplug the player before maintenance or cleaning.
2. Clean the unit with a soft, damp (never wet) cloth. Solvent or detergent should never be used.

CAUTION: Never allow any water or other liquids to get inside the unit while cleaning.

 3. Clean the CD disc if skips or will not play. Wipe the disc from the center out with a cleaning cloth, after playing, store the disc in its case.

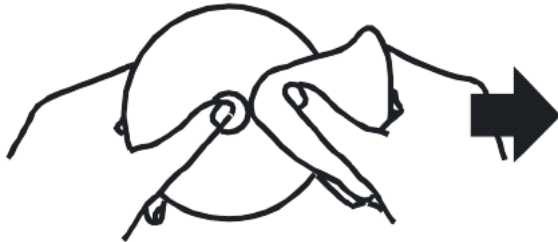

 4. If the CD lens is dusty, clean it with a brush-blower, blow several times on the lens and remove the dust with the brush. Finger prints may be removed with a cotton swab moistened with alcohol.

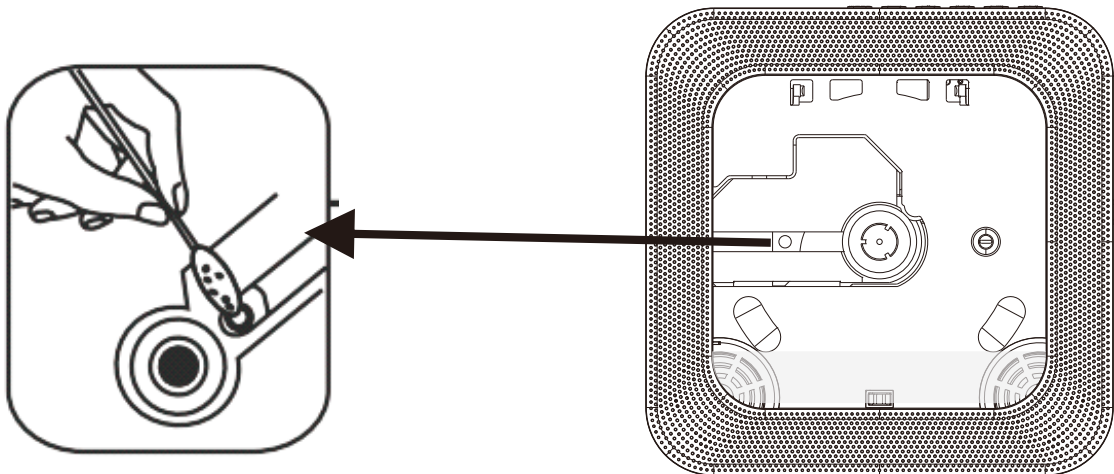

TROUBLESHOOTING

No power	Charge it timely
CD do not play	– Load in and secure the disc properly – Replace with compatible discs – Press ► to play after replace disc
USB do not play	Make sure that the files are either WMA or MP3 formats – Make sure the USB disk is below 32GB
No sound or bad sound quality	– Press ► to resume playback. – Adjust the volume. – Check and clean the connections.
The disc is skipping or otherwise distorted.	– The disc may be scratched, dirty or otherwise damaged. Damaged discs play unpredictably. – MP3 files encoded at a very high or very low sample rates may not play properly. (A typical CD-quality file is encoded at 192 Kbps and 44,100 Hz. Try playing a different file). – The MP3 file may have become corrupted. Try playing a different file. – The batteries may be running low. Charge it timely

COMPLIANCE WITH FCC REGULATIONS

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: - Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/ TV technician for help. RF Exposure The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.