



Installation Instruction (GSJ1300/GSJ1600/GSJ1800)

GSJ

Web Page Basic Configuration

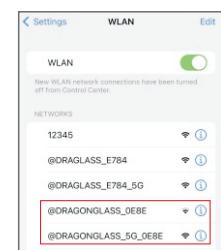

2.1. Open the WiFi settings page of your mobile phone then connect to
@DRAGONGLASS_XXXX or
@DRAGONGLASS_5G_XXXX

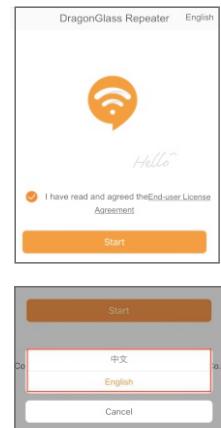


2.2. After the mobile phone had connected to WiFi, the page will automatically redirect to the setup wizard web page of device, follow the setup wizard and complete the configuration step by step. If you don't redirect to the setup wizard web page, please manually enter "192.168.8.1" or "home.to" into the address bar of the mobile phone browser to enter the setup wizard page.


2.3. The default language of this device is English. Please click the "English" button in the upper right corner of the screen to select the language if you need.

GSJ

Web Page Basic Configuration

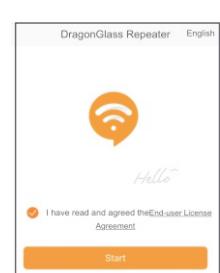


2.4. After the language setting is completed, please check the User Use Agreement in the pop-up interface and click the "Start" button;

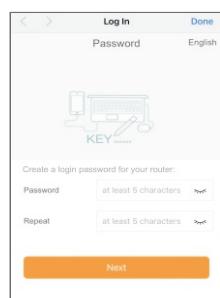

2.5. Set the administrator password (please set your login password and remember it for logging next time).

GSJ

Repeater Mode Configuration

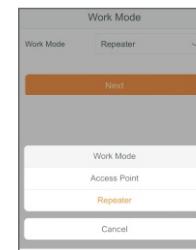

3.1. After completing the administrator password setting in (2.5), then it will enter the working mode selection page. If you need to extend the WiFi signal by wireless, please select the repeater mode, and click the "Next" button after the mode selection is completed.



3.2. After completing the above steps, the page jumps into the signal extension section, where you can extend both 2.4G and 5G WiFi signals at the same time, or you can only choose to extend a single 2.4G or 5G signal:
 If you only choose to extend 2.4G WiFi or 5G WiFi, you need to turn off the unused signal (red box identification button); If the signal to be extended is not displayed, please click "more" buttons to show it.



3.3. Enter the WiFi password you want to extend;
 ☺The password entered is your home router's password.

Repeater Mode Configuration


GSJ

AP Mode Configuration



4.1. After completing (2.5) administrator password setting, enter the working mode selection page and select AP mode;

☺ If you choose AP mode, please make sure that the network port is connected to the network cable that can access the Internet.

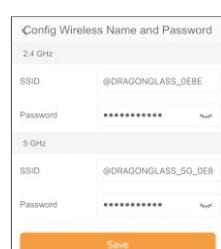

4.2. After selecting the AP mode, click the "Next" button to set the WiFi SSID and password, then it will work on the AP mode after the device is restarted and reconnected.

 
3.5. Complete the WiFi extender setting, enter the WiFi password, and reconnect your device.




GSJ

5. Page Login

5.1. After the extending or AP mode had been set successfully, you can also connect the new WiFi and enter the "home" in the address bar of mobile browser to show the current status of the device or re-configure the device as well if you need.



5.2. Enter the administrator password set in 2.5 to log in.

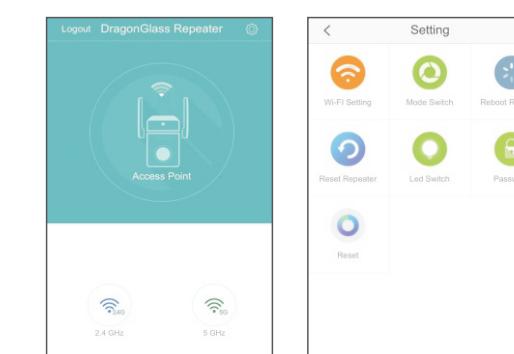

5.3. Click the "Settings" button in the upper right corner to make the settings.

GSJ

IC Caution- English

This device complies with Innovation, Science and Economic Development Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:(1)This device may not cause interference, and(2)This device must accept any interference, including interference that may cause undesired operation of the device. To maintain compliance with RSS-102 RF Exposure guidelines, This equipment should be installed and operated with minimum 20cm distance between the radiator and your body: Use only the supplied antenna.- French:Cet appareil est conforme aux normes RSS exemptées de licence d'innovation, sciences et développement économique Canada. L'exploitation est autorisée aux deux conditions suivantes:(1)l'appareil ne doit pas produire de brouillage, et(2)l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.Pour être conforme aux lignes directrices d'exposition RF RSS-102, cet équipement doit être installé et exploité à une distance minimale de 20cm entre le radiateur et votre corps: n'utilisez que l'antenne fournie.

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum 20cm distance between the radiator and your body: Use only the supplied antenna.