



Gigabit Router Setup Guide v1.2

List of items

1. A router
2. an adapter
3. network cable
4. A copy of the instruction manual

Installation Steps

1. Plug in the power and wait for forty seconds.
The indicator light shows the following condition (p1)

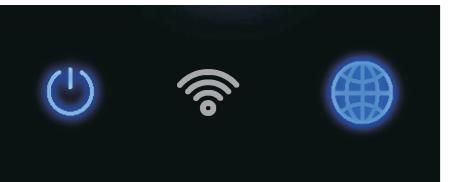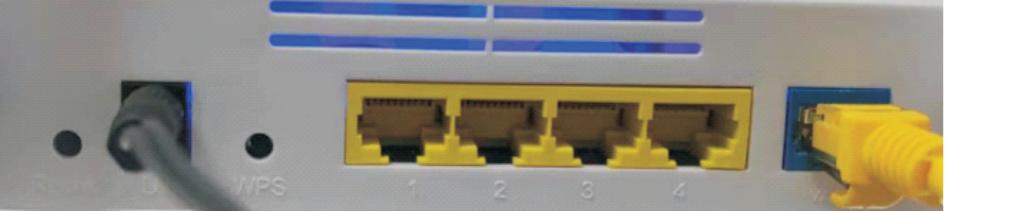

P1 (Figure 1)



P2 (Figure 2)

2. Plug in the internet cable and wait for twenty seconds.
The indicator light shows the following situation (p2)

3. Open the mobile WIFI list, find JH1200-XXX-2.4G/JH1200-XXX-5G
enter password 12345678 and click connect

正

Qualification Certificate

name:	Wireless routers
Inspectors:	011
date:	February 2025

This product has passed the inspection and is allowed to leave the factory;
The product warranty period is one year


Warranty card

This warranty card is a product warranty certificate,
please be sure to fill in the details and keep it!

User Information	User's name	
	Contact number	
	Mailing address	
	E-MAIL	
Product Information	Mailing address	
	product name	
	manufacturing enterprise	
	Production address	

Router Password Modification Tutorial


Step 1:
Connect to the JH1200 WIFI on the router, then open the mobile browser and enter the URL: 192.168.10.1
Click on the top right corner to go or visit

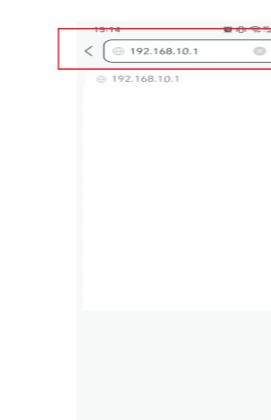


Step 2:
You will enter the router login page and enter Router login password: admin after that Click to log in




Step 3:
Click on the bottom right corner - Wireless Settings

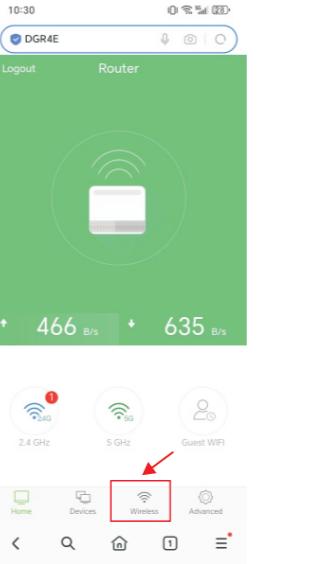

Step 4:
Here, you can modify the WIFI name and password for the router 2.4G and 5G. After entering them, click save

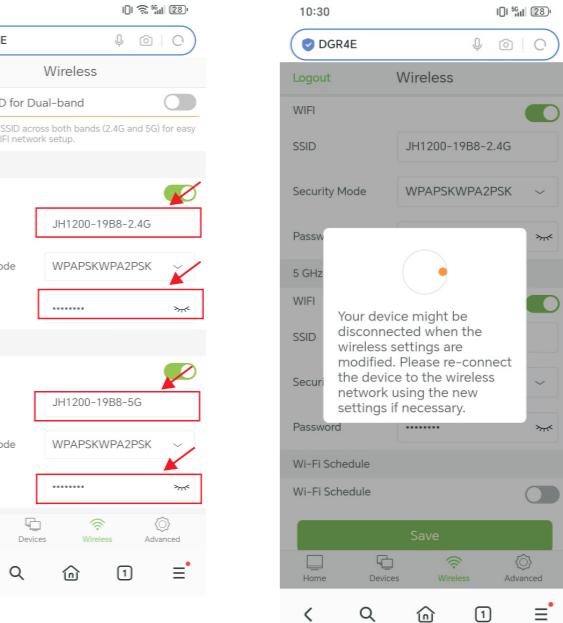


Step 5:
Wait for about 2-3 minutes, refresh the WIFI list, and connect to the WIFI with the modified name and password

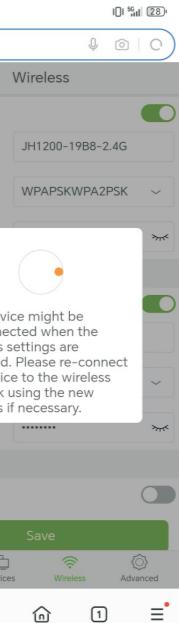


Router Broadband Internet Tutorial


Step 1:
Connect to the JH1200 WIFI on the router, then open the mobile browser and enter the URL: 192.168.10.1
Click on the top right corner to go or visit

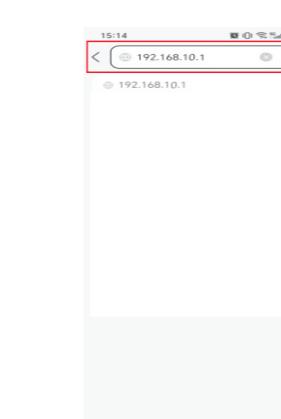


Step 2:
You will enter the router login page and enter Router login password: admin after that Click to log in

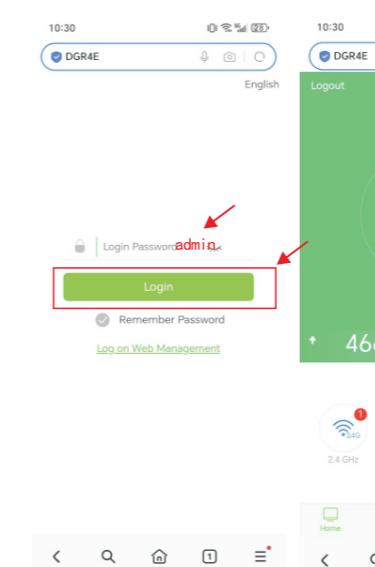


Step 3:
Then click on the function settings in the bottom right corner

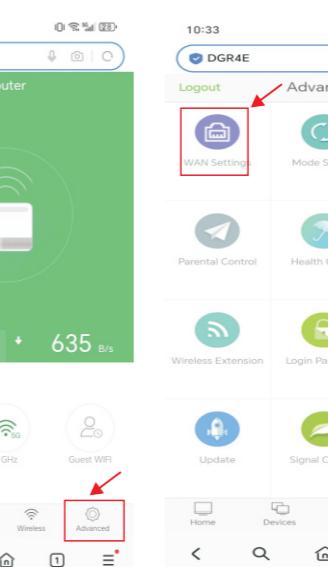

Step 4:
Select WAN port settings

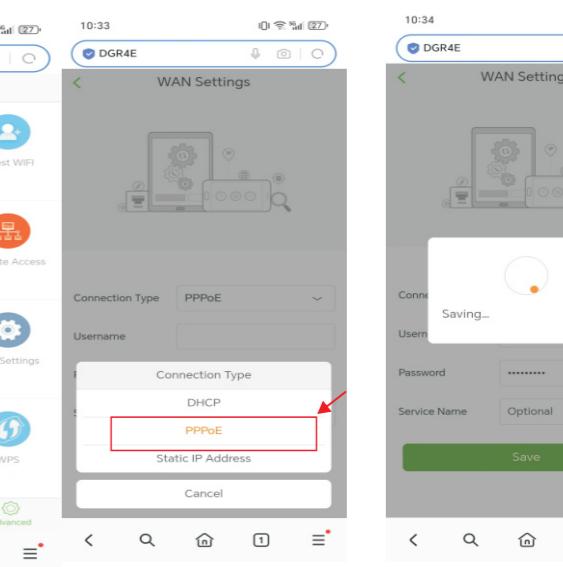

Step 5:
Click to select broadband dial-up

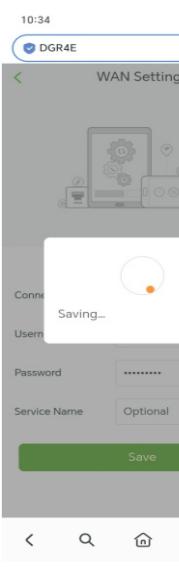

Step 7:
Enter the broadband account and password, then click save, wait for the router's three lights to stay on, and the broadband dialing is complete

反

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum 20cm distance between the radiator and your body: Use only the supplied antenna.