

size:105x142.5mm

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

## Instructions for WS-3 Bluetooth audio

- **charge** External 5V charge for this machine ,  
The red light remains on when charging, but goes off when fully charged.
- **M/∅** Hold:ON/OFF. Press:mode switching.
- **The Key Operation**
  - 1, " M/∅ " Short press:Wireless / autodyne /TF/RADIO.
  - 2, " -/V- " Long press: for the volume reduction.  
Short press: radio model for the last station, MP3 / Wireless mode is a song.  
The self timer mode short press " - /V- " button for the self timer function  
(only for IOS mobile phone system)
  - 3, " +/V+ " Long press: the volume and.  
Short press: Radio Model for the next stage, the MP3 / Wireless mode for the  
next song. The self timer mode sh ort press " +/V+ " button for the self  
timer function(only for Android phones)
  - 4, " || " Mp3/ radio / Wireless state short press play / pause . Radio status  
long press for the auto channel search.  
" || " Incoming short press the " || "key to answer the phone  
Long press " || " to hang up the call, short press the " || " key "to switch  
between phone calls / Wireless speakers answer"  
Wireless status long press the " || " key to dial back the last telephone

- **The Self Timer Funtion**

click "M", from the Wireless mode to the self timer mode  
open the Wireless mobile phone, search for "shutter", click on the link  
open mobile phone camera interface, press " - /V- " or " +/V+ " button  
to take pictures

Attached: Android system requires 4.2.2 IOS requires version 6.0nd above, the other version  
does not support. Mobile phone with independent pictures button generally do not support.

### Wireless connection to other wireless operation methods

- I. Open two wireless speakers at the same time
- II. Double-click the " || " key(Heard "tick" is ok)
- III. Wait for the two wireless speakers to interconnect(Two speakers also appear the sound at the same  
time,express connect success)
- IV. Open the phone wireless,search for the matching name for another wireless speaker and connect it
- V. Two wireless speakers were connected successfully, and can start playing music

### Remark:

1. Two wireless speakers that already connected successfully,can automatic connect another wireless  
speaker when open the speaker again
- 2.If no automatic connection,please turn off the wireless,restart two speakers(didn't need press any key)
3. When the two speakers automatic connect,open the phone wireless again and connect the two wireless speakers