

**T68**  
**Wireless Transmitter and Receiver**

**USER MANUAL**



Please read this manual carefully before use

**Product Introduction:**

This product is a smart Wireless Audio adapter, supporting two modes of Wireless receiver and transmitter; Typical use cases, Mobile phone music is transferred to home speakers, car speakers, or CD player, MP3, computer and other audio equipment is transferred to headphones, speakers and other scenarios; Flexible use of low distortion, low power consumption, low delay, high fidelity, stereo operation is simple and convenient


**Product Specifications:**

1. Wireless V5.3
2. Supports Wireless receiver/transmitter
3. Automatically connect back to the paired Wireless device upon startup
4. If no device is connected in 3 minutes, the device automatically shuts down
5. The music will be played for about 9 hours on full power
6. Wireless support A2DP, AVCTP and AVDTP, AVRCP, HFP, SPP
7. Support Wireless stereo music DSP technology
8. AUX audio input/output
9. Support to read TF-card (up to 64GB)

**Package Contents:**

* 1 Wireless adapter	* 1 Charging cable
* 1 3.5mm audio head	* 1 User manual

**Interface diagram:**

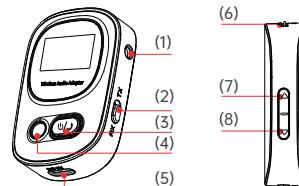

1. Aux port      2. Switch the RX / TX mode  
3. Multi-function button      4. Microphone  
5. TYPE-C 5V charging port      6. TF-card slot  
7. Previous/Volume-      8. Next /Volume+

**Operating instruction:**

**(1) RX:Receiver Mode**

**1.1 Wireless connection**

When you first use your mobile phone to connect to the Wireless player, your mobile phone needs to be paired with the Wireless player

Step 1: Long press " (W/B) " for 3S to turn on the Wireless player. When mode is set to RX, the indicator light and display screen light up, and the wireless icon flashes

Step 2: Turn on Wireless and search for device name "T68"

Step 3: Click on the device name "T68" to pair, The voice prompts "Wireless connection successful" and the Wireless icon stops flashing, pairing is complete

**(4) Automatic shutdown**

Wireless Audio adapter (RX mode or TX mode) automatically shuts down for 3 minutes without any device connection or other key operation

**(5) Charge**

Charging status, the charging icon above the display screen flashes, and when fully charged, the charging icon above the display screen stops.

**(6) Low voltage alarm**

When the battery level is low, the voice prompt "Low Battery" will automatically shut down when the battery level is depleted.

**Technical parameter:**

Charge limit voltage:5.25 V

Charging current:300mA

Working current:On screen: RX mode: 62mA TX mode: 72mA  
off screen: RX mode: 20mA TX mode: 30mA

Shutdown current:20uA

Charging time:about 45 minutes

Working hours:RX mode: About 9 hours

TX mode: about 6 hours

Battery capacity:300mAh

Wireless version:V5.3

Wireless sound processing:With DSP technology and the Advance Audio Distribution Profile (A2DP) function

Wireless frequency:2.402 to 2.480 GHz

Wireless transmission distance: about 10M

Effective range of Wireless microphone:0.5 to 2 m

**1.2 Music plays**

One end of the audio cable is inserted into the AUX port and the other end is inserted into the loudspeaker, speaker, AUX port on the car or other player. You can click the music of the mobile phone to play the music

1.2.1 Pause/Play: Click " (W/B) " to pause/play a song

1.2.2 Previous Track: Click" ▲ " the previous track

1.2.3 Next Song: Click" ▼ " Next Song

1.2.4 Volume Increase or Decrease: Hold down the" ▲ " key to decrease volume and hold down the" ▼ " key to increase volume

1.2.5 Three consecutive keystrokes of the " (W/B) " key to switch between Wireless/TF card modes

**1.3 Make a hands-free call using a Wireless player**

1.3.1 Redial a call

In the connected state, double-click the " (W/B) " key to dial the last outgoing number.

1.3.2 Answering a Call

In the connected state, when there is an incoming call, press the " (W/B) " key to answer the call, and press the " (W/B) " key again to hang up the call.

1.3.3 Reject the call

When a call comes in but you don't want to answer it, hold down the " (W/B) " button to reject the call

**(2) TX:Transmitter Mode**

2.1 Wireless connection

Step 1: Long press " (W/B) " for 3S to turn on the Wireless player. When the mode is TX, the indicator light and display screen light up, and the wireless icon flashes

Step 2: Turn on your Wireless player, Turn on Wireless Search

Step 3: Wait for the connected device to connect successfully, and the display screen will display the name of the Wireless device to be paired. Press the" ▲ " /" ▼ " key to select the device to be paired, and press " (W/B) " confirm to complete the pairing

**2.2 Music plays**

Insert one end of the audio cable into the audio hole and the other end into the mobile phone, MP3, computer or other audio source device. Click the mobile phone music to play and enjoy the music

2.2.1 Pause/Play: Click " (W/B) " to pause/play a song

2.2.2 Previous: Clicking" ▲ " Invalid

2.2.3 Next Track: Click" ▼ " Invalid

2.2.4 Volume Increase or Decrease: Hold down the" ▲ " key to decrease volume and hold down the" ▼ " key to increase volume

2.2.5 Double click the " (W/B) " key to disconnect the currently connected device and search for pairing again.

2.2.6 Three consecutive keystrokes of the " (W/B) " key to switch between Wireless/TF card modes

**(3) Screen saver function**

When playing music in Wireless Audio adapter(RX mode or TX mode), there is no device connection or other button operation for 3 minutes, and the machine automatically enters a screen saver state

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.