
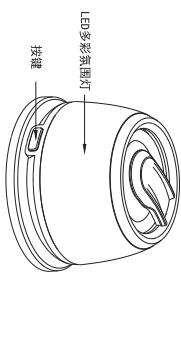


产品使用手册


T34

产品功能介绍

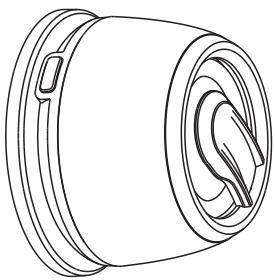

磁吸无线音响



使用产品前请仔细阅读本手册

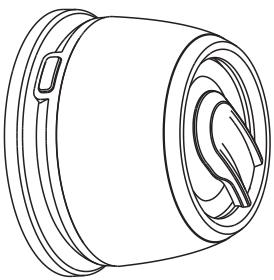

Instructions

T34

Product Function Introduction

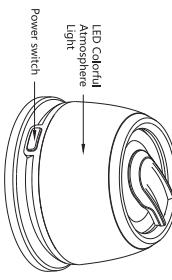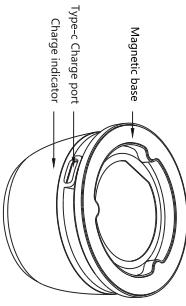

Host usage instructions

1. **Power on/off:** Long press the 2S power on/off button in the off state, and the product will turn on when you hear a prompt sound. Long press the 2S power on/off button in the on state, and the product will turn off when you hear a prompt sound. Short press the power button to pause and switch between playback.

2. **Atmosphere light adjustment:** Double click the button to turn on and off the atmosphere light and switch the atmosphere light mode.

3. **TWS:** When two machines are turned on, pressing three buttons can achieve TWS connection and disconnection functions.

1. **Bluetooth connection between host and device:** When the host and device are in Bluetooth mode, the device searches for the Bluetooth name T34 to connect. After hearing the prompt sound, the Bluetooth connection is successful.

Bluetooth connectivity

1. This product uses lithium battery, overcharge or overdischarge will affect the service life of the product, please charge it in time during use and disconnect the power supply after full charge.

2. This product is not a children's toy, children under the age of 10 should be used under the supervision of a guardian.

Magnetic wireless speaker

Please read this manual carefully before using the product

 
产品使用说明

- 开关机:** 在关机状态下长按2S开关机按键，听到提示音后产品开机。在开机状态下长按2S开关机按键，听到提示音后产品关机。短按开关键可实现暂停和播放/切歌。
- 氛围灯调节:** 双击按键可实现氛围灯开启和关闭以及氛围灯模式切换。
- TWS:** 在两台机器开机状态下，三击按键可实现TWS连接和断开功能。

蓝牙连接

1. **主机和设备蓝牙连接:** 在主机和设备开启蓝牙模式状态下，设备搜索蓝牙名“T34”进行连接。听到提示音后蓝牙连接成功。
2. 本产品非防水设计，严禁将产品丢入水中。
3. 本产品为非防水设计，请勿将产品丢入水中。
4. 请使用符合国家标准的电源适配器充电。

包装清单



产品参数

产品名称: 磁吸无线音响
额定输入: DC 5V 1A
产品单重: 约65g
执行标准: GB4706.27-2008 GB4943.1-2022

产品型号: T34
电池容量: 350mAh
产品尺寸: 57*57*39mm

三包凭证

1. 妥善保管保修卡，以便维修时的凭证。
2. 保修期为购买之日起半年之内。
3. 保修期内，本产品在正常使用的情况下发生故障，经本公司维修后，厂家将提供免费维修。

以下情况不提供免费维修
1. 设备或部件已经超出有效的保修期。
2. 用户未按照说明书的要求，错误的安装、保管以及使用而造成设备故障或损坏。
3. 由非本公司授权的人员拆卸而造成的设备故障或损坏。
4. 因意外因素或人为原因（包括但不限于操作失误、刮伤、撞伤、磕碰、输入不适当电压电流等）导致的设备故障或损坏。
5. 因自然灾害（如地震、火灾等）原因造成的设备故障或损坏。

Certificate of three guarantees

1. Keep the warranty card properly as a proof of maintenance and the warranty period is within half a year from the date of purchase of the product.
2. During the warranty period, if the product fails under normal use, the manufacturer will provide free maintenance if it is verified by the company.

The company's products are subject to a limited warranty within the warranty period, and equipment failure or damage removed. Batteries should be disposed of safely after removal

tips
The battery must be removed when the product is discarded, and the power must be de-energized when the battery is removed. Batteries should be disposed of safely after removal

Packing List
1. The equipment or parts have exceeded the valid warranty period. The user does not follow the requirements of the manual and the installation, storage and use.

2. Equipment is malfunctioned or damaged due to improper installation, storage and use.

3. Equipment failure or damage caused by dismantling by non-authorized institutions or personnel of the Company.

4. Equipment failure or damage caused by unexpected factors or human reasons (including but not limited to operation errors, scratches, handling, bumps, improper input voltage and current, etc.).

5. Equipment failure or damage caused by natural disasters (such as earthquakes, fires, etc.).

