

6 8

9 g

Mounting plate

Connect wire connector and install back panel

Install our lock on top (only if needed)

Install our lock on top If you have a deadbolt lock on top, please move the deadbolt lock to the bottom and install our lock on top to avoid installation issues.

Note: The wire connectors can only be connected in one way.

APP Guide

EXPLOSIVE VIEW

Keyway

Handle

FINGERPRINTS To add a fingerprint follow these instructions:


幹 0 券


6 8 Z


9 g ₇


1 5 3


Battery cover

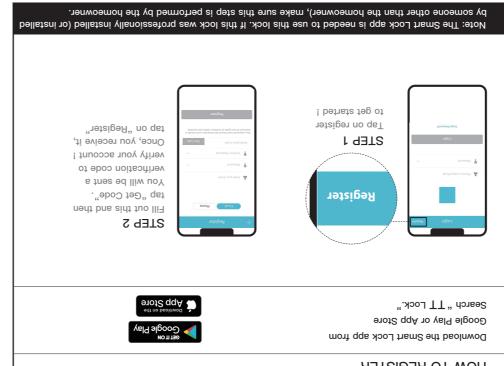


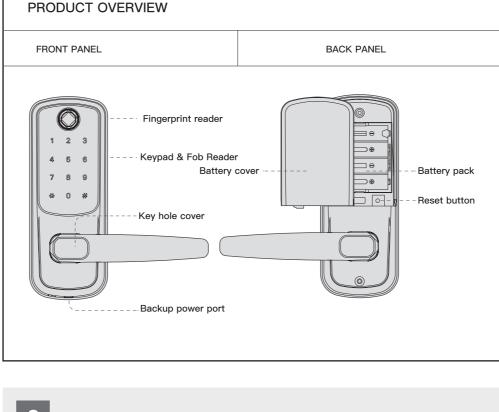


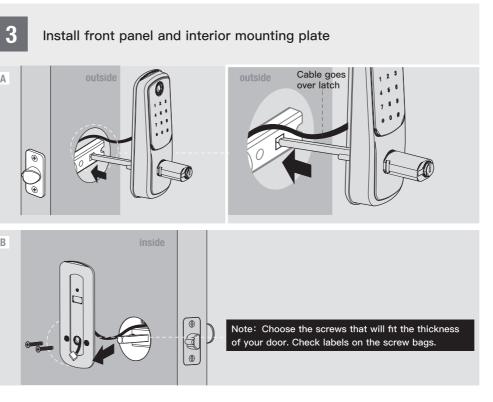


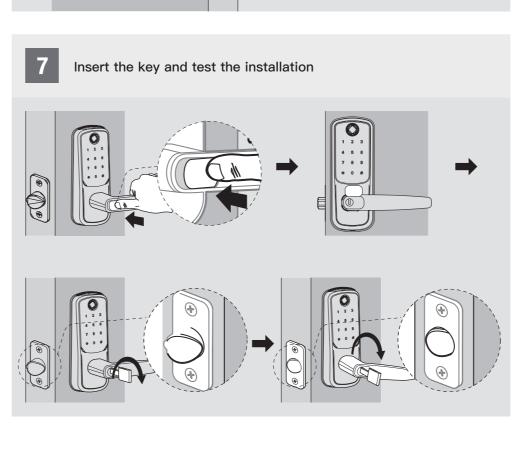


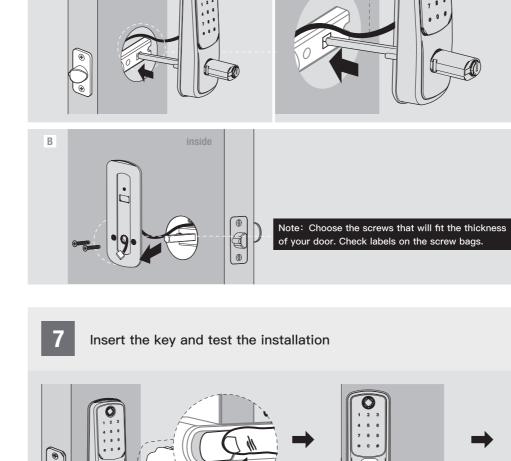


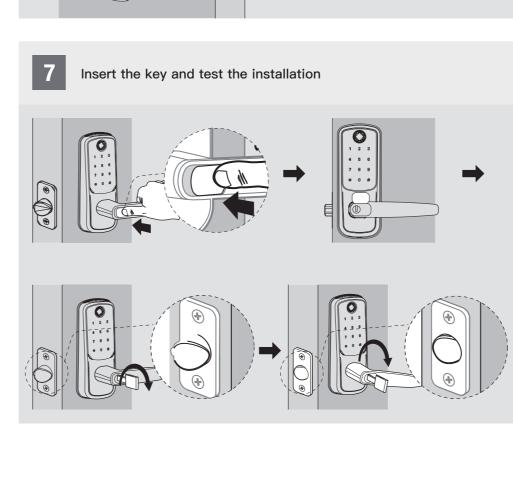

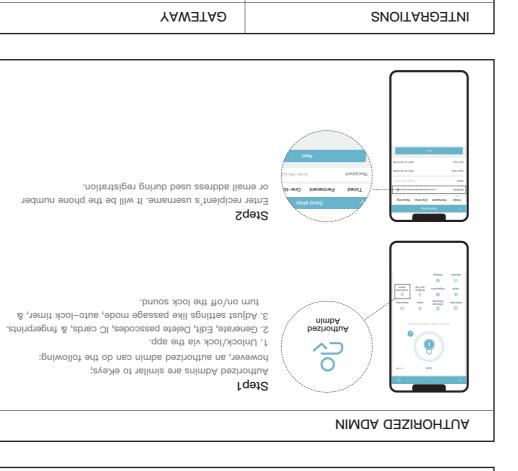

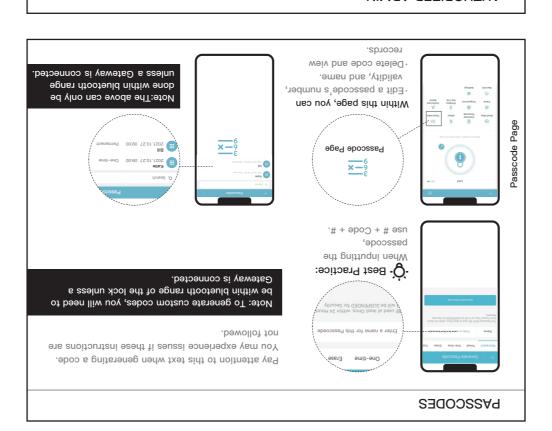

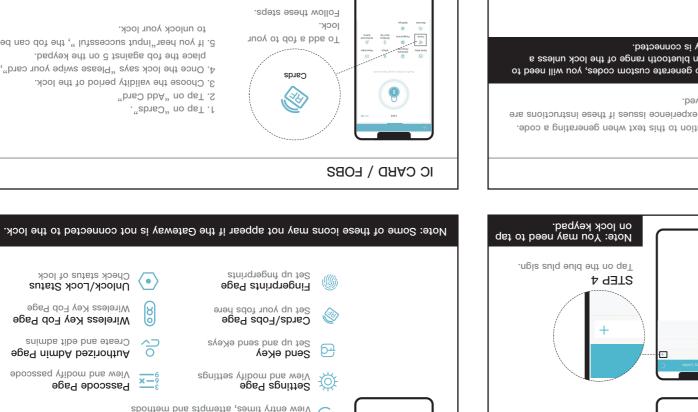


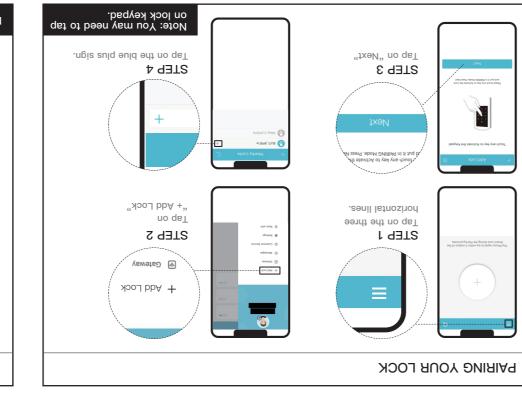



Exterior Assembly


Interior Assembly


Screws

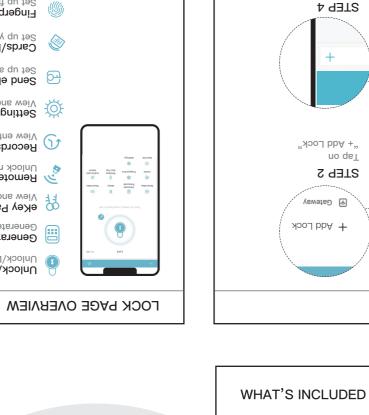

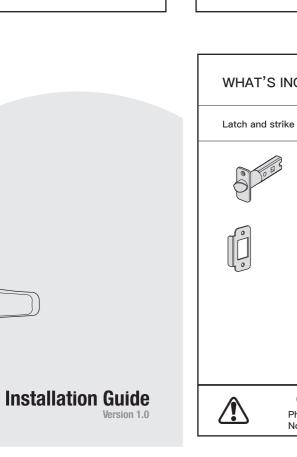

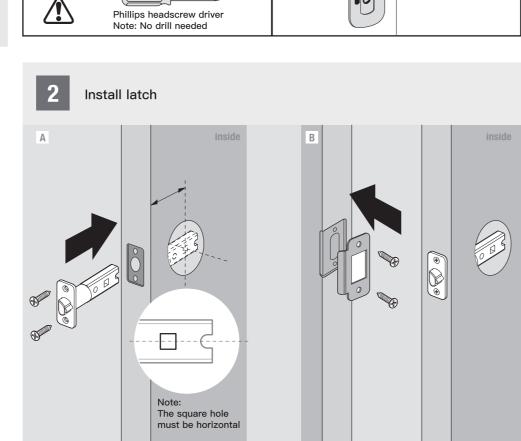

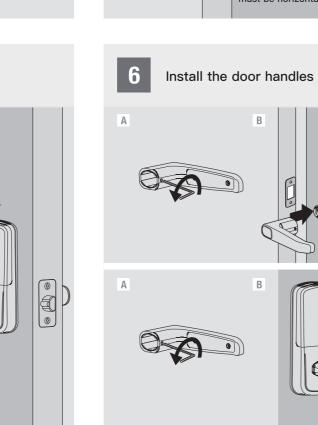

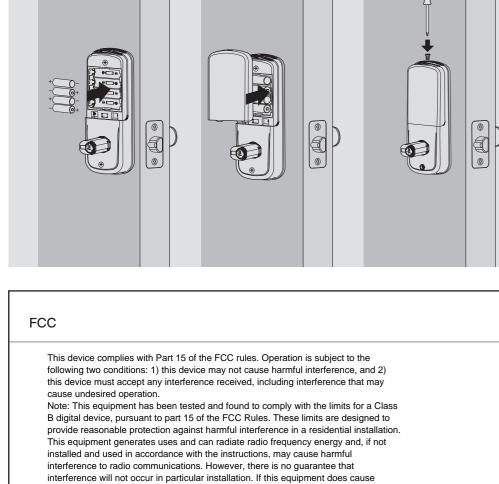

harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the

interference by one or more of the following measures:

--Reorient or relocate the receiving antenna.

receiver is connected.

--Increase the separation between the equipment and receiver. --Connect the equipment into an outlet on a circuit different from that to which the -- Consult the dealer or an experienced radio/TV technician for help. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. FCC Radiation Exposure Statement This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This device can operate without distance restriction between the radiator and user body.

 Check battery level remotely. of our app for free! Access the features of the webportal version your guests. \bullet Generate, edit, or delete custom codes for Check access logs whenever you need them. Remote unlock/lock. Receive unlock notifications wherever you are. With the Gateway connected. sxəlA nozsmA 👢 COMPATIBLE WITH Google Assistant

.si that ob ot wod no

different phones?
A: Refer to eKeys or Authorized Admin section

of the keypad to power it up to be able to enter and change the batteries.

A: Use the provided physical keys to open or plug in a powerbank into the slot on the underside

G: The batteries died before I could replace them. What can I do?

A: Unlock the lock once via the app or wait 5

many times and my lock will not accept any new inputs.

Q: I entered a code or fingerprint incorrectly too

Select Passage Mode

Step2

PASSAGE MODE & AUTO-LOCK

Follow these steps.

To add a fob to your

Cards

Fingerprints Page Set up fingerprints

Cards/Fobs Page
Set up your fobs here

Set up and send ekeys

Settings Page
View and modify settings

Records Page View entry times

🥳 еКеу Раде

B If the latch holes are centered in the door hole, no adjustment

60mm(2-3/8in)

70mm(2-3/4in)

is required. Proceed to step 2. If the latch holes are NOT

centered, adjust latch. See "Latch Adjustment."

60mm(2-3/8in)

Unlock/Lock

View entry times, attempts and methods

Generate 6 different types of passcodes

Unlock/Lock using phone's bluetooth

View and modify current eKeys

Generate Passcode Page

Remote Unlock remotely if Sifely Gateway is connected nearby

How long have you had our products for?

OSetting up the app and pairing the product.

the following information for quicker resolution.

during a set schedule.

On these Day

is how to adjust these settings related to auto-lock.

to unlock your lock.

"S. Tap on "Add Card"

1. Tap on "Cards".

5. If you hear"input successful ", the fob can be used

Unlock/Lock Status

Check status of lock

Wireless Key Fob Page

Wireless Key Fob Page

Oreate and edit admins

Create and edit admins

Passcode Page
View and modify passcode

123

4 5 6

789

% O ♯

A Hold the latch in front of the

door hole, with the latch face flush against the door edge.

C Latch adjustment (only if needed)

0 0

Install 4 AA batteries and battery cover

Adjust the backset of latch (if needed)

4. Once the lock says "Please swipe your card",

place the fob against 5 on the keypad.

3. Choose the validity period of the lock.

with Passage Mode and Auto-lock timer. Outlined below

Auto-lock will automatically lock the lock when it has be

opened after 5 second by default. This can be adjusted

Passage Mode disables auto-lock

Not working like it should? Contact us with

oAlready set up app with the product.

Where are you in the setup process?

olnstalling the product.

Which product you do have?


ДΑЯ

Q: How do I share access of the lock on 2

A: Press and hold # to lock the lock.


G: How can I manually lock the lock?




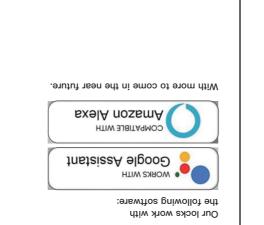





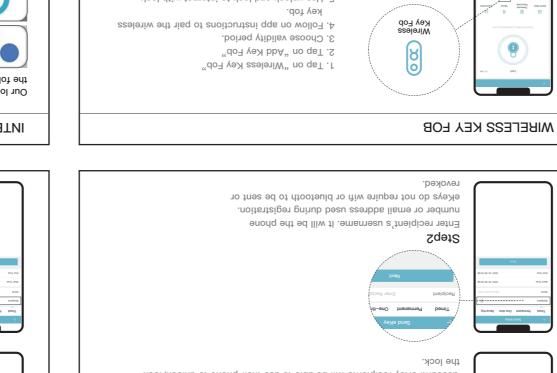


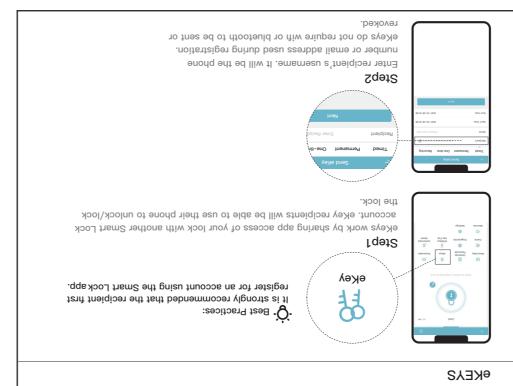



Follow these steps.


with "Wireless Key Fob"

Do something similar

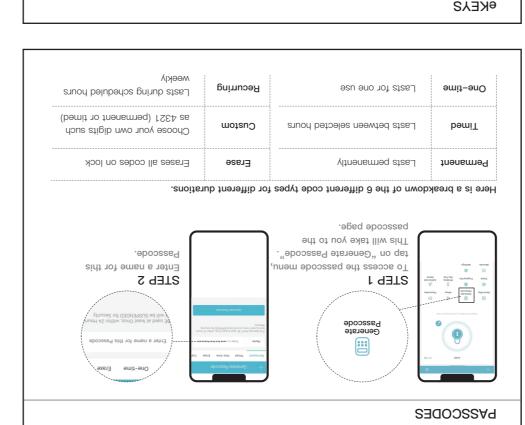

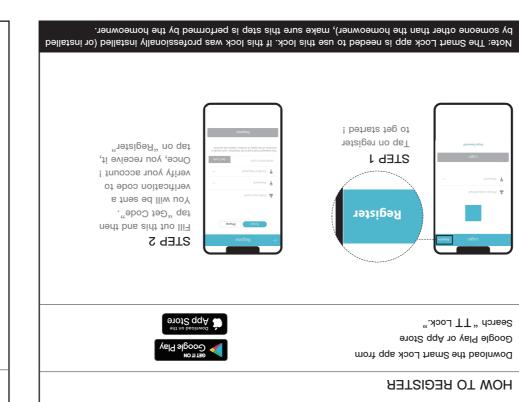

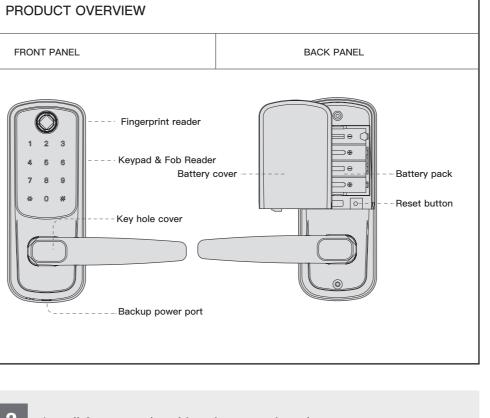

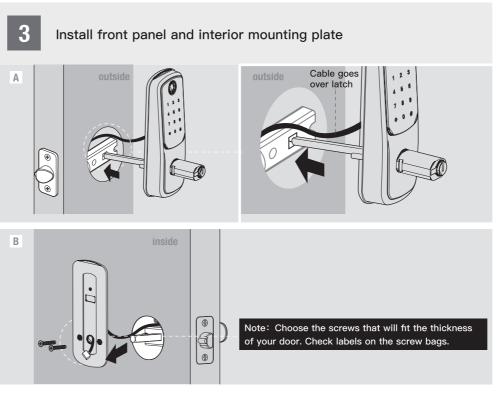

刘总说明书最后确认文件0K9月12日 信城潘冬清 外清 信城潘 文件名: :: 計 门