

# GRIP EXPRESS FILM CUTTER

 


Grip-Express-Cut-G2

## Standard Accessories



## Appearance and function

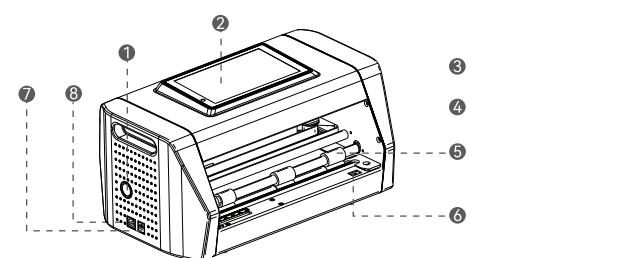


- 1 Power button: Turn on the device
- 2 LCD Screen
- 3 Blade holder clamp: fixed blade holder
- 4 Blade holder: Cutting protector sheet film
- 5 Axis: Fix the protector sheet film
- 6 Sensor: Auto feed sheet film
- 7 Power connector
- 8 USB port interface

- 9 Press the top to replace the blade.
- 10 Blade adjustment: Rotate to adjust gear to control the length of the blade tip.
- 11 Blade holde
- 12 Blade tip: Adjust the exposure length accordingly to the material thickness.  
"+" direction means to lengthen blade tip;  
"-" direction means to shorten blade tip.


## Instructions

 1. Power on  
①Connect the power supply with the adaptor and insert to the socket. Use 100-240V AC power supply to make the device operate normally.  
②Insert the other end of the adaptor port into the power interface.  
③Press the power button to power on the cutter.

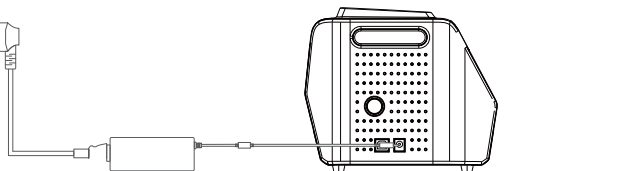



2. Install the blade holder & blade  
①Open the storage box  
②Pull the paddle of holder clamp, adjust the length of the blade tip, and put the blade holder inside (Gear 5 for the blade holder is recommended).  
③Push back the paddle and fix the blade holder.  
④Cover the storage box.

 3. Place materials  
①Prepare a sheet film to be cut, confirm that the protective film is flat and the film layer is complete without bending, folding or missing layers  
②Place the sheet film to the area shown.  
③The machine will automatically pick up the film paper.  
④If need to exchange another sheet film, please click the power on button, the protector film will feed out.






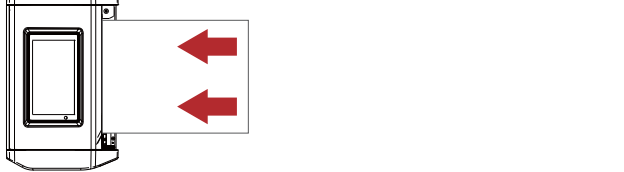


Refer to the dotted line for the placement of sheet film  
Do not put your hands in the cutting area in case of harm

  4. WiFi Setting  
Click [Setting] on the homepage, enter the setting interface, click [WiFi Settings], connect to WiFi, enter the password, and wait for the machine to successfully connect to the WiFi network.





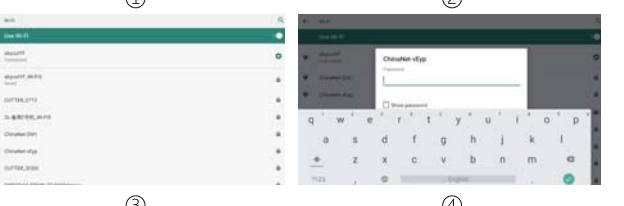
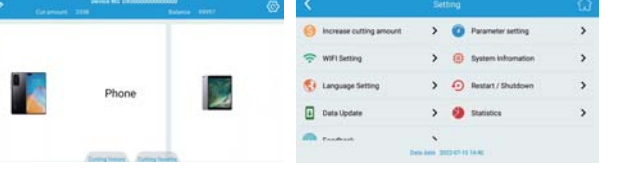


      5. Start cutting  
Select the brand and model of the device to be cut on the homepage and click [Start Cutting] to start cutting.

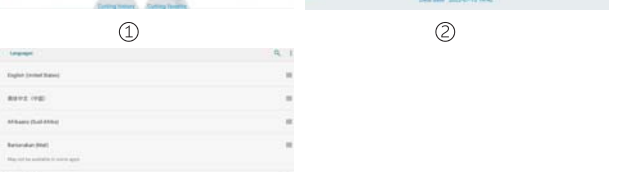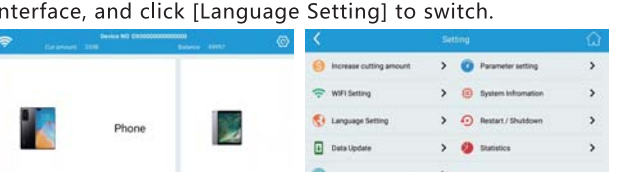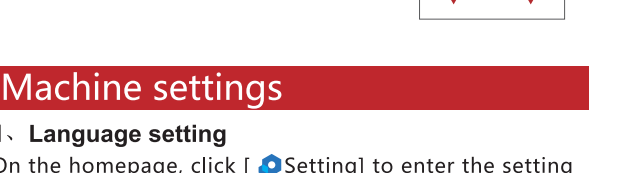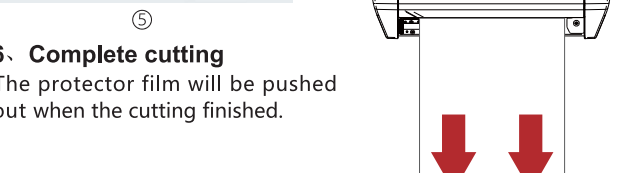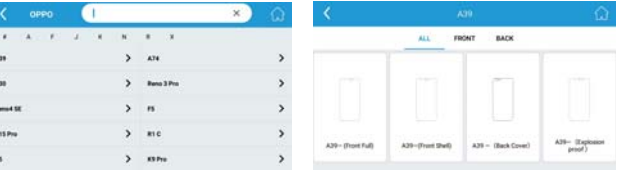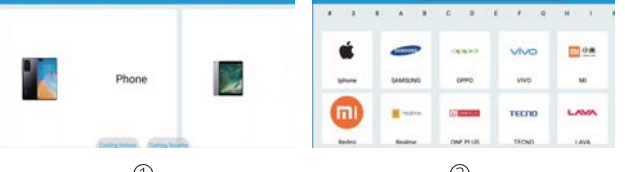

## 2. Blade force/Speed/Automatic

    
 
 
- ①On the home page, click [Setting] to enter the setting interface, click [Force/Speed/Automatic], please adjust according to actual usage.

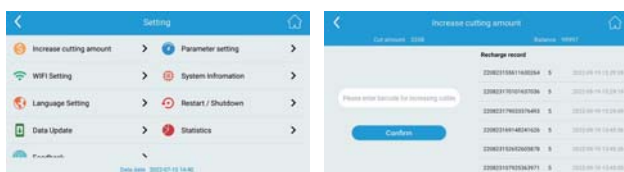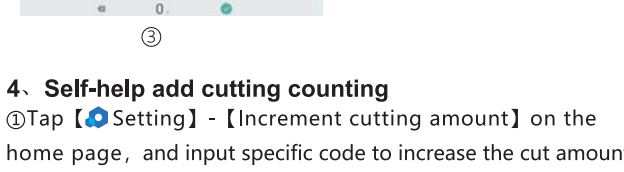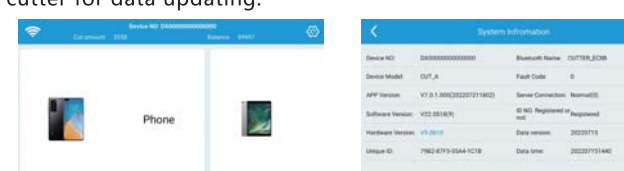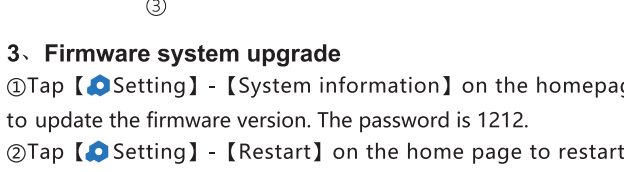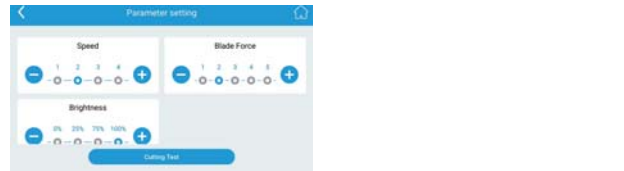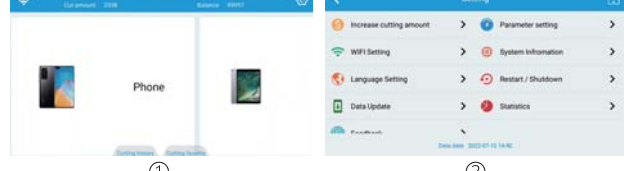

## Bluetooth APP Control System








1. APP download link please check with seller.

   - ①Power on the cutter 2.Run the mobile phone APP application, confirm that the mobile phone's Bluetooth is turned on, find the Bluetooth name of the machine on the page, and then click it. Enter the pairing code 1234 to connect to Bluetooth, and then wait for the machine to successfully connect to Bluetooth.

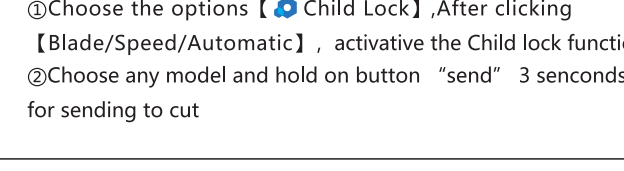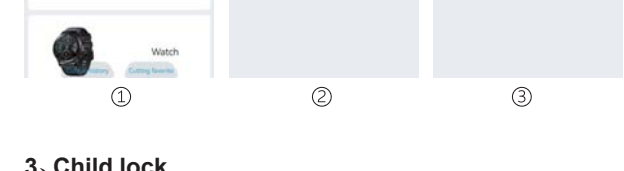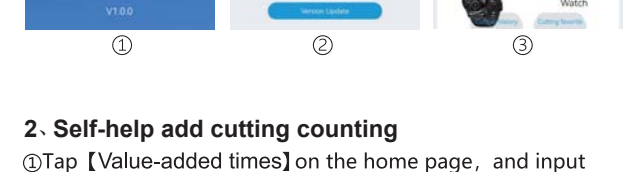







## 4. Mirror function

       - ①Choose the options [Mirror cutting] ,After clicking [Blade/Speed/Automatic] , activate the Mirror cutting function.

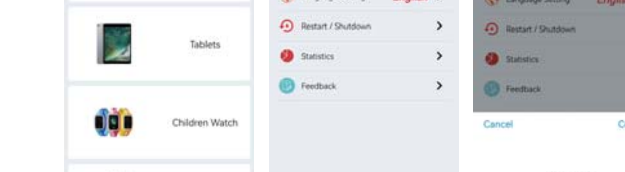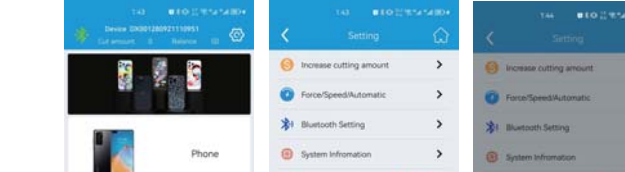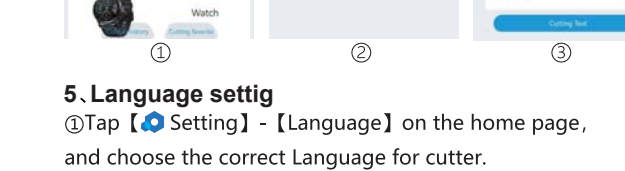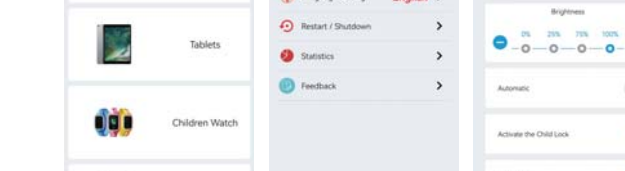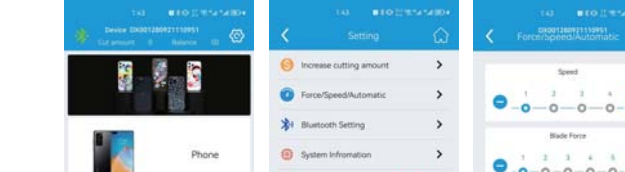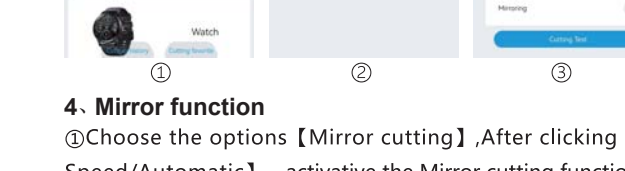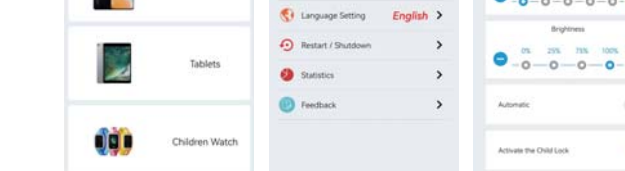




## 6. Blade force/Speed/Automatic

      - ①On the home page, click [Setting] to enter the setting interface, click [Force/Speed/Automatic], please adjust according to actual usage. (Speed 2, Force 3) .If the auto feed function is not required, turn off automatic.

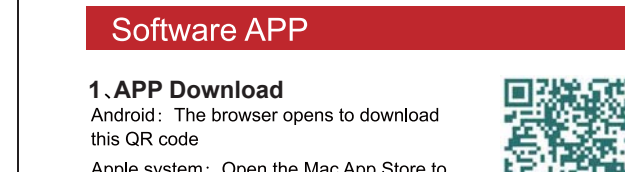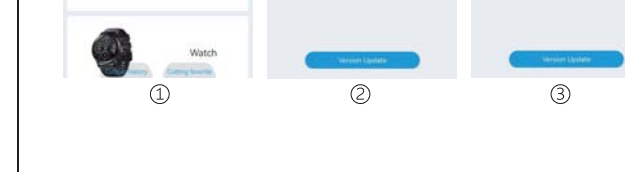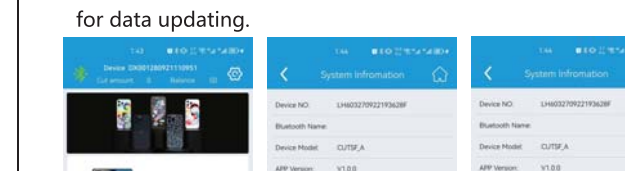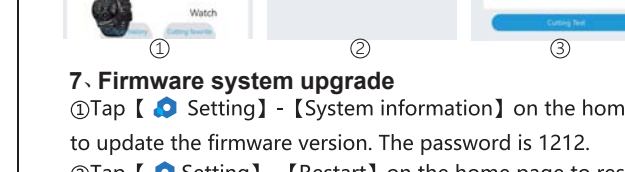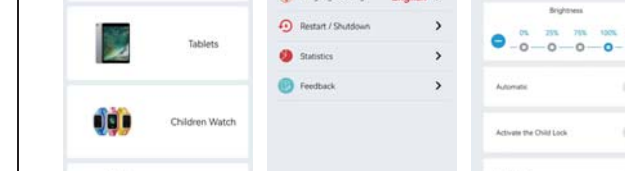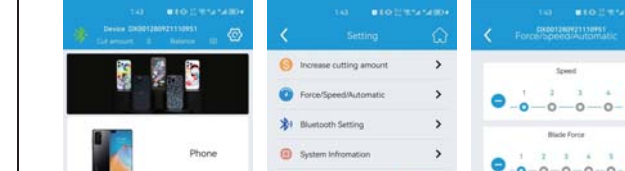






## 2. Connect to the APP

   - ①Turn on Bluetooth, search for the device, and find the machine device name
- ②Enter the password 1234 or 0000 to connect
- ③The connection is successful

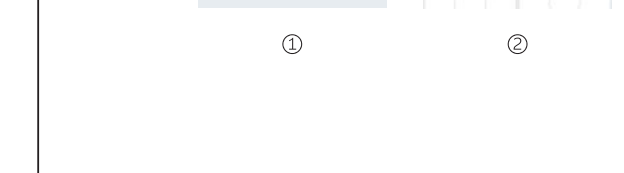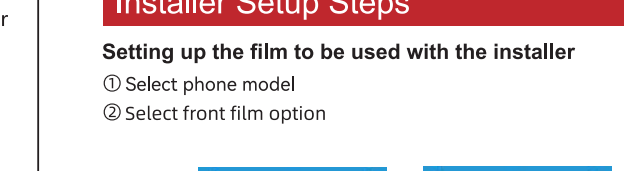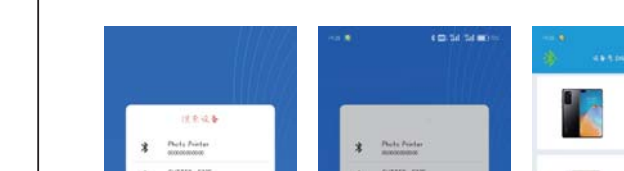

## 3. Select "Non-marking Film"

     - ④ Click "Start Cutting"

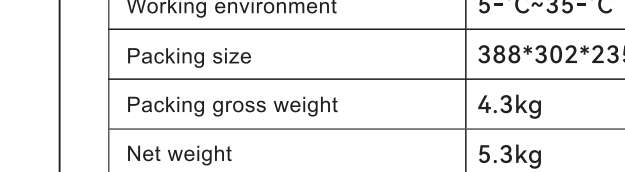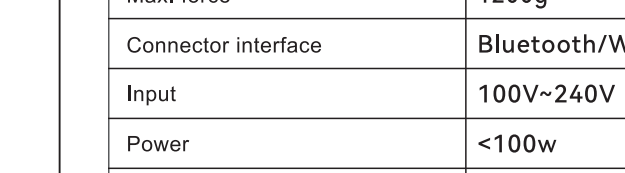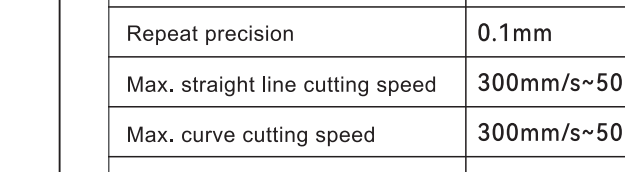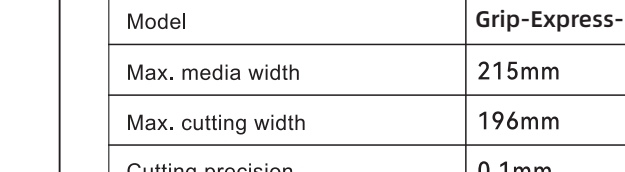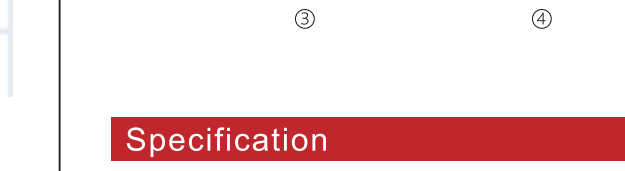

## Safety information

- Never touch the tip of the blade with your fingers. This will hurt your fingers and passivate the blade.

- Never use the cutter when thunderstorm to avoid any damage.

- Fluids or metal objects falling into the cutter may cause fire disaster.

- Don't damage or replace the original supply power randomly, never make the power cable excessive bending forced to pull and bundled or under heavy object, witch may damage the power supply and lead electric shock or fire disaster.

## Warranty card

 
Model NO		Mpid	
Product NO			
Name		Address	
Zip code		Phone	
Date		Invoiceno	
Agent			
Date			

## Warranty description

Date	Condition	Processed	Receiver	Repair

## Warranty notice

- ①The warranty period is valid for one year from the date of invoice.
- ②The warranty equipment must be non-artificially damaged and not repaired by personnel not authorized by the company

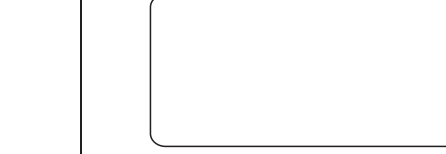

## Specification

Model	Grip-Express-Cut-G2
Max. media width	215mm
Max. cutting width	196mm
Cutting precision	0.1mm
Repeat precision	0.1mm
Max. straight line cutting speed	300mm/s~500mm/s
Max. curve cutting speed	300mm/s~500mm/s
Max. force	1200g
Connector interface	Bluetooth/WIFI
Input	100V~240V
Power	<100w
Working environment	5~C~35~C
Packing size	388*302*235mm
Packing gross weight	4.3kg
Net weight	5.3kg

## Software APP

1. APP Download

- Android: The browser opens to download this QR code

- Apple system: Open the Mac App Store to buy and download apps

