



## USER MANUAL

\*Google, Android, Google Play and other marks are trademarks of Google LLC.

# Customer Services & Technical Support

Thank you for purchasing our product!

Please believe in our perfect after-sales service.  
If there is any product problem, please contact us in time.

- > **Item NOT As Describe?**
- > **Item Damage or Defective?**
- > **Missing Items or accessories?**
- > **Problem with installation?**
- > **Any issues what so ever.....**

**Contact us before returning or bad review the item we will help you solve any issues.**


# Maintenances

- Please keep Device dry. Do not let equipment, battery charger contact water and vapor, or use wet hand to operate equipment or charger, Lest cause short-circuit, corrosion caused by equipment failure, and personnel.
- Don't make equipment, battery and charger strongly impact or vibration. Lest cause equipment, battery and charger fault, fire or explosion.
- Don't put this equipment, battery and charger in the too high or too low temperature region. Otherwise you may cause equipment, battery and charger fault, fire or explosion.
- Don't hit, throw, acupuncture the Device, and avoid drop, extrusion, bending Device.
- Do not use unauthorized equipment and accessories, as the use of such items falls outside the scope of the company's warranty.



# Operational Guidance

## Charge the tablet


Please use a 5V/2A charge to charge the tablet.

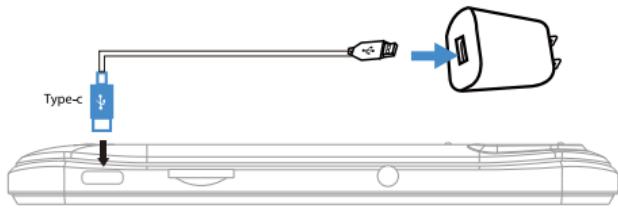


## Description

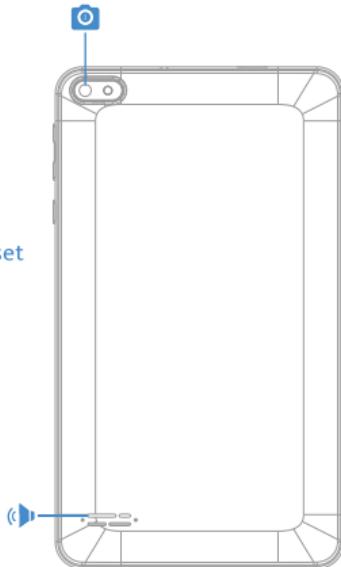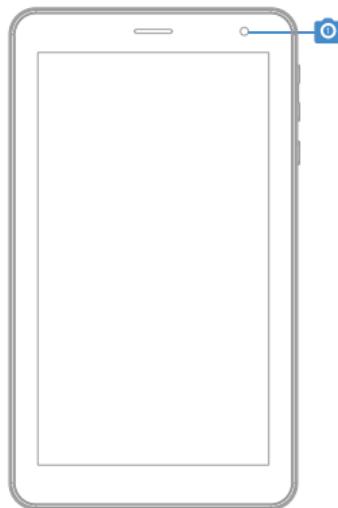



## Power on and boot into Android

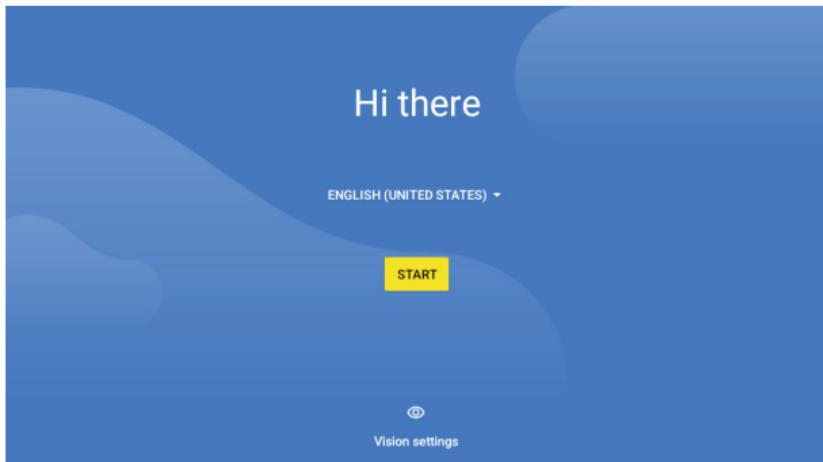


## Choose your language

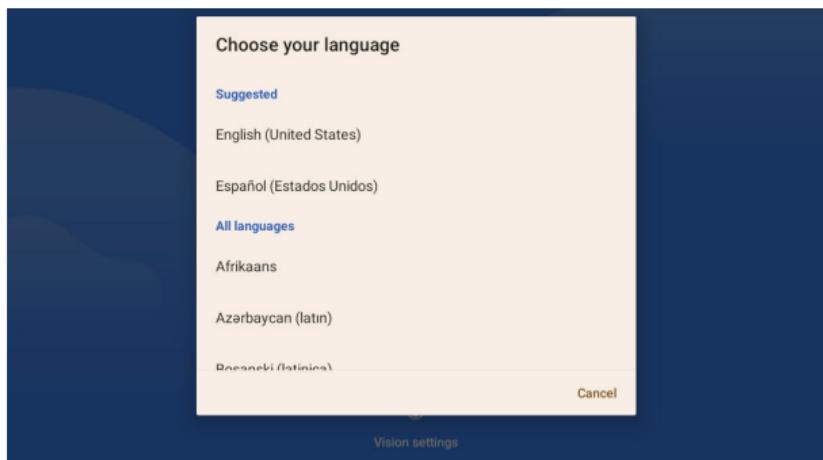

## Quickly enter the Home Screen (skip settings)

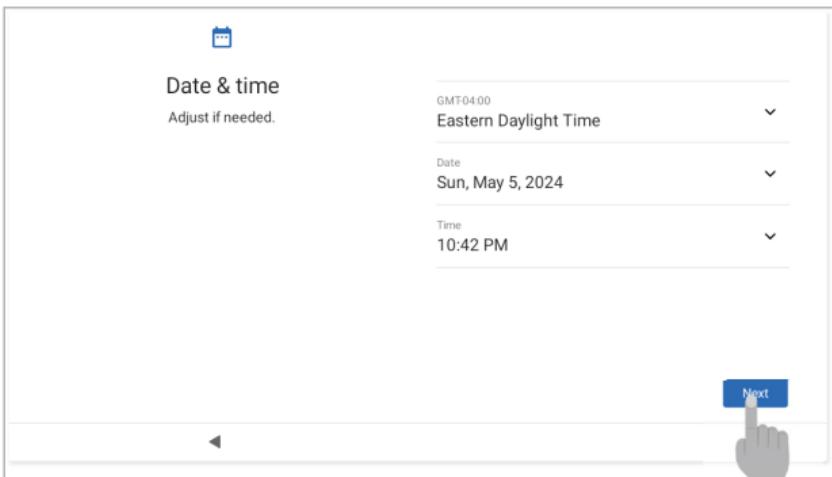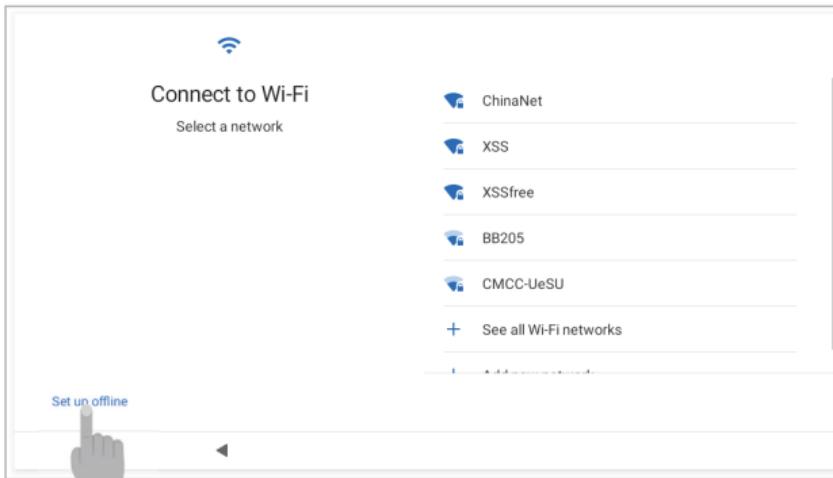

# Quickly enter the Home Screen (skip settings)

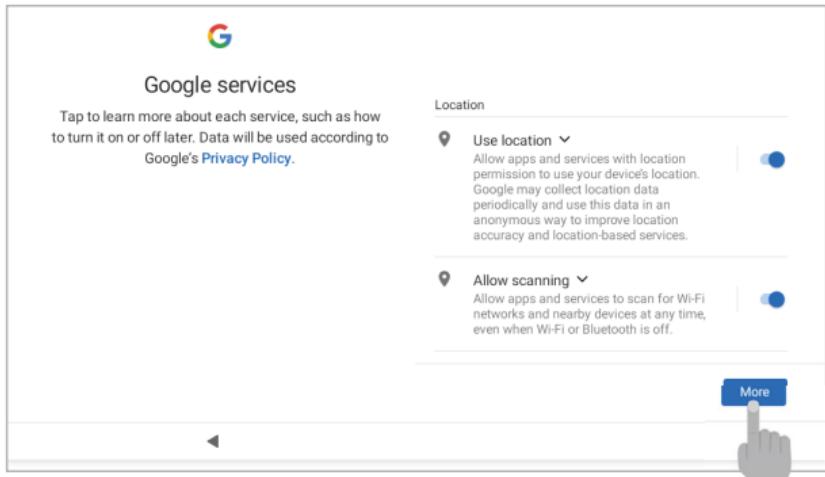

Google services

Tap to learn more about each service, such as how to turn it on or off later. Data will be used according to Google's [Privacy Policy](#).

Location

Use location


Allow apps and services with location permission to use your device's location. Google may collect location data periodically and use this data in an anonymous way to improve location accuracy and location-based services.

Allow scanning

Allow apps and services to scan for Wi-Fi networks and nearby devices at any time, even when Wi-Fi or Bluetooth is off.

**More**

A hand icon is pointing to the 'More' button at the bottom right of the screen.

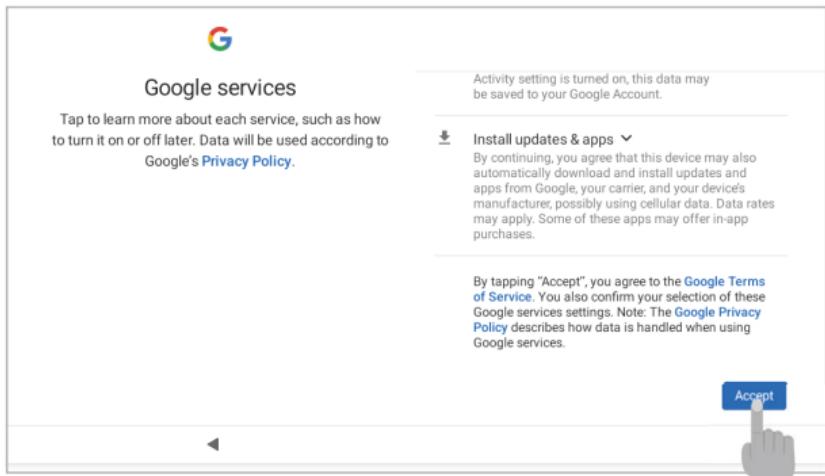

Google services

Tap to learn more about each service, such as how to turn it on or off later. Data will be used according to Google's [Privacy Policy](#).

Activity setting is turned on, this data may be saved to your Google Account.

Install updates & apps

By continuing, you agree that this device may also automatically download and install updates and apps from Google, your carrier, and your device's manufacturer, possibly using cellular data. Data rates may apply. Some of these apps may offer in-app purchases.

By tapping "Accept", you agree to the [Google Terms of Service](#). You also confirm your selection of these Google services settings. Note: The [Google Privacy Policy](#) describes how data is handled when using Google services.

**Accept**


A hand icon is pointing to the 'Accept' button at the bottom right of the screen.

## Factory reset operation


Step: System-Reset options-Erase all data  
(factory reset)

## Setting the Display Language and Input Method

1. On your Android device, tap Settings.
2. Tap System → Languages & input → Languages.
3. Tap Add a language and choose the language that you want to use.
4. Drag your language to the top of the list.

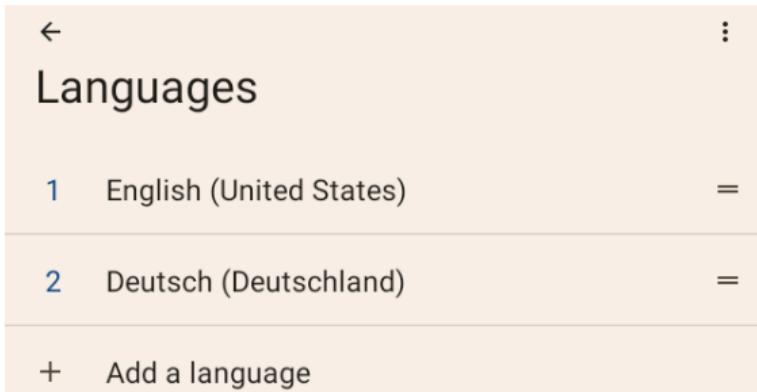

# Micro SD Card Installation

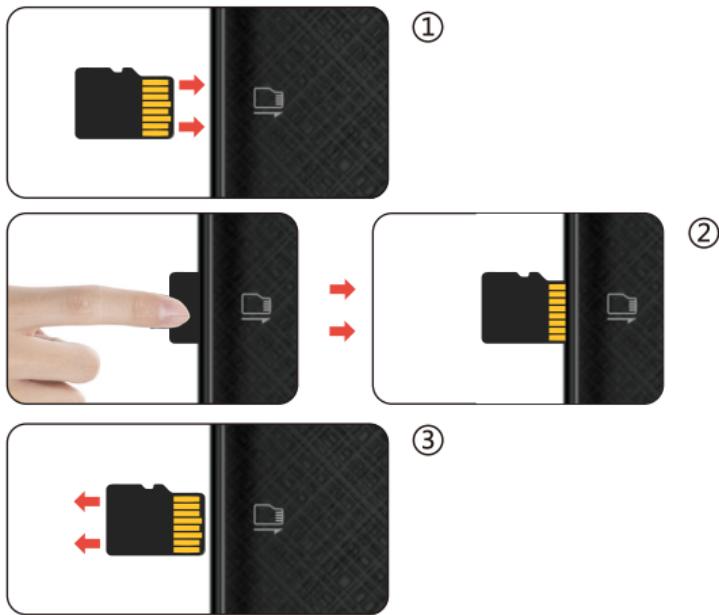


1. Place the microSD card with the metal contacts facing up and the tablet screen facing down. Then align the card slot and gently press the microSD card into the slot from left to right to secure it.
2. Use your fingernail to press slightly firmly along the edge of the microSD card, and the card will pop out.
3. After the microSD card is ejected, it can be pulled out along its edge.

# Connection with PC

## USB Connect

Use USB cable to connect device to PC, device will pop up the USB connection window, click Turn on USB storage to connect to PC.

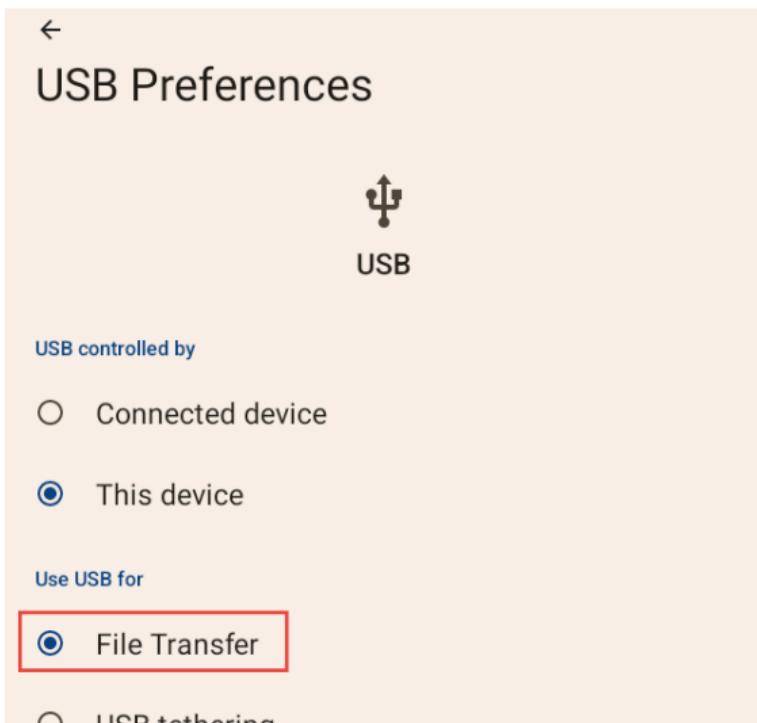

In load mode, you can copy or delete files on the device and on the memory card.

## OTG Use


- Supports FAT32 format for mobile memory devices, such as USB disks.
- Offers plug-and-play functionality.
- Use an OTG cable to connect the MID USB OTG PORT to other devices.


## iWawa



## login page

Tap the iWawa

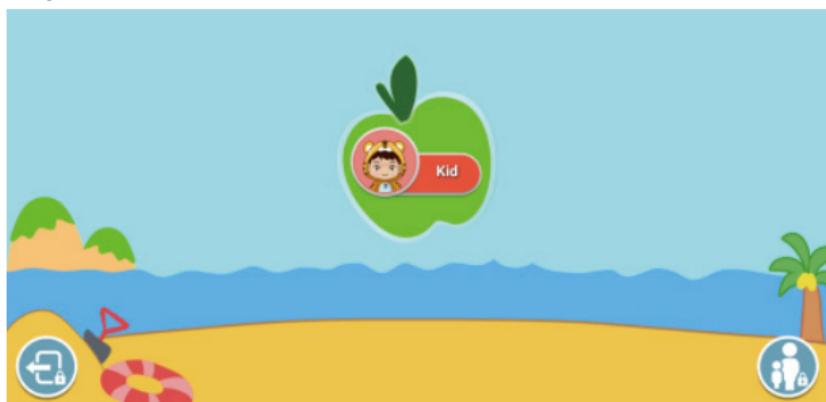

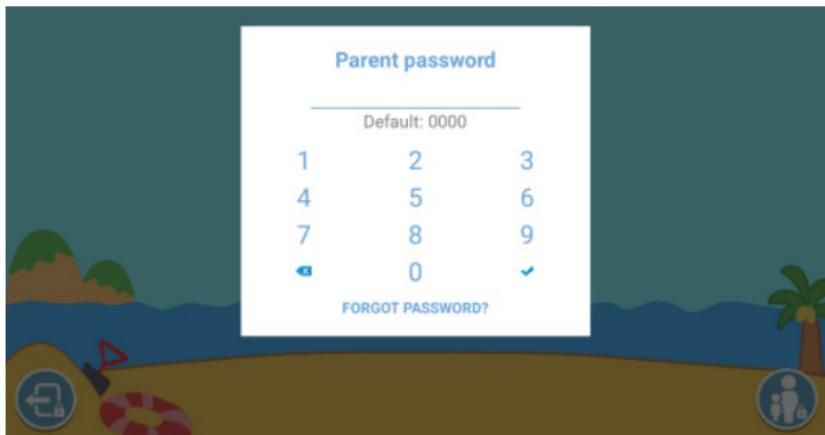

	exit icon, You need to enter a password to exit, the default password is 0000.
	enter Parental Control settings icon, You need to enter a password to exit, the default password is 0000.
	Kid's account, You can add multiple accounts in Parental Control settings.

# Kid Desktop



# Troubleshooting

Q1. The tablet doesn't power on.

- ▲ Reboot your tablet after charging for 30 minutes;
- ▲ Press the power button to check if the tablet is in the Sleep Mode;
- ▲ Press and hold the power button for 7-8s to turn off the tablet, then reboot it;
- ▲ Press the Reset button with a pin to reboot the tablet.

Q2. The tablet doesn't charge.

- ▲ Make sure the USB cable is properly plugged into the charging port;
- ▲ Try another compatible USB cable and adapter.

Q3. Error message occurs during the operation.

- ▲ Uninstall the App with the error message, then download and install again;
- ▲ Press the Reset button with a pin to reboot the tablet,

Q4. The tablet cannot be detected by the computer.

- ▲ Make sure the tablet is powered on;
- ▲ Try another USB cable;
- ▲ Try another USB port on the computer;

# Troubleshooting

▲Instead of Charge this device,choose Transfer files or Transfer photos (PTP) when connecting the tablet to the computer.

Q5. The tablet cannot connect to the Wi-Fi.

▲Make sure the Wi-Fi in your tablet is ON;

▲Make sure you input the correct password when connecting the Wi-Fi;

▲Restart the router

▲Make sure there is no filter setting or device connection limitation in the setting of the router

▲Forget the current Wi-Fi,reset the router and connect the Wi-Fi again.

Q6. The storage space of the tablet is not enough.

▲Delete the Apps you don't use;

▲Clear the cache of the Apps regularly;"Install an Micro SD card to expand the storage.

# FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Frequency Range: 2400MHz-2483.5MHz

— The symbol indicates DC voltage



RECYCLING

This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment. User has the choice to give his product to a competent recycling organization. This product can be used across EU member states.

# NOTES:



- 1.High Sound Pressure
- 2.Hearing Damage Risk
- 3.Do not listen at high volume levels for long periods.

## FCC Radiation Exposure Statement:

This device meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health. The SAR limit of USA (FCC) is 1.6 W/kg averaged. Device types: Kids Tablet (FCC ID: 2BNIH-Q1K) has also been tested against this SAR limit. SAR information can be viewed on - line at <http://www.fcc.gov/oet/ea/fccid/>. Please use the device FCC ID number for search. This device was tested simulation typical 0mm to body. To maintain compliance with FCC RF exposure requirements, use accessories should maintain a separation distance between the user's bodies mentioned above, the use of holsters and similar accessories should not contain metallic components in its assembly, the use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

## FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.