

X25 WiFi Car Cam Specification

BASIC EQUIPMENT

CPU	SV830C
Backup Camera	Support
Display	3" HD IPS Screen
DDRM	512M
SPINOR Flash	8M Bytes
Audio Recording	Yes
G-Sensor	Yes
GPS	Yes(Optional)
WIFI	2.4G
RTC	Yes, Build-in System Clock
Memory Card	SDHC Class10(8GB~128GB) C10 or Above
Key	7 Key
Compressed format	H.264
File format	Video format: TS, image format: JPG
Voice control	Yes(optional)
Working Temperature	-20~65°C(Storage Temperature:-30~70°C)
Working electric current	5V 900mA(requires vehicle charging of 5V 1.5A)
RTC Quiescent Current	2uA(full charged button cell works up to 1 month)
Car Cam Quiescent Current	6mA

Main Functions Brief Introduction

• Camera Mode

Once inserting TF card, car cam enters camera mode automatically and starts recording, the icon  on the top left corner flashes
short press "up key" to switch the front and rear video window, long press the up key to turn on/off audio recording
short press "menu key" for system setting, and long press no function
short press "low key" to record and capture, long press no function
short press "OK key" to start/stop recording, long press no function
short press "mode key" for playback mode, long press no function
short press "lock key" to lock video recording, long press no function

• Playback Mode

After turn on the player, enter the video mode to record automatically, short press the mode button to enter the playback mode
Short press "up key" for upper file, short press "low key" for lower file, short press "OK key" for playing, short press "mode key" to return to previous interface. In list interface, short press "menu key" to delete file, short press "lock key" to lock/unlock file; while playing file, short press "Ok key" to

pause/play, short press "up/low key" to switch files playing

• System Setting

Video recording automatically after powering on, short press "menu key" for system setting
1) Loop Recording: 1m 2ms 3ms
2) Light Source Frequency: 50Hz, 60Hz
3) G-Sensor Sensitivity: Shut down/low/medium/high
4) Parking Monitor: Shut down/low/medium/high
5) Time-elapsed Video Recording: Shut down 1FPS/S, 2FPS/S, 5FPS/S
6) Time-elapsed video recording time duration: 12hs 24s 48s 72s
7) Audio Recording: Turn on/off
8) Video Watermark: turn on/off
9) WDR: Turn on/off
10) Infrared supplement light: Switch off/Switch on/Auto
11) Rear Camera Direction: Switch off/flipping 180 degree/previewing image/flipping 180+previewing image
12) Brightness Setting: low/medium/high/highest
13) Volume Setting: Turn off/low/medium/high/highest
14) Key sound: Turn off/on
15) Display Sleep: Turn off/1m/3ms

16) Language Setting: English, Simplified Chinese, Traditional Chinese, Japanese, Thai, Language, Russian, Vietnamese
17) WiFi information: Turn off/on the display of Account No and Password
18) Voice Control: Turn off/on and Display of voice control command
19) Time Setting: RTC System Time
20) Disk formatting: Confirm/Cancel
21) Edition Information: System Edition No
22) Restore factory Setting: Confirm/Cancel

• Installed customized voltage-reduced cable is necessary for displaying the time-elapsed video recording setting

Notice

1. Notice: do not insert or pull out TF card while working in case of damage of the dash camera
2. Notice the TF card direction, if insert the TF card upside down, the card may be damaged
3. After inserting TF card, the player will take new TF card as default storage device, and the files in previous TF card can't be read
1. If the TF card can not be compatible with the player, please re-insert or change another TF card and try again
2. TF card capacity: Maximum up to 128GB
3. Temperature range: -20~70°C
If TF card is full or error message appears, can not record video

1. Check whether the G-Sensor sensitivity setting is "high", if so, the bumps and shakes of the car during driving will cause the files to be locked. The locked files cannot be overwritten, too much locked files will lead to the phenomenon of "full card" and no video-recording

2. Formatting the new TF card is necessary for the first time usage

3. If appears reminder of error message or "no card" after inserting TF card, suggest to pull out the card and insert again and format the TF card, if still

cannot work, format the card on your computer, if the same problem, the card is damaged.

• App operation

① Open app and follow instructions to add "dash cam", will enter the preview interface after complement

② Setting Interface

③ Playback Interface

Clicking "preview image" enters "playing mode" Long press preview image allows to select "download or delete files in bulk"

Notice: the resolution of un-downloaded files is low, suggest to download firstly then play the files

• Others

Cannot connect WiFi: make sure the WiFi is turned on and other mobile is not connected (one dash cam can only connect with one mobile)

Cannot record video: check whether the TF card is full or damaged, please format the TF card or

change another one to exclude

2. TF card capacity: Maximum up to 128GB

3. Temperature range: -20~70°C
If TF card is full or error message appears, can not record video

Image quality note

Check whether the G-Sensor sensitivity setting is "high", if so, the bumps and shakes of the car during driving will cause the files to be locked. The locked files cannot be overwritten, too much locked files will lead to the phenomenon of "full card" and no video-recording

1. Check whether the G-Sensor sensitivity setting is "high", if so, the bumps and shakes of the car during driving will cause the files to be locked. The locked files cannot be overwritten, too much locked files will lead to the phenomenon of "full card" and no video-recording

2. Formatting the new TF card is necessary for the first time usage

3. If appears reminder of error message or "no card" after inserting TF card, suggest to pull out the card and insert again and format the TF card, if still

cannot work, format the card on your computer, if the same problem, the card is damaged.

• WiFi mobile connection

Check and turn on the WiFi on the device setting, Search WiFi name: HX830C-XXXXXX and put in password 12345678 to connect

Notice: one dash cam only can connect one mobile at the same time

• WiFi mobile connection

Check and turn on the WiFi on the device setting, Search WiFi name: HX830C-XXXXXX and put in password 12345678 to connect

1. Check whether the G-Sensor sensitivity setting is "high", if so, the bumps and shakes of the car during driving will cause the files to be locked. The locked files cannot be overwritten, too much locked files will lead to the phenomenon of "full card" and no video-recording

2. Formatting the new TF card is necessary for the first time usage

3. If appears reminder of error message or "no card" after inserting TF card, suggest to pull out the card and insert again and format the TF card, if still

cannot work, format the card on your computer, if the same problem, the card is damaged.

• WiFi mobile connection

Check and turn on the WiFi on the device setting, Search WiFi name: HX830C-XXXXXX and put in password 12345678 to connect

Notice: one dash cam only can connect one mobile at the same time

• WiFi mobile connection

Check and turn on the WiFi on the device setting, Search WiFi name: HX830C-XXXXXX and put in password 12345678 to connect

Notice: one dash cam only can connect one mobile at the same time

1. Check whether the G-Sensor sensitivity setting is "high", if so, the bumps and shakes of the car during driving will cause the files to be locked. The locked files cannot be overwritten, too much locked files will lead to the phenomenon of "full card" and no video-recording

2. Formatting the new TF card is necessary for the first time usage

3. If appears reminder of error message or "no card" after inserting TF card, suggest to pull out the card and insert again and format the TF card, if still

cannot work, format the card on your computer, if the same problem, the card is damaged.

• WiFi mobile connection

Check and turn on the WiFi on the device setting, Search WiFi name: HX830C-XXXXXX and put in password 12345678 to connect

Notice: one dash cam only can connect one mobile at the same time

• WiFi mobile connection

Check and turn on the WiFi on the device setting, Search WiFi name: HX830C-XXXXXX and put in password 12345678 to connect

Notice: one dash cam only can connect one mobile at the same time

• WiFi mobile connection

Check and turn on the WiFi on the device setting, Search WiFi name: HX830C-XXXXXX and put in password 12345678 to connect

Notice: one dash cam only can connect one mobile at the same time

• WiFi mobile connection

Check and turn on the WiFi on the device setting, Search WiFi name: HX830C-XXXXXX and put in password 12345678 to connect

Notice: one dash cam only can connect one mobile at the same time

• WiFi mobile connection

Check and turn on the WiFi on the device setting, Search WiFi name: HX830C-XXXXXX and put in password 12345678 to connect

Notice: one dash cam only can connect one mobile at the same time

• WiFi mobile connection

Check and turn on the WiFi on the device setting, Search WiFi name: HX830C-XXXXXX and put in password 12345678 to connect

Notice: one dash cam only can connect one mobile at the same time