

# 100\*152mm 2P


## 蓝牙音响

### 使用说明书

DB




#### 功能介绍

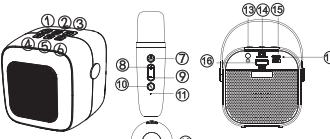

1. 短按一次音量减，长按上一曲。
2. 手动切换播放模式，蓝牙/TF卡/U盘等。
3. 短按一次音量加，长按下一曲。
4. 短按切换LED灯光效果，长按2秒关闭LED灯光效果。
5. 长按三秒开机/机关，短按播放/暂停，双击开启/关闭对联。
6. 短按开启/关闭消音。
7. 长按三秒麦克风开关机，短按一次麦克风静音。
8. 短按麦克风音量加，双击混响。
9. 短按麦克风音量减，双击混响。
10. 短按消原音开启/关闭，长按切换魔音。
11. 麦克风指示灯，未连接状态蓝灯闪烁，连接成功蓝灯常亮，充电时亮红灯，充满后红灯熄灭。
12. 麦克风Type-C 5V充电口。
13. Aux 插口。
14. TF卡槽，插入带MP3音频类文件自动切换到TF模式。
15. 音响Type-C 5V充电接口。
16. USB插口，插入带MP3音频类文件自动切换到USB模式。
17. 音响指示灯，未连接状态蓝灯闪烁，连接成功蓝灯常亮，充电时亮红灯，充满后红灯熄灭。

#### 充电连接示意图

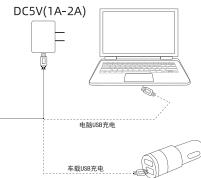

#### 常见问题处理

1. 开机后如果指示灯没有亮起，请检查音响电量是否充足，或是将音响连接到DC5V(1A-2A)电源上进行充电，充电时间大约在3-4小时。
2. 麦克风没有声音，可能是电源没有打开，模式不正确，或者音量没有调整请调节好麦克风音量。
3. 如果是音响没有混响，可能是混响开关已关闭，请打开混响开关。
4. 如果麦克风有噪音，可能是因为环境噪音，信号干扰，话筒靠喇叭太近等，请重新调试麦的方向。
5. 如果蓝牙播放中断，可能是因为蓝牙距离太远，或是手机和扩音器之间有障碍物，影响信号的传输，请靠近连接的手机，避开障碍物。
6. 如果蓝牙无法连接，可能是因为距离太远，有障碍物，或是被其他手机连接，请靠近手机避开障碍物，断开连接的手机。
7. 如果无法充电，检查充电器是否正常，音响充电时候，充电器的红色指示灯是否亮起。

#### 服务与保修

##### 保修服务条款:

1. 产品如有任何功能问题，均可享有保修服务，保修期为12个月。
2. 人为损坏，摔坏，人为刮花，无保修卡者不在保修范围。
3. 客户必须填报所有必要资料(如客户姓名,地址,电话,购买日期等)
4. 在保修期内所产生的维修费用由本公司负责，运费以及其他费用由本公司负责。
5. 保修服务需要有保修卡并按照要求操作即可保修，否则不保修。
6. 本产品符合中华人民共和国无线电管理条例规定和技术标准。

## 合格证

### PASSED CARD

产品名称：蓝牙音响

产品型号：D8

出厂日期：

检验员：



- 产品名称: 蓝牙音响
- 电池: 高性能大容量锂电池
- 产品型号: D8
- 充电电压: DC5V
- 执行标准: GB4943-2022
- 频率范围: 90Hz-18KHz
- 输出功率: 5W
- 输入信号: 42DB

#### 主要功能

- 采用高还原声电声系统
- 超强MP3音频解码技术
- 3.7V高性能电池
- 全数字音频处理，音质清晰，高灵敏
- 声音穿透力强，覆盖面积广


## Bluetooth Speaker

### Operation manual

DB



#### Function introduction

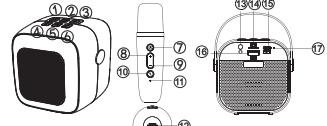

1. Short Press once for volume reduction, long press once for volume increase.
2. Manual Switch Play mode, Bluetooth/TF card/U disk, etc.
3. Short Press once to add volume, long press once.
4. Short Press to switch the LED lighting effect, long press 2 seconds to turn off the LED lighting effect.
5. Long press 3 seconds to turn on/off, short press play/pause, double click to turn on/off sound cancellation.
6. Short Press to turn on/off sound cancellation.
7. Long press 2 seconds to switch the microphone on and off, short press once to mute the microphone.
8. Short Press microphone volume to add, double click revert to add.
9. Short Press mic volume to reduce, double click revert to reduce.
10. Short Press to cancel the original sound open/close, long press to switch the magic sound.
11. The Microphone Indicator Light, the unconnected blue light flickers, the connected blue light is always on, the red light is when charging, the red light is off when full.
12. Microphone Type-C 5V charging port.
13. Aux socket.
14. TF slot, insert MP3 audio class file automatically switch to TF mode.
15. Audio Type-C 5V charging interface.
16. USB plug-in with MP3 audio class files automatically switch to USB mode.
17. Audio Indicator Light, blue light flicker when not connected, blue light will be on when connected successfully, red light will be on when charging, red light will be off when full.

#### Product information


- Product name: WIRELESS KARAOKE SPAKER
- Product Model: D8
- OUTPUT POWER: 5W
- Input: 3.7V 42DB
- Battery: High Performance High Capacity Lithium battery
- Charging voltage: DC5V
- Frequency range: 90Hz-18KHz
- Power mode: DC charging and built-in Battery

#### Main functions

- High reduction electro-acoustic system
- 3.7V high performance battery

- Sound penetration, wide coverage
- Super MP3 audio decoding technology
- All digital audio processing, clear voice
- Quality, high sensitivity

#### Schematic diagram of charging connection

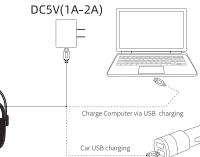

#### Frequently asked questions

1. If the indicator light does not turn on, please check whether the audio power is sufficient, or to connect the audio to DC5V(1A-2A) port for power supply charging, about 3-4 hours.
2. There is no sound in the microphone. The power supply is not on, the mode is not correct, or the volume is not adjusted. Please adjust the volume of the microphone.
3. If the stereo does not have reverb, the reverb switch may be off, please turn on the reverb switch.
4. If the microphone is noisy, it may be due to ambient noise, signal interference or the microphone is too close to the speaker, etc., please re-adjust the direction of the microphone.
5. If Bluetooth playback is interrupted, it may be because the Bluetooth is too far away, or there is an obstacle between the phone and the loudspeaker, affecting the signal transmission, please close to the connected phone, avoid the obstacle.
6. If Bluetooth can not be connected, it may be because the distance is too far, there are obstacles, or by other phones connecting, please close to the phone to avoid obstacles, disconnect the phone.
7. If you can not charge, check whether the charger is normal, audio charging, the charging port of the red light is on.

#### Service and warranty

Warranty terms and conditions:

1. If the product has any function problem, can enjoy the warranty service, the warranty period is 12 months.
2. Man-made damage, broken, artificial scratch, no warranty card is not within the scope of the warranty.
3. Customer must fill in all necessary information (such as customer's name, address, telephone number, date of purchase, etc.)
4. We are responsible for the maintenance costs incurred during the warranty period. We are not responsible for the freight and other costs incurred during the warranty period.
5. Warranty services need to have a warranty card and according to the requirements of the operation can be guaranteed, otherwise no warranty.
6. This product conforms to the regulations and technical standards of the People's Republic of China.

 
## PASSED CARD

product name: WIRELESS KARAOKE SPAKER

Product number: D8

Date of manufacture:

Inspectors:



## **FCC Warning**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.