

INSTRUCTION MANUAL

5,000 mAh Wireless Charging POWER BANK



Please read these instructions carefully and retain for future reference.



HIGHLIGHTS

- Lithium Polymer Battery
- Simultaneously Charges three Devices
- MagSafe Wireless Charging Compatible
- Wireless Charging Self-Start Function
- 20 W PD Type-C Output


PACKAGE CONTENTS

- 5,000mAh Wireless Charging Power Bank
- Type-C Charging Cable
- Instruction Manual

SPECIFICATIONS

- Battery Type: Lithium Polymer
- Battery Capacity: 3.85V 5, 000 mAh 19.25Wh
- Type-C Input: PD3.0 5V3A,9V2A(18W MAX)
- Type-C Output: PD3.0 5V2.4A,9V2.22A,12V1.5A(20W MAX)
- Wireless Output : 5W/7.5W/10W/15W(15WMAX)
- Dimensions: 105*65.5*8.7mm
- Weight: 110g

IDENTIFYING PARTS

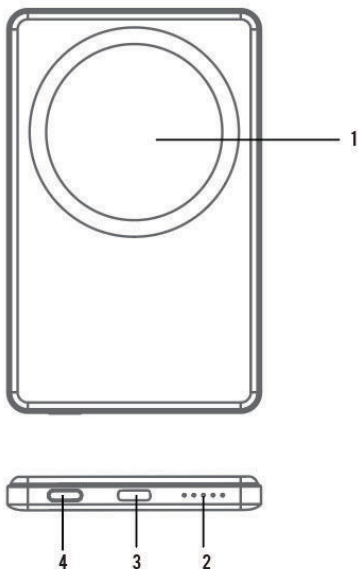

1. Wireless Charger
2. LED Display
3. USB Type-C Input& Output Port
4. Power Button


INSTRUCTIONS FOR USE

CHARGING THE POWER BANK

- Insert the Type-C connector of the supplied cable into either Type-C port of the power bank.
- The power bank can be charged directly through the power socket outlet.
- Insert the USB connector of the cable into a power socket outlet using a USB charger (not supplied).
- If the power bank is switched on but not being used, it will automatically switch off after approximately 35 seconds.
- The power bank can also be charged directly through the mains socket outlet using a USB charger (not supplied).
- When charging is in fast charge mode, the blue LED lights up (fast charging cable and adapter required. Supports fast charging).

CHARGE STATUS

- Press LED Button and the LED's will illuminate to show the remaining capacity
- The LED's will turn off automatically after approximately 35 seconds.

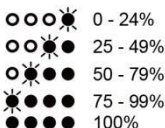

CHARGING YOUR DEVICE

- Press the power button, and the power bank LED will display the remaining power level.
- Place the iPhone on the wireless charging area of the power bank.
- Ensure the wireless charging position of the power bank is precisely

aligned with the wireless charging area of the mobile phone. Press the power button to start charging, and the wireless charging function will begin.

- The LED charge indicators will light up, indicating the remaining power level.
- The wireless charging function can be used for other devices, for example, headphones with a wireless charging capability.
- Ensure that the position of the wireless charging areas of the power bank and the device to be charged is properly aligned. Otherwise, the device will not charge.
- Supported iPhones will be fixed to the power bank magnetically due to built-in magnets.
- Do not move or bump the mobile phone while charging. Doing so may cause the mobile phone and power bank to miss align.
- When wireless charging starts, the LED indicator will illuminate blue.

SAFETY PRECAUTIONS

- Never use the 5,000 mAh MagSafe Power Bank near water or in areas where it can come into contact with water.
- Never handle the product if it is dropped into water or other liquid. This is a safety hazard if the product comes into contact with water while switched off but still plugged in. Always ensure your hands are dry before touching the plug or power connections. Do not attempt to use this power bank when performing tasks that require your full attention.
- The product is intended for personal use only. Commercial use invalidates the warranty, and the supplier cannot be held responsible for injury or damage caused when using the device for any purpose other than its intended purpose.
- The power bank is magnetic. Therefore, magnetic objects, such as coins, ID cards, bank cards, or any other metal objects, must not be placed between the wireless charging area on the power bank and the mobile phone while it is charging.
- Keep out of reach of children.
- Operate between 0~40°C
- Do not cover the power bank i.e.: use beneath pillows or blankets

- Do not store in temperatures over 140 °F (60 °C)

CLEANING AND CARING INSTRUCTIONS - GENERAL

- Before Cleaning: Ensure that your 5 000 mAh wireless charging Power Bank is turned off
- and disconnected from a USB cable before cleaning or maintaining it.
- Cleaning: Wipe down the surface of your Power Bank using a soft, slightly damp cloth.
- Do not use any harsh or abrasive cleaning chemicals or materials on your Power Bank as doing so may damage or scratch the surface finish.
- Do not store in temperatures over 60 °C. Do not expose the battery to excessive heat such as sunshine, fire or the like. Store in a cool, dry place.

DISCLAIMER

All product and company names are trademarks™ or registered® trademarks of their respective holders. Use of them does not imply any affiliation with or endorsement by trademark or registration holders.

ENVIRONMENTALLY FRIENDLY DISPOSAL

IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH THE EUROPEAN DIRECTIVE ON WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT.

- At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated Waste Collection Centre or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.
- Please do NOT attempt to change the battery yourself. If the battery has died and you do not want us to replace your battery, you should follow the disposal instructions below:

- Never dispose of used batteries / electronics with ordinary solid wastes, since they contain toxic substances.
- Always dispose of used batteries / electronics in accordance with the prevailing community regulations that apply to the disposal of batteries/electronics, if there are no local regulations concerning battery / electronics disposal, please dispose of the device in a waste bin for electronic devices.



WARRANTY

- This 5 000 mAh Power Bank comes with a standard 12-month limited warranty against manufacturing defects and faults. Should your Power Bank be unboxed with any faulty parts, poor finishing or visible damage, or fail to perform due to a manufacturing defect or poor workmanship, please return it with your proof of purchase (till slip or invoice) to the store of purchase for an exchange, or repair, depending on the store's returns policy.
- This warranty commences from the date of purchase.
- Kindly retain your proof of purchase and the packaging for your warranty period.
- Note: The warranty does not apply to a product that:
 - 1.Has failed due to excessive wear and tear beyond what is considered to be reasonable.
 - 2.Has been misused or neglected.
 - 3.Has been damaged accidentally or by Force Majeure including fire and flooding
 - 4.Has been used or operated contrary to operating or maintenance instructions outlined in this manual.
- The Store of Purchase / Seller cannot accept any returned products that have not been returned in accordance to this warranty or which does not follow their own Returns Policy. Please refer to the Store of Purchase / Sellers Returns Policy for details.

- Please contact the store of purchase if you require assistance or have queries about your warranty.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.