


Neck and shoulder massager

#### Product instructions for use

#### matters need attention

- Do not pull the power cord to avoid breakage or poor contact; pull the plug after pulling the plug. If the whole machine is not working, please stop using it immediately and turn off the power supply.
- Do not allow infants or children to use or play on the product.
- In use, please abort the use when you feel unwell.
- Do not use the following conditions should follow the doctor's advice: pregnant women or menstrual period, high fever, malignant tumor, heart disease, surgery, acute symptoms or other diseases.
- This product is not used in the following places: bathroom, kitchen and other high temperature, high pressure, damp and near water and near fire source.
- Please stay away from the spike items when the cover is damaged please contact customer service for repair.
- It is forbidden to use the machine cover when breaking, in order to prevent hair involvement in the machine and cause serious personal injury.
- Please shut down or unplug the power cord from the power socket after use or before cleaning.
- If the power cord is damaged, please contact the customer service for maintenance in order to avoid danger.
- The product must be charged with a self-equipped charger, otherwise the product may be damaged or even caught fire.
- The appliance has a heating surface, and people who are insensitive to heat must pay attention to it.

#### product presentation

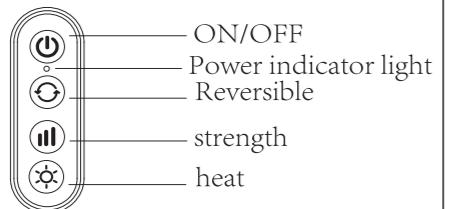

#### Emergency treatment method

- If there is any damage to the power cord of this product, please stop using it immediately to avoid the danger.
- If the fault occurs due to improper use, do not remove it by yourself, unplug the power plug, please contact customer service for maintenance.
- If the wire or plug of the machine is damaged, please stop using it immediately.
- If smoke or fire occurs during use, please remove the plug from the socket as soon as possible and inform the customer service.
- Leather and cloth surface damaged parts exposed, please stop using immediately, please contact the customer service for maintenance, to avoid danger.

#### operation declaration

1. The product supplies power for 218650-7.4V lithium batteries, and charges USB 5V2A Type-c. When the product power is insufficient, the red indicator light flashes 6 times and automatically turns down.  
When charging, the product cannot be started. The indicator is red breathing. When fully charged, the indicator flashes white. Product timing for 10 minutes.

#### Correct way to use it

##### Preparation before use

Please check whether the products and accessories are complete and damaged.

Long press the key for 2 seconds, the product begins to work.

#### \* mode selection

Start the default mode one, short press the mode key, can switch mode one and mode two.

#### \* Hot application mode

Start default heating off, short press the heating key, heating high grade and heating low grade and off heating, and this cycle.

#### \* Strength mode

Boon the default first gear, short press the gear button, the second gear-third gear-first gear cycle.

#### \* Product shutdown

Automatic shutdown: the product stops working.

Manual shutdown: single press to open the key, the product stops working.

#### Basic parameters of the product

product name	Neck and shoulder massager
model	NM2
power rating	10W
charging voltage	5V ==
rated voltage	7.4V ==
operate time	60-100 Minutes

#### Maintenance-maintenance

- For daily maintenance, please use neutral detergent and soft cloth to scrub, do not use oil, organic solvent or other chemical agent cleaning, do not rinse in water.
- Please gently press the switch to avoid excessive force.
- Avoid overloading and avoid sharp and hard objects scratching on the surface of the product.
- After use, please keep it properly in the original box or dry at low temperature.
- If a troubleshoot fault is found in use, please cut off the power immediately and stop use, and contact customer service and do not remove by yourself.
- Please unplug the power supply immediately after charging.

#### debugging

fault phenomenon	Possible cause	process mode
Unable to start	run out of battery	Power on the product after fully charging
Stop in use	The time of arrival timing has been used	Turn off the power supply to restart
	Product overload (such as hard stepping or stacking heavy objects)	Please reduce the load for use
There is a sound when you use it	Out by the mechanical structure of the product itself	It is normal

#### Battery handling methods

-Before disposing of the appliance, the battery must be removed from the appliance.  
When removing the battery, the appliance must be powered off.  
-Batteries should be disposed of safely.

- Cut open the zipper cover with scissors, and then remove the internal battery completely.
- Do not dispose of the battery when removing it.  
Please dispose of the battery in a dedicated recycling bin and do not mix it with other household waste to avoid polluting the environment

#### FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction

#### certificate

result : Pass  
examination clerk :  
examine : check up  
02

MADE IN CHINA