

7-TROUBLE SHOOTING

| Symptoms                                                                                                                                                                                           | Possible Problem                             | Solution                                                                                                      |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------|---------------------------------------------------------------------------------------------------------------|
| No Function<br>Light and/or<br>No Sound                                                                                                                                                            | 1.Electrical cord is not connected           | Insert the plug into electric outlet                                                                          |
|                                                                                                                                                                                                    | 2.Speaker power button is not turned on      | Turn on the power switch                                                                                      |
|                                                                                                                                                                                                    | 3.Volume is not loud                         | Long press CH+ to increase the volume                                                                         |
| Function<br>Light on but<br>No Sound                                                                                                                                                               | 1.Media cables are not connected correctly   | Turn off the power, check the input cables to ensure proper audio cables is connected to relevant input plugs |
|                                                                                                                                                                                                    | 2.Audio signal is not transmitted to Speaker | Check all audio input signals to the speaker                                                                  |
| If the problem still exists, please refer to the appointed service agent or professional technician to fix it.<br>Do not attempt to open the speaker cover as this will Void the Speaker Warranty. |                                              |                                                                                                               |

WARNING

WARNING: TO REDUCE THE RISK OF FIRE OR SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE

CAUTION  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN

CAUTION: TO REDUCE THE RISK OF FIRE OR SHOCK, DO NOT REMOVE COVER OR BACK. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL

The exclamation mark inside an equilateral triangle is intended to alert user of the presence of the important operating and maintenance (servicing) instructions in the literature accompanying the product.

The lightning flash with arrowhead symbol inside an equilateral triangle is intended to alert User of the presence of un-insulated "hazardous voltage" within the product's enclosure, which may be of sufficient magnitude to induce a risk of electric shock to persons

**NOTES:**  
Please do not attempt to open the back cover or power adapter as opening or removing the covers may expose you to dangerous voltage or other hazards, and it will also cause the restricted servicing to be disabled: There are no user servicing components inside.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

PARTY SPEAKER

USER MANUAL



MC-9381


Please keep this manual properly for reference

正面

1-IMPORTANT SAFETY MEASURES

- Before using this machine, please read all the safety and operating instruction, meanwhile, please observe all the indications about safe operating, these safety and operating instructions should be kept in condition of construction.
- Protection of electric power supply line: Be aware that the electric power supply line is not tramped, pressed by heavy objects. Pay special attention to the plug of power supply line and outlet on the machine. DO NOT lengthen the electric shock, DO NOT pull or drag or the power supply line.
  - Ventilation: This set must be put in ventilated place. DO NOT put disk on it or cloth to cover it. The distance away from the wall should not be less than 10 centimeters. DO NOT put this set on the bed, sofa, carpet or other objects with similar surface in case of good ventilation.
  - Casing Dismantling: DO NOT dismantle the casing. If one touches the inner components, he will probably get serious electric shock. Attention: This set applies to AC 100V~240V/50Hz~60Hz power supply. Use standard power supply. Pls be sure for the correct power supply before use it.

2-CONTROL PANEL FUNCTIONS

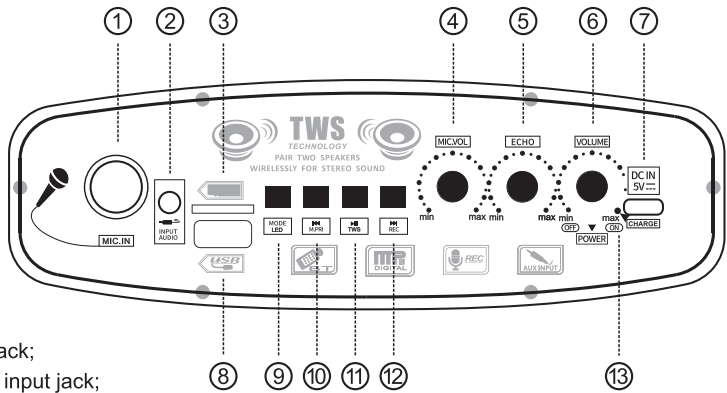


- MIC IN: Microphone jack;
- AUDIO INPUT: Audio input jack;
- TF: Support TF card;
- MIC VOL: Microphone volume adjustment;
- ECHO: Echo volume adjustment;
- POWER/VOLUME: Power switch and volume adjustment;
- DC IN-5V: DC 5V input;
- USB: Support USB drive;
- MODE: Function transfer, USB/TF/BLEETOOTH/AUX/FM; Long press for LED light switch;
- PREV: Play the previous song; Long press for microphone priority when play music;
- PLAY/PAUSE: Pause or play the song; Long press for TWS function;
- NEXT: Play the next song; Long press for record
- CHARGE LED: Charging indicator, full for green, charging for red.

背面

3-REMOTE CONTROL FUNCTIONS

**Function of remote**  
Some products in this series are equipped with remote control, the functions as follows: Note: Some models may have different remote controls. Please refer to the actual comparison operation

⏻ -Power button, supported models can be turned on and off by this button;  
🔇 -Mute button, quickly turn off the volume with one click, press again to restore the original volume;  
0-9-Number buttons, select songs when playing on storage media such as USB/SD/TF card;  
MODE-Mode button, select audio input/Wireless/radio etc functions;  
U/SD-When using U disk and memory card at the same time, choose to play U disk or memory card audio;  
▶||-Play / Pause (previous channel/next channel switch in radio function);  
◀◀ ▶▶-Previous/Next (Switch to previous/next channel in radio function);  
VOL+ -Volume up;  
VOL- -Volume down;  
EQ-Preset EQ effect switch;  
REPE(RPT)-REPE(RPT)-Repeat;

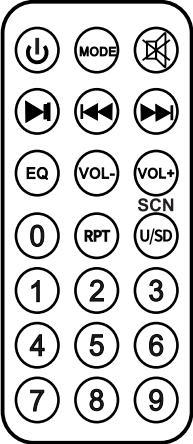

4- MICROPHONE INSTRUCTIONS

- Plug in the wired microphone, or connect the wireless microphone.
- Adjust the microphone volume knob MIC VOL for proper volume.
- Adjust the echo depth to the proper position.
- Now you can start using your microphone.

5- WIRELESS CONNECTION

You can connect your compatible wireless devices such as a cellphone, computer etc., to listen to your audio tracks from this speaker.

Press the MODE button on the speaker, or press the MODE button on the remote control to enter wireless mode, indicated on the LED display.

6-CHARGING THE SPEAKER

- Full recharge takes 6-8 hours
  - Please use the supplied charging cable to charge the speaker.
  - When you are using your unit while it is plugged to an external power source, be sure the battery switch is ON.
  - To protect the lifespan of the built-in battery, be sure to fully charge your unit on the same day the battery runs out.
- Not charging your unit right away can affect the performance of the battery.