

# Yamisan v12

10000mAh

Magnetic wireless portable charger  
Usage instructions



Thank you for purchasing the Yamisan magnetic wireless portable charger. To ensure the safe and correct usage, please make sure to read this instruction manual before use. This manual also serves as the warranty, so please keep it in a safe place.

V12

## Safety precautions

This explains the precautions that must be observed to prevent injury to the user or other people, and damage to property. Please read the following contents carefully and be sure to observe the instructions.

**Warning** The content is expected to result in death or serious injury to people.

- Do not disassemble or modify.
- Do not place this product near medical equipment such as cardiac pacemakers or other electronic devices.
- Do not place or approach any metal objects near the product, such as devices that are not compatible with this product, smartphone cases that contain metal, or clips.
- Do not use in places where heat accumulates (such as inside a bed) or in environments where the main unit may come close contact with your body.
- Do not immerse in water or get wet, do not apply it on wet items, or with wet hands.
- Do not use with a power source other than the specified voltage.
- To check each part before use and do not use any that are dusty or deformed or damaged.
- Do not use continuously for longer than the specified time.
- Do not use while sleeping.
- Do not use or store near heating appliances or in humid places.
- Do not use or store under the direct sunlight.
- Do not use or store within reach of infants or children.
- Do not insert metal or other objects into the product, and do not short-circuit the connector terminals with metal or other objects.
- When you are using, please check the connection parts, and do not use excessive force.
- When not in use, please disconnect the connection and store in a safe place. Do not leave the device connected.
- Do not throw into fire. Do not heat in a microwave oven or oven.
- If thunder starts to roar, for safety reasons do not touch this product or any connected devices.
- Do not place heavy objects on the product or place it in a location where it may fall, or in a magnetic or dusty location.
- When cleaning, remove all connections.
- Do not throw the device

**Warning** This content may result in minor injury to persons or property damage.

- Do not use the battery in locations where the temperature is in the range above 105°F, as this may cause the battery to leak, heat up, or explode.

- 1 -

- Do not leave the product under the direct sunlight or in a high temperature location as this may cause it to overheat or catch fire.
- Unplug the charger when not in use to avoid risk of fire.
- Do not use a damaged cable or charger if the cable or outlet is loose, as this may result in fire or electric shock.
- Store and use the product in a place with low humidity and less dust to prevent overheating, fire, or electric shock.
- This product is not waterproof. Do not use it in wet places such as in the bathroom. Doing so may cause overheating, fire, or electric shock.
- If there is dirt or dust on the connector, wipe it off thoroughly with a dry cloth before use. Without doing so, it may result in a fire or malfunction.
- If any substance from inside the product gets into your eyes or mouth, immediately rinse with clean water and consult a doctor immediately. Without the necessary care, it can cause blindness or other physical discomfort.
- Do not bring IC cards, bank cards, etc. close to this product as this may cause data to be erased or damaged.
- Do not place metal objects between this product and the mobile device being charged. Metal objects may become hot and cause burns or deformation of the product.
- Be careful not to get your fingers pinched between this product and the smartphone.
- Do not use this product if the product or the connected device becomes extremely hot or if you notice any abnormality on the temperature while using the product.


## Product specifications

| Product name                       | Magnetic wireless portable charger    |
|------------------------------------|---------------------------------------|
| Model number                       | V12                                   |
| Body dimensions                    | 101*70*14 mm / 3.9*2.7*0.5 inches     |
| Body weight                        | 188 g / 0.4 lb                        |
| Material                           | aluminum, silicon, and alloy          |
| battery capacity                   | 10000 mAh / 3.85V / 38.5 Wh           |
| Charging time                      | Approx. 2.5 hours to be fully charged |
| Input (USB C)                      | 5V-3A/9V-2A (Max 18W)                 |
| Output (USB C)                     | 5V-2.1A/9V-2.2A/12V-1.5A (Max 20W)    |
| Output (wireless)                  | 5W/7.5W/10W/15W (Max)                 |
| Built-in battery                   | lithium-ion polymer battery           |
| Product Quality time for guarantee | 18 months                             |

\*The actual charging time may vary depending on usage conditions and environment.

- 2 -

## Name of each section

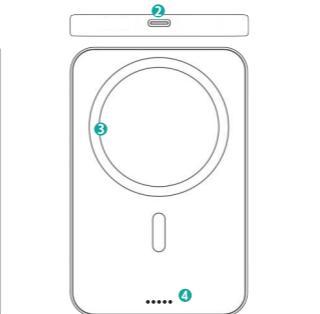


① The Power button ② USB Type-C port for power supply/charging  
③ Magnetic coil ④ Indicator light

## Explanation of the indicator lights

- Battery indicator lamp: first four spots
- Wireless charging indicator light: Last one

## The full set content

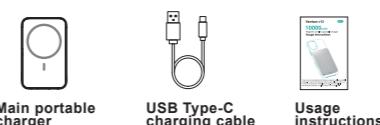

## Usage instructions


### [How to charge your smartphone]

- When you bring this product close to the back of a Magsafe compatible smartphone, it will be connected in place with the magnet.
- Press the power button briefly on the portable charger (for less than 1 second) to start charging. Most devices start charging automatically without any operation.



## [When used the portable mobile phone charger]

- Connect the charging cable to the device.
- Connect the other end of the charging cable to your smartphone, tablet, etc. If charging does not start automatically, press the power button briefly (for less than about 1 second) to start charging.
- For safety concern, when the charging is completed, please remove the charging cable from your phone first, and then the portable charger as 2>1 shown in the illustration.

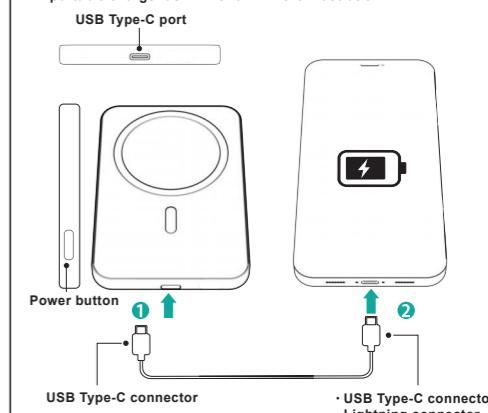


\*If the power is turned on or the device is being used while charging, it may not be possible to charge to the specified value.  
\*Leaving the cable plugged will reduce the battery level. Be sure to unplug the cable when it is not in use.

- 5 -

## [How to charge the portable charger]

- Connect the charging cable to the USB Type-C port on this product.
- Connect the other end of the charging cable to the adaptor.
- When you insert the AC adaptor into a household outlet, the indicator on the device light will be flashing, and charging will begin.
- For safety concern, when charging is completed, please remove the cables in the order ③→②→① as shown in the diagram.

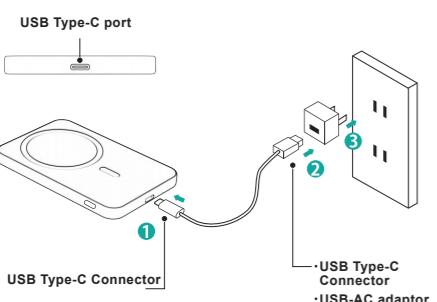

\*For fast charging, it requires not only the phone and portable charger, but also the cable must be compatible with fast charging. If a non-standard cable is used, it may result in a slower charging speed or the product overheating.

\*We recommend an AC adaptor with an output of 18 W or more. Charging from an AC adaptor with an output lower than this or from a computer may take longer or may not be charged.


\*While charging, the indicator light will be turned on, and it will continuously flash.

\*AC adaptor is not included. Please prepare 15W power adapter and above for your usage.

- 6 -

## [How to charge two devices at the same time:]

- Connect the charging cable to the USB Type-C port on the portable charger.
- Connect the other end of the charging cable to your first phone.
- When you put the back of your second iPhone (which should be in the range of Magsafe compatible iPhone 12/13/14/15/16 series) close to this portable charger, it will be connected automatically with the magnet and charging will begin.
- You can stop charging two phones by briefly pressing the power button twice within about 3 seconds.

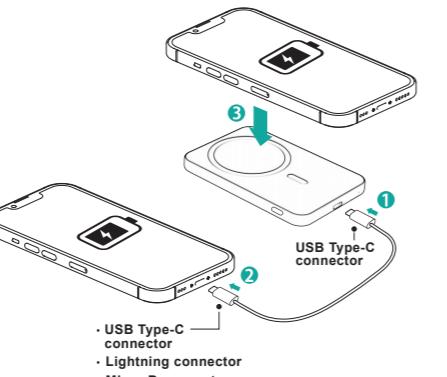

\*For fast charging, it requires not only the phone and portable charger, but also the cable must be compatible with fast charging. If a non-standard cable is used, it may result in a slower charging speed or the product overheating.

\*We recommend an AC adaptor with an output of 18 W or more. Charging from an AC adaptor with an output lower than this or from a computer may take longer or may not be charged.

\*While charging, the indicator light will be turned on, and it will continuously flash.

\*AC adaptor is not included. Please prepare 15W power adapter and above for your usage.

- 7 -

## Precautions for use

### [Important notice]

Due to the charging protection mechanism of the iPhone, when you use this product to charge your iPhone, charging will stop temporarily when it reaches 80%. Charging will resume after waiting for the iPhone to return to normal temperature. This is normal, so please do not worry.

- Magnetic fastening is only available for MagSafe compatible models, and should be used either with the case removed or with a MagSafe compatible case attached.
- Place the device to the center of the phone. If the device is not placed in the right position, it will not charge properly.
- This product uses magnets. Do not bring magnetic cards (credit cards, cash cards, etc.) near the product. Please note that we cannot guarantee against any damage to card data caused by the influence of magnets.
- When placing and using this product, put it on a level surface.
- It may take some time for charging to begin after you place the device down. Please wait about 1-3 seconds.
- When removing this product from your smartphone, please make sure to hold the product itself to remove it.
- This product supports wireless charging up to 15W.
- Please use wireless charging in places where the temperature is between 32°F to 105°F. If the temperature exceeds 105°F or below 32°F, the efficiency may decrease and the output may decrease.
- If there is an object (especially metal) between this product and your smartphone, etc., charging may cause heat generation and fire. Remove any cases or smartphone rings that contain metal and make sure it clear before charging.
- Depending on the case you use, such as a leather case, embossed marks may remain on the case. This is normal, but if it bothers you, please remove the case before charging.
- If you have a magnetic accessory, such as a leather wallet, attached to the back of your iPhone, remove it before charging.

- 8 -

- A certain amount of heat will be generated during charging. This is normal and not a malfunction.

- If you feel that your device is too hot after charging in your pocket, immediately place the device and portable charger on a table for about a minute.

- Please remove the following items before use:

The cases that are thicker than approximately 5mm, or with uneven backs, or smartphone rings, or metal or magnetic cases, or credit cards.

- Charging an iPhone, AirPods, Android, etc. with a case attached may result in reduced charging efficiency or may not be charged properly. Under any of these cases, please remove the case and use the portable charger directly on the back of your phone.

- Please note that we cannot be held responsible for any accidents, damage or malfunction of the device itself, or loss or disappearance of data that may occur when using the product.

- If the product becomes dirty, please wipe it off with a dry cloth. Do not allow paint thinner, benzene, alcohol, or other chemicals to impact on the product. Do not use soap or detergent, since it may damage the product.

- If there is an object (especially metal) between this product and your smartphone, etc., charging may cause heat generation and fire. Remove any cases or smartphone rings that contain metal and make sure it clear before charging.

- Depending on the case you use, such as a leather case, embossed marks may remain on the case. This is normal, but if it bothers you, please remove the case before charging.

- If you have a magnetic accessory, such as a leather wallet, attached to the back of your iPhone, remove it before charging.

- 9 -

- Check whether your device and case are compatible with wireless charging.
- Restart your device.
- The indicator light will turn on when fast charging. If it does not turn on, please check the specifications of your smartphone, charger and cable.
- If you are using a thick case, iron, magnet, electromagnetic wave blocking sheet, etc. for your devices, the wireless charging may not work properly. Please remove the case from the device before charging.

- Check the battery status by checking the battery level indicator.
- Depending on the condition of the device being charged, the charging indicator light may not turn on immediately. In such a case, please wait for the preliminary charging time has elapsed.
- If charging of this product or a connected device is interrupted, check that the cables are securely inserted.
- Check the cables and connectors for damage.

- If the symptoms do not improve even after checking the above, please contact our customer service.

## Precautions when disposing the product



This product applies the lithium-ion battery. The lithium-ion battery is a recyclable resource. When disposing of the product, you can remove the lithium-ion battery in accordance with the regulations of your area. Please take it to your local recycling partner store or designated collection area.

FCC Warning Statement: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. FCC Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

The device can be used in portable exposure condition without restriction.

- 10 -

成品尺寸: 65mm X 100mm  
材质: 105g哑粉纸  
印刷颜色: 四色印刷  
装订方式: 风琴六折页