

项目名称	扭变遥控车说明书
尺寸	140*180mm
专色	/
材质	150g铜版纸
设计师	何烽敏
审核	

TWISTED STUNT CAR

USER MANUAL



CROSS COUNTRY CLIMBING 4WD POWER TWO FORMS ADAPT
TO MULTI TERRAIN

BATTERY OPERATE PRODUCT

- This product is suitable for children 6 years old and above, after assembled / Charged by adults, play with children again! Please use this product under the supervision of adult.
- Warning:** Please do not disassemble or modify this product without authorization. Any changes may cause the product to malfunction. This manual is suitable for the introduction of a series of products of our company. The configuration of each product is different. Please see the configuration of the box for the specific configuration.

PRECAUTIONS FOR USE

- The body of the product uses 1 rechargeable battery. (Include one more pieces batteries you can replace in the package) see the battery diagram in the battery room for the number of volts; The remote control uses 21.5V AA non-rechargeable batteries.
- Battery removal and loading should be toy battery room polarity and voltage correctly operate.
- Non-rechargeable battery is not rechargeable.
- Rechargeable batteries must be charged under adult supervision.
- The rechargeable battery should be removed from the toy before charging.
- Different types of batteries or old and new batteries can not be mixed.
- Only batteries that are the same or equivalent to the recommended battery can be used.
- Exhausted battery should be removed from the toy; If not used for a long time, please remove the toy battery.
- Power terminals may not be short-circuited.
- Use a screwdriver to unscrew the screws on the cover of the battery compartment, insert the batteries according to the correct polarity of the positive and negative poles, and unscrew the screws on the cover of the battery compartment with a screwdriver to remove the battery.
- Repair and maintenance: This product is composed of plastic, hardware and electronic components. It should not be placed or used in water or placed or used in a humid environment for a long time. Regularly check whether the wires, plugs, casings and other parts are defective. Stop using them when they are found to be defective. Until the repair is intact.

-1-

WARNING

- When playing remote control car indoors, please be careful not to damage furniture or glass.
- Please play outside in a safe place, do not play remote control car in the road and the crowd, so as to avoid danger.
- Play remote control car to hear thunder outdoors, should immediately stop playing.
- Do not drive the remote control facing people.
- Do not throw the remote control car. Chaos collision.
- When placing the remote control car, please keep it away from fire and high temperature.
- The car uses a complex electronic circuits and a large number of components please do not disassemble or modify the circuit board.
- Remote control car after playing with dirt, dust must be gently wiped with a damp cloth.
- Do not put the toy in the water; it will damage the electronic components.
- The packing box and manual have important information, please keep it properly.

MAINTENANCE MATTERS

- Can not close to the fire, avoid direct sunlight high temperature and humidity or long-term in the car, to avoid short circuit, fire.
- Do not play when the car and remote control battery removed, and the remote control car, remote control back into the color box packaging to avoid damage or deformation during transport or storage.
- Remote control car with a damp cloth to gently wipe.

DESCRIPTION OF AUTOMATIC CODE MATCHING

- After put the batteries in the controller, the indicate light flashing, and put the batteries in the car and set it on, starting to connect, if success, the controller indicate light off, otherwise repeat the above operation.

 
-2-

- Each remote control can only be connected to one remote control car. When the connection is successful, each car will not interfere with each Other; **Note: multiple cars cannot be connected at the same time.**
- The remote control did not find the 2.4G signal from the remote control car when it was powered on, and the power indicator was flashing. You need to restart the power switch to link the frequency.
- When you need to pair other remote controls or remote control cars of the same model, you need to turn off the power of the remote control car to re-pair.

HOW TO INSTALL THE BATTERY


The Remote Control

- Open the remote control battery cover, and install AA batteries according to the positive and negative directions in the battery compartment of the remote control.
- Close the battery cover.

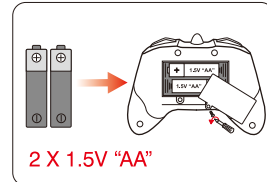


Remote Control Car

 - Open the battery cover under the car, connect the rechargeable battery pack to the power socket and put it into the battery compartment under the car.
- Close the battery cover and tighten with a screwdriver.

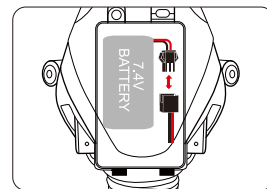

HOW TO CHARGE

 - Before playing please charge the new battery pack.
- First plug the battery pack plug in the charger then plug the charged in the socket.
- With the charger, the time required for the battery to be fully charged is 3-4hours. The charging plug has a charging indicator. The red light is always on during charging and the green light is flashing. Charging over time will not increase the power.

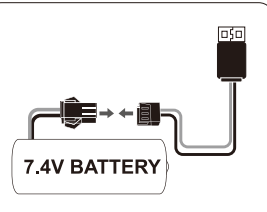

-3-

 
OPERATION TIPS

- Please make sure that the power switch is in the "ON" position. When you are operating, such as the power switch is in the "OFF" position, the remote control car is in the OFF state.
- When the battery power is consumed, the left and right steering will be insensitive, and the forward and backward will also slow down. At this time, the battery needs to be removed and charged.
- The effective control distance of the remote control car is about **40 meters**. When the distance is exceeded, the remote control car may stop or become out of control.
- The remote control car will automatically deform when the deformation button is pressed. (Only one side is deformed.)

RECEIVING INSTRUCTIONS


- Power on and play the chirp.
- Play the car start sound, standby sound and display light after the frequency is up.
- Forward and retreat without deformation, play the car forward sound.
- Forward and rewind in the deformed state, play music.
- Separate deformation, play deformation sound.

IMPORTANT HINT

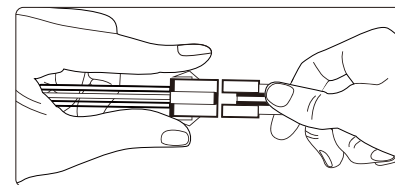

When removing the battery, please press the raised position of the power socket, do not remove it with force, so as not to damage the power connection!

 
The front and rear wheels of the product cannot be twisted in the opposite direction to avoid breaking the main shaft structure! If you need to twist manually, please operate according to Figure B, hold the center of the front and rear wheels with both hands and twist in the same direction!

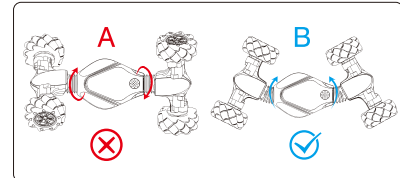


-4-

HOW TO PLAY REMOTE CONTROL CAR

 - Turn on the remote control car switch.
- Operate the direction stick of the remote control to control the car forward or backward, left or right.
- One-key deformation, when the deformation button is pressed, the car will automatically deform. (Only one side is deformed.)
- Turn off the car after playing. When the play is over, just turn off the switch of the remote control car, the remote control will automatically enter the sleep mode.

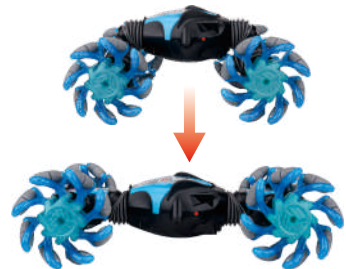

 Caution! The other side cannot be deformed.

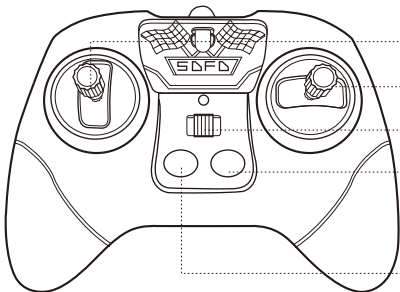


Forward / Backward
Left / Right
Switch
Deformed

Short press the music to decrease, turn off and turn off the lights / Long press for automatic presentation.

WATCH REMOTE CONTROL

 - Short press to turn on.
- Short press to switch music after power on.
- Long press for 3 seconds to shut down.

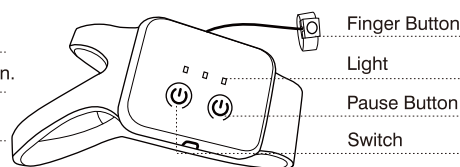


-5-

WATCH REMOTE CONTROL OPERATION


- The level of the fist is raised upwards.



 - The level of the fist is raised downwards.

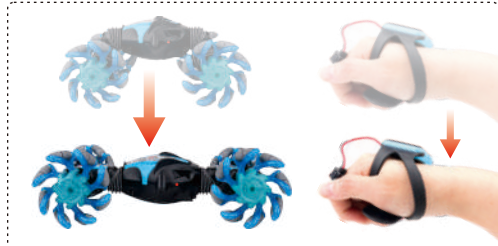

- Pushing down your fist is advancing.

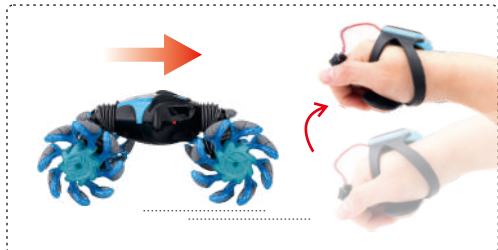 


- The fist tilts backward.

-6-


- The left tilt of the fist is the left run.



 - Right tilt of fist is right run.

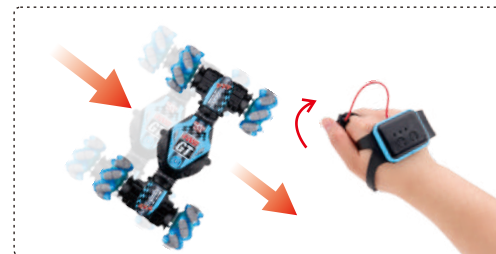

 - The finger key press is the switch key, and the left tilt of the fist is the left 360 degree turn Right tilt of fist is right 360 degree turn.

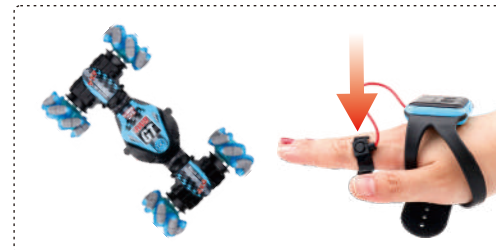

- Long press of finger key is braking function.

-7-

BODY LIGHTING INTRODUCTION

 
- When the car body switch key is turned on, the car will make a starting sound, and then the car body light will be displayed.

- All four wheels are equipped with multicolored gradient lights, and the lights are brilliant when operating at night. When the 360° drifts, the lights of the body wheels will form a gradual circle of light.




TIPS

When the car moves, please do not touch the wheels of the remote control car, so as to avoid injury.

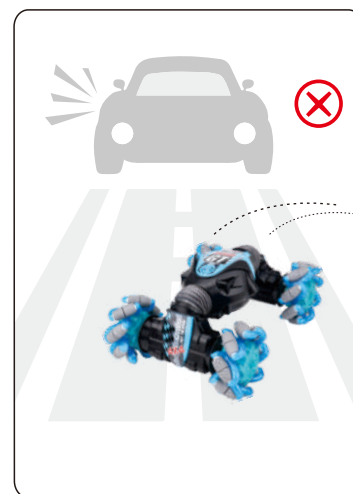

 - Do not play on the curb or in dangerous places to prevent accidents.

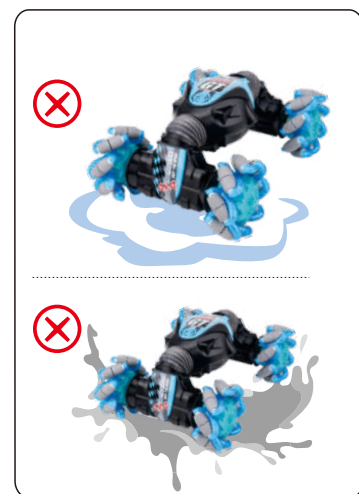

- Do not play remote control car in the sump.

-8-

GENERAL TROUBLESHOOTING

Failure Symptoms	Cause Of Issue	Approach
The vehicle cannot be driven	- The remote control is not connected or the switch of the remote control car is not turned on. - The remote control or remote control car is not correctly installed in the battery. - The power of the rechargeable battery pack is insufficient.	- Turn on the remote control car switch and reconnect the remote control. - Put the battery into the remote control or remote control car correctly. - Charge the rechargeable battery pack.
The vehicle is not controlled and the remote control distance is short	- The battery or rechargeable battery pack in the remote control has insufficient power. - There may be sources of interference near the site.	- Replace the batteries in the remote control with new ones, or charge the rechargeable battery pack. - Change the venue.
Exception protection	When the function of the remote control car is hindered by external forces and cannot complete the full function, or when the circuit battery is short-circuited.	Turn on the power switch again to protect the remote control car from power failure.

INSTRUCTIONS

Battery chargers that use this toy must be regularly checked to prevent damage to the wires and other components and, if damaged, must be repaired for damage.

-9-

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure statement

The device has been evaluatec to meel general RF exposure requirement. The device can be used in portable exposure condition without restriction.