

4 inch Portable Printer DP40S

USER'S MANUAL

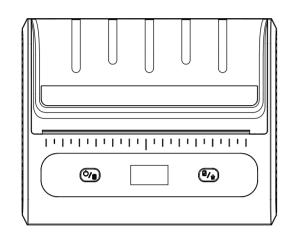

Items	Parameters
Display	TFT display screen
Print Method	Thermal Printing
Resolution	203 dpi
Printable Width	104 mm, 114 mm (optional)
Battery Runtime	120 m (12.5% print darkness)
Print Speed	30~65 mm/s
Battery Capacity	2600 mAh x 2
Charge Time	3~4 h
Charge Mode	5V x 1A cellphone charger
Label Size	28 ~ 122 mm x 11 m (max outer diameter of roll 51mm)
Label Thickness	0.05 ~ 0.2 mm
Dimension	153 x 124 x 60 mm (L x W x H)
Weight	458 g (excluding label)
Standard Accessories	User's manual, Type - C cable
Operating Temperature	0℃ ~ 45℃
Connectivity Mode	Bluetooth, USB
Command	LPAPI®
Power Bank Function	Support

^{*} Support charge printer by 5V cellphone charger

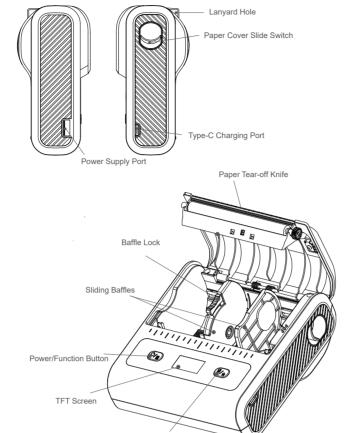

Please confirm the printer paper compartment is clean before using, it may

to clean paper compartment and print head in time.

devices inside it.

if pull it directly

warehouses, etc.

Please turn off the power immediately if a malfunction occurs.

Please do not disassemble printer by yourself, complicated circuits and

⚠ Please recharge in a cool and ventilated room. Do not expose the printer

and power adapter to high temperature, high humidity or put it in water,

otherwise short-circuit will cause battery to heat up, emit smoke, deform.

damage, or even explode. Please disconnect power when power adapter

Please do not squeeze, shake, disassemble or refit printer and power adapter.

and it is strictly forbidden to use the power adapter when the power cord is

Please hold power adapter when unplugging it, the power cord will be damaged

A Please do not use printer near flammable materials such as gas stations, fuel

damaged, otherwise it could result in electric shock, fire, and damage to printer.

touches water or other fluid. Please remove the charger immediately when

printer or charger emits smoke or smelliness, and be aware of getting scalded.

cause damage to the print head during printing process if there is foreign

matter in it. If foreign matter is found, please use special cleaner or alcohol

1.Turn Printer On

Press the Power Button for 1.5 seconds to power on.

2.Install Label

Open paper cover by sliding switch.

Keep printable side face down, insert paper in the center, toggle down locking buckle of orange baffle.
Then adjust baffles to ensure the label roll fit snugly, toggle up locking buckle, and close paper cover





Short press power button, printer enters setting status when the icon 🌞 appears on the top left corner of display screen, then press feed button to make corresp

Scan the QR code on printer label to download App(support Apple and Android)

5.Connect Printer with Bluetooth

Turn on phone's Bluetooth and printer, then connect printer on the APP. Click "Print" to enter printing page when finished editing.

6.Auto Power Off

If printer in standby state for a long period, it will power off automatically. The time can be set in the setting interface, and the default value is 15 minutes.

- From the date of purchase, the print head is guaranteed for 3 months, and the remaining parts are guaranteed for 12 months.
- 2 The warranty method is repair, user needs to send the malfunctioning product to sales service center.
- 3 For products which have exceeded the warranty period, please contact the after-sales service center and pay for the relevant accessories.
- 4 The warranty service cannot be enjoyed if the following conditions occur during the warranty period.


Damage caused by accident, abuse, misuse, or use of Non-Original consumables:

Disassemble repair or refit the printer without authorized.

Printing cuts off which caused by scratched print head.

The purchase record does not match the serial number of the warranty machine. Damage to the machine due to human factors or other force majeure.

In case of poor printing, please use the degreasing cotton dipped in alcohol to gently wipe the printer engine which marked with a red frame in the figure below

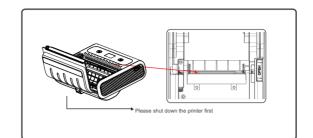

Q: How to connect the printer via phone's Bluetooth?

A: For Android, please make sure mobile phone's Bluetooth & Position turn on, and connect the printer in App, not in the phone settings; For iPhone, please connect directly in the App, not in the phone settings.

Q: Why does the printer work normally, but keeps printing blank labels?

A: Please make sure orientation of the label correct and printable side face down

Q: Why is the positioning inaccurate when printing transparent labels?

A: When print transparent labels, please set the paper type to "Cardstock / Transparent" before printing, the default is "Label". So please select the paper type to "Cardstock / Transparent" when create a new template, or change it to "Cardstock / Transparent" before printing.

Q: Does the printer support batch printing?

A: Printer supports batch printing of Excel tables, the first row needs column titles, save the excel once done, send it to your mobile phone, then open the file and select "Open in Other App", choose WePrint, next, you can print in batches after binding data.

the following measures:

Warning:

Increase the separation between the equipment and receiver.

Regrient or relocate the receiving antenna.

Connect the equipment into an outlet on a circuit different from that to which the receiver is

This device complies with Part 15 of the FCC Rules. Operation is subject to the following

received, including interference that may cause undesired operation.

void the user's authority to operate the equipment.

This device may not cause harmful interference, and This device must accept any interference

Changes or modifications not expressly approved by the party responsible for compliance could

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital

device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable

protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with

the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of

Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

This product complies with the radio interference requirements of the European Community

1. Install Editing Application

 
Scan the QR code to download label editing App (iOS and Android). Or search App name"WePrint from Google Play or App Store

2. Print from Computer

Label eidting software for PC, we recommend "WeiDa Online Web" version on browser. 回線線回

Printer driver installation is required.





Operation

Max. output Power

NB-RED Stateme

Product name: Portable Label Printer

Product model: DP40S

SIMPLIFIED EU DECLARATION OF CONFORMITY

The simplified EU declaration of conformity referred to in Article 10(9) shall be provided as follows: Hereby, DeTong Electronic Technology (Jiangsu) Co., Ltd. declares that radio equipment type DP40S is in compliance with

Directive 2014/53/EU. This product can be used across EU member states.

2402~2480MHz

-5.13dBm

BATTERY Warning: CAUTION:RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

SUCCESS COURIER SLCALLE RIO TORMES NUM.1, PLANTA 1, DERECHA, OFICINA 3, Fuenlabrada, Madrid, 28947 Spain successservice2@hotmail.com