
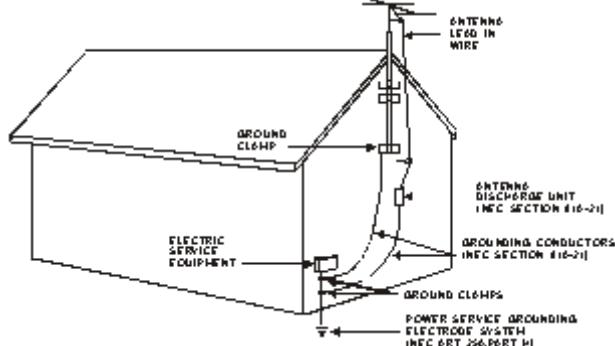


IMPORTANT SAFETY INSTRUCTION

Caution: Read This Before Operating Your Unit.

1. **READ AND FOLLOW INSTRUCTIONS:** All the safety and operation instructions should be read before the product is operated. Follow all operation instructions within this manual.
2. **RETAIN INSTRUCTIONS:** The safety and operation instructions should be retained for future reference.
3. **HEED WARNINGS:** Comply with all warnings on the product and in the operation instructions.
4. **CLEANING:** Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
5. **GROUNDING or POLARIZATION:** This product may be equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician since it is likely you have an out of date wall socket. Never force the plug into the socket.
6. **OVERLOADING:** Do not overload wall outlets or extension cords as this can result in the risk of fire or electric shock. Overloaded AC outlets, extension cords, frayed power cables, damaged or cracked wire insulation, and broken plugs are dangerous. They may result in electric shock or fire hazard. Periodically examine the power cable - if its appearance indicates damage or deteriorated receptacles have it replaced by your service technician.
7. **POWER SOURCES:** This product should be operated only from the type of power source indicated on the rear panel label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to be operated from battery power, or other sources, refer to the operation instructions.
8. **ACCESSORIES:** Do not place this product on an unstable surface or support. The product may fall, causing serious injury to a child or adult as well as serious damage to the product. Any mounting of the product should follow the manufacturer's instructions and use a mounting accessory recommended by the manufacturer. A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.
9. **OUTDOOR ANTENNA GROUNDING:** If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. The example below is for reference only. Correct grounding should always be installed by an electrician.

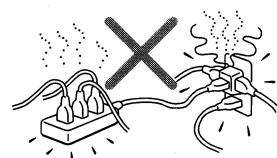






10. **POWER-CORD PROTECTION:** The power supply cables should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cables at plugs and the point where they exit from the product.
11. **ATTACHMENTS:** Do not use unauthorized attachments as they may cause faults with the unit.
12. **CONDITIONS REQUIRING SERVICE:** Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - a) If the unit exhibits sudden unusual operation or unusual display characteristics.
 - b) If the unit exhibits sudden unusual operation or unusual display characteristics.
 - c) If liquid has been spilled, or objects have fallen into the product.
 - d) If the product has been exposed to rain or water.
 - e) If the product does not operate normally by following the operation instructions, adjusting only those controls that are covered by the operation instructions. (**NOTE:** improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation).

- f) If the product has been dropped or damaged in any way.
- g) If the product exhibits a distinct change in performance.

IMPORTANT SAFETY INSTRUCTION

13. **SERVICING:** Do not attempt to service this product yourself as removing cover may expose you to dangerous voltages or other hazards. Refer all servicing to qualified service personnel.
14. **LIGHTNING:** For added protection for this product during a thunderstorm, or when it is left unattended and unused for long period of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power line surges.
15. **REPLACEMENT PARTS:** Should replacement parts be required, have the service technician verify that the replacement parts he uses have the same safety characteristics as the original parts. Use of unauthorized replacements parts can cause fire or electric shock.
16. **SAFETY CHECK:** Upon completion of any service or repairs to this product, ask the service technician to perform safety checks recommended by the manufacturer to determine that the product is in a safe operating condition.
17. **HEAT DISPERSION**--Leave at least 10 cm of space between the top, back and sides of the unit and the wall or other components for proper ventilation.
18. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

19. NOTES ON USE

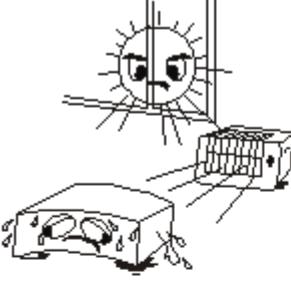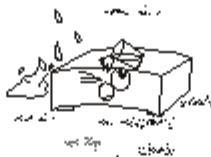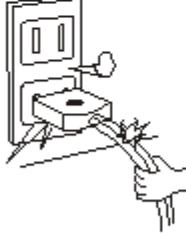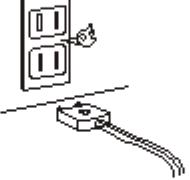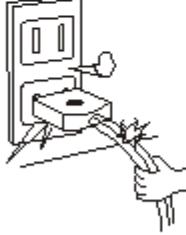 <ul style="list-style-type: none"> ● Avoid high temperatures Allow for sufficient heat dispersion when installed on a rack. 	 <ul style="list-style-type: none"> ● Keep the set free from moisture, water, and dust. 	 <ul style="list-style-type: none"> ● Do not let foreign objects in the set.
 <ul style="list-style-type: none"> ● Handle the power cord carefully. Hold the plug when unplugging the cord. 	 <ul style="list-style-type: none"> ● Unplug the power cord when not using the set for long periods of time 	 <ul style="list-style-type: none"> ● Do not let insecticides, benzene, and thinner come in contact with the set.
 <ul style="list-style-type: none"> ● Handle the power cord carefully. Hold the plug when unplugging the cord. 	 <ul style="list-style-type: none"> * (For sets with ventilation holes) ● Do not obstruct the ventilation holes 	 <ul style="list-style-type: none"> ● Never disassemble or modify the set in any way.

20. The main plug is used as the disconnect device, the disconnect device shall remain readily operable.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:


- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body.


NOTE 2: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Front panel

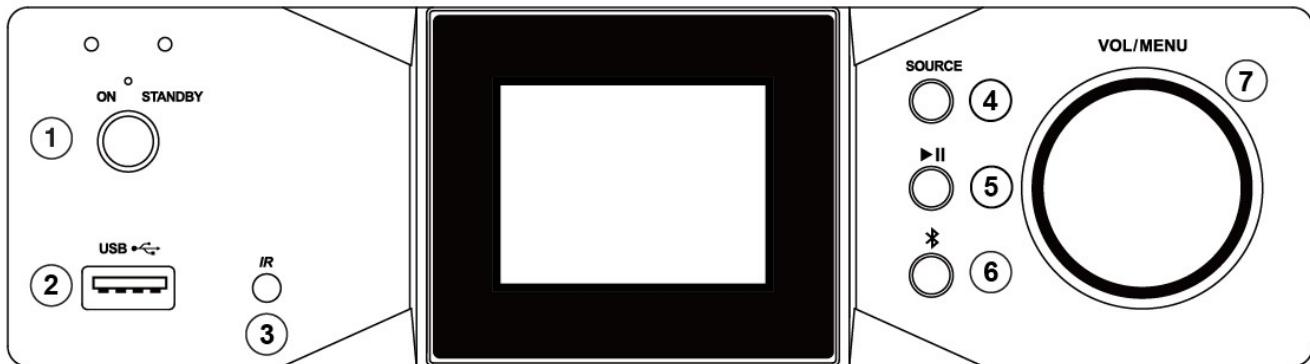


1. Power on and standby switch
2. USB socket
3. IR lens
4. Source list, use volume jog to select the source you want
5. Play/Pause for Media Player and BT playback
6. Bluetooth
7. Volume and menu. Rotate to adjust the volume. Short press to enter menu and select the option. Long press to the System setting.

Rear panel

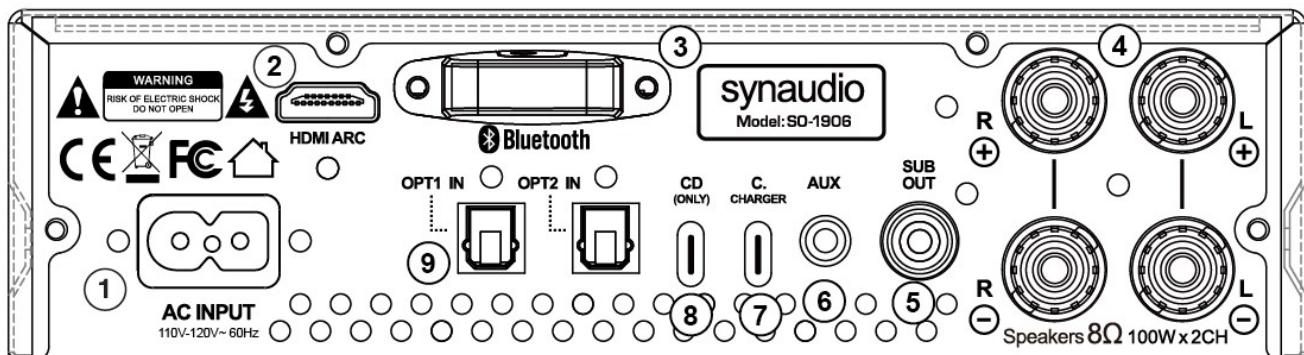

1. AC Input. Connect the power cord.
2. HDMI ARC. Connect your TV to this input if it has an HDMI port with ARC support.
3. Bluetooth dongle.
4. Speaker terminal. For the connection of stereo speakers with an impedance rating of 8 ohms (the correct polarity must be taken into account).
5. SUB OUT. Output for connecting an active subwoofer.
6. AUX INPUTS. Connecting other audio sources
7. C charger. Type C USB port for charging.
8. Connect the device to the series CD player.

Remote

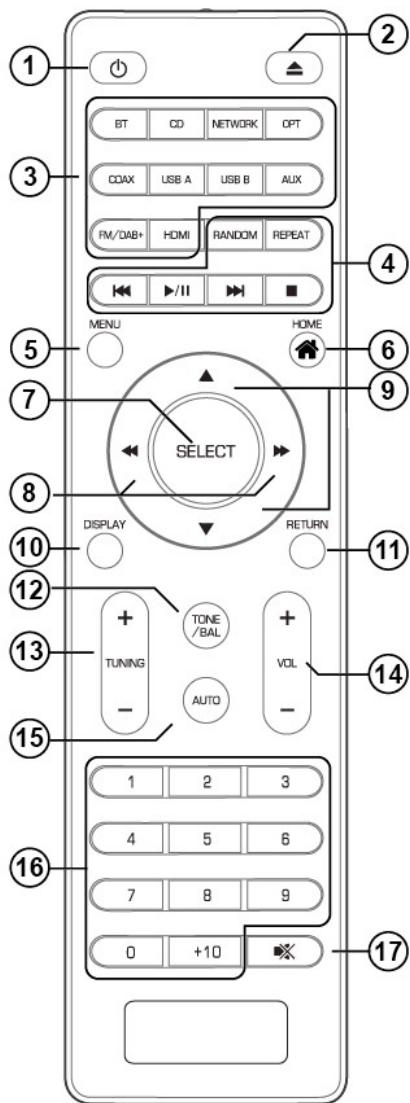

1. EJECT. Ejects or retracts the inserted CD.
2. INPUT SELECTON. These buttons enable direct selection of the individual audio inputs. The active input is indicated in the display
3. Playback Function button.
4. Menu. Press to enter menu option.
5. Home. Press to back to main menu.
6. Select. Short press to enter.
7. Fast forward/backward
8. Buttons to navigate up and down.
9. Display.
10. Return. Jumps one step backwards in the selection menu.
11. Tone/Bal. Adjust the bass/treble/balance.
12. TUNING. Adjust the frequency
13. Volume adjustment
14. Auto. Scans the frequency range for stations automatically.
15. NUMERICAL BUTTONS
16. MUTE. Switches the sound on and off.