



83\*83mm 105g 铜板纸 风琴折 黑白印刷



开放式蓝牙耳机

W105



**首次使用**

首次使用时，请先确认两个耳机和充电仓的电量是否满的。电量不足时请使用本产品自带的充电线进行充电，并选择正规厂家生产的充电器。

若产品超过21星期未使用,建议使用前对产品进行充电。

**开/关机**

自动开机：将充电仓打开，取出耳机后自动开机。

自动关机：将耳机放回充电仓中，耳机仓会断开蓝牙连接并自动关机。

**蓝牙配对连接** （配时请关闭蓝牙设置）

蓝牙耳机：拿出耳机并进入配对状态后，再打开蓝牙耳机搜索配对名“SANSUI +型号”，点击连接配对完成。

（如果搜索不到，请关闭手机蓝牙再打开重新连接。）

连接成功：有提示音提示。

自动连接：首次连接成功后，开机默认连接最后配对的设备。

（提示：部分手机输入“0000”作为配对密码）

**恢复出厂设置**

当出现左右耳不互联或者设备无法配对时，可按照以下操作进行重置：

- ① 先在手机删除掉“SANSUI”耳机的配对信息。
- ② 关 机：橙色指示灯亮后关机。
- ③ 耳机开机未连接状态下，连击5次左耳或右耳功能键后复位，耳机自动关机清除配对。
- ④ 重置耳机后，耳机所记录的配对信息已经被清除。请按“蓝牙配对”步骤重新连接后使用。

**其他功能**

**手动开机**



关机状态下，长按功能键3秒，耳机开机。

**超时未连接**

耳机将配对状态下，5分钟内未成功与设备连接，则自动关机。

**蓝牙断开连接**

连接成功时，若关闭手机蓝牙或者超出蓝牙有效连接距离（无障碍环境10m），则蓝牙断开连接，若5分钟内未成功与设备进行连接，则自动关机。

**音乐播放**

接听/暂停音乐：双击功能键

上一曲：三击左耳功能键

下一曲：三击右耳功能键

**游戏/音乐模式**

长按右耳功能键2秒

（南手机支持此功能）

**通话管理**

接听/挂断电话：双击功能键

拒接来电：长按功能键2秒

**语音控制**

长按左耳功能键2秒

（南手机支持此功能）

**指示灯状态**

**耳机指示灯**

- ① 开 机：橙蓝色指示灯交替闪烁
- ② 关 机：橙色指示灯亮后熄灭
- ③ 未 配 对：橙蓝色指示灯交替闪烁
- ④ 等待配对：主耳橙蓝色指示灯交替闪烁，副耳指示灯熄灭
- ⑤ 配对成功：指示灯熄灭
- ⑥ 音乐状态：指示灯熄灭
- ⑦ 通话状态：指示灯熄灭
- ⑧ 游戏模式：蓝色指示灯呈呼吸灯效
- ⑨ 低 电 量：橙色指示灯常亮，有提示音
- ⑩ 充电状态：橙色指示灯常亮
- ⑪ 充电完成：指示灯熄灭

**充电仓指示灯**

- ① 充 电 中：橙色指示灯闪烁
- ② 充 电 完 成：橙色指示灯常亮
- ③ 电 量 低：蓝色指示灯闪烁至熄灭
- ④ 对耳机充电：蓝色指示灯常亮
- ⑤ 耳机充电完成：指示灯熄灭

**注意事项**


- 1.请勿在行驶中拆机、维修或改装耳机，否则可能会导致火灾、电子击穿甚至损坏内部产品。
- 2.请勿将产品置于温度过高或过低(高于45℃或低于-15℃)的环境下。
- 3.产品指示灯开启时，请勿直视，并远离儿童及动物的眼睛。
- 4.请勿在雷雨天使用本产品，雷雨天可能会导致设备损坏或发生电击危险。
- 5.请勿使用腐蚀性化学品、清洗剂或强洗剂清洁设备或配件。
- 6.请勿将设备靠近热源或易燃物(如火、电暖器、微波炉、烤箱、热水器、炉火等)或它们可能产生高温的地方。
- 7.请勿长时间大声聆听音乐会造成听力损害，使用该设备时请调整到适当音量。
- 8.请勿自行更换电池，本设备配有不可拆卸的内置电池，以免损坏电池或设备。不建议私自更换。
- 9.请勿将磁条卡(如银行卡、电话卡等)长期接触本产品，否则可能导致磁条卡被磁化损坏。
- 10.请清洁和维护耳机，请正确使用本产品，关闭所有应用，并断开与其他设备的的所有连接继续使用。

**警告**

 
- 1.禁止拆解、撞击、挤压或使设备投入火中、落入液体中，以免引起电池泄漏短路、起火或爆炸。
- 2.本设备并非玩具，儿童应在成人监护下使用本产品设备或配件。
- 3.本设备严禁剧烈撞击禁止摔落等。
- 4.禁止置于高温液体中，远离火源。
- 5.电池浸水或其它液体中请停止使用。

**山水永迈 (深圳) 科技有限公司**  
**SANSUI Yongmai (SHENZHEN) Technology Co., LTD**

① 深圳市龙华区大浪街道十娘村社区联建产业园1栋5楼1202  
 ② 国家服务热线：400-8922-866  
 ③ [www.sansui.com](http://www.sansui.com)  
 Address: Room 1202, Block D, Building 1, Lianjian Industrial Park, Shangshenglang Community, Dalang Street, Longhua District, Shenzhen  
 E-Mail: [gm@yongmaitech.com](mailto:gm@yongmaitech.com)



**Open Wireless Headset**  
W105



### FIRST USE

Before first use, please confirm earbuds and charge case battery volume full. If battery low, please use the charging cable provided in our product pack, and select the certified charging device.

If the product not use over 2 weeks, suggest you charge our product before use.

### POWER ON/OFF

**Power on automatically:** Open the charge case, take earbuds out that will power on automatically.

**Power off:** Put the earbuds back to the charge case, earbuds will disconnected Wireless that power of automatically.

### WIRELESS PAIRING CONNECTION

Wireless pairing: Pairing status turn on when the earbuds power on. Then open the Bluetooth device and search for the pairing name "SANSUI + model", and click Connect to complete the pairing.

Connecting successfully: Prompt tone.

Connecting successfully: After first connecting successfully, the default connecting device is the last successful device.

(Note: parts of phone need type "0000" as pairing password)

### RESET TO FACTORY MODE

When Left/Right earbud is not connects each other and device cannot pair, the following operation that we can reset earbuds.

1. Delete the "SANSUI" earbuds pairing information on the device.
2. When the earbuds power on but not connection, tap 5 times Left/Right earbuds function button to reset, earbuds will power off and remove pairing information.
3. After reset the earbuds, records information of earbuds has already been deleted. Please according to the "Wireless pairing" steps to reconnection and use.

### OTHER FUNCTION

**Power On Manually**

Power off status, press & hold function button 3 seconds, earbuds power on.

### Unconnected by overtime

Earbuds on the preparing status, not connected with device and connecting unsuccessfully in 5 mins, will power off automatically.

### Wireless disconnection

After connecting successfully, if turn the phone Wireless off or over the Wireless effective connection distance (no-obstacles environment 10m), Wireless disconnection, if 5 mins not connected with device and connecting unsuccessfully, earbuds power off automatically.

### INDICATE LIGHT STATUS

**Earbuds indicate light**

- 1 Power on: Orange and blue indicator lights flash alternately
- 2 Waiting for pairing: Orange indicator lights up and then turns off
- 3 Unpaired: Orange and blue indicator lights flash alternately
- 4 Pairing successful: indicator light turns off
- 5 Music status: indicator light turns off
- 6 Call status: indicator light turns off
- 7 Game mode: Blue indicator light shows breathing effect
- 8 Low power: Orange indicator light flashes, with a prompt tone
- 9 Charging status: Orange indicator light turns on
- 10 Charging completed: indicator light turns off

### Game/Music mode

Press Right function button 2 seconds

### Music play

Play/Pause music: Double tap function button

Previous song: Triple tap Left function button

Next song: Triple tap Right function button

### Calling manage

Taking /hang up the calling: Double tap function button

Reject calling: Press & hold function button 2 seconds

### CAUTION

1. Do not disassemble, repair, or modify the earbuds for any reason, otherwise it may cause fire, electronic breakdown or even considerably damage the product.
2. Do not place the product in an environment where the temperature is too low or too high (below 0°C or above 40°C).
3. When the product indicator lights on, do not shake directly and keep away from the edge of children and animals.
4. Do not use the device during thunderstorms. Thunderstorms may cause electrical shock or risk of electric shock.
5. Do not use thin chemicals, cleaning agents or strong detergents to clean equipment or accessories.
6. Do not place the device close to heat sources or exposed fire sources, such as electric heaters, microwave ovens, water heaters, shower cabins, or other places that they generate high temperatures.
7. Headset do not babies or children of high volume for a long time, which may cause hearing damage. Please adjust the volume to an appropriate level every time using the device.
8. Please do not replace the battery by yourself. The device is designed to replace a non-rechargeable built-in battery to avoid damaging the battery or the device. It is not recommended to replace a non-rechargeable built-in battery to avoid damaging the battery or the device.
9. Do not reuse magnetic tools such as bank cards, phone cards, etc. in contact with the device for a long time, otherwise the magnetic card may be damaged by the magnetic field.
10. Before charging and servicing, stop using the device, close all applications, and disconnect all connectors or cables from other devices.

### WARNING

1. It is prohibited to disassemble, inspect, the headset. Please do not touch, or use foreign objects to avoid battery leakage, connecting, fire, or explosion.
2. This device is not a toy. Children play with the headset under the supervision of their adult supervisors.
3. Avoid playing outdoors, it is prohibited to connect using it.
4. Do not place it in a high temperature environment and keep away from the sun, sparks, or other flames.
5. It is prohibited to use the device when the battery is overcharged and away from other flames.

### 产品保修卡 / Warranty card

该卡为产品保修凭证，请妥善保管  
This card is a warranty certificate, please keep it properly

产品名称 Product name	产品型号 Product model
购买日期 Purchase date	客户名称 Customer name
联系方式 Contact	

### 产品维修记录 / Product fixed record

日期 Date	不良现象 Defective phenomenon	解决方案 Solution

## FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

### RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.