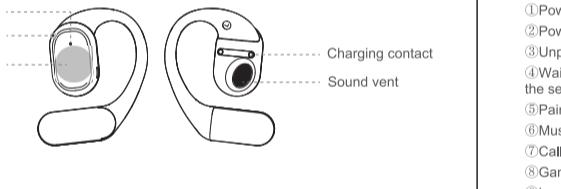


83\*83mm 80g 书写纸 风琴折 黑白印刷

|  |  |  |  |   |  |
|--|--|--|--|---|--|
|  <p><b>SANSUI</b><br/>开放式蓝牙耳机<br/>(W12)</p> | <p><b>首次使用</b><br/>首次使用前,请先确认两个耳机和充电仓的电量是满的,电量不足时请使用本产品配带的充电线进行充电,并选择正规厂家生产的充电设备。若产品超过2个星期未使用,建议使用前先对产品进行充电。</p> <p><b>开/关机</b><br/>自动开机: 将充电仓开盖, 取出耳机后自动开机。<br/>自动关机: 将充电仓合盖, 将耳机放入充电仓中, 其会自动断开蓝牙连接并自动关机。</p> <p><b>蓝牙配对连接</b> (需对首先关闭蓝牙设备)<br/>蓝牙配对: 拿出耳机放入配对状态下, 再打开蓝牙设备搜索配对名为“SANSUI +型号”, 点击连接即可完成。<br/>(如果搜索不到, 请关闭手机蓝牙再打开重新连接)<br/>连接成功: 有语音提示。</p> <p><b>自动回连</b>: 首次连接成功后, 开机默认连接最近配对的设备。<br/>(提示: 部分手机需输入“0000”作为配对密码)</p> | <p><b>恢复出厂设置</b><br/>当出现左右耳不互联或者设备无法配对时, 可按照以下操作进行重置:<br/>①先在手机端删除“SANSUI”耳机的配对信息。<br/>②耳机开机未连接状态下, 连击5次左耳或右耳功能键后复位, 耳机自动关机清除配对。<br/>③重新开机后, 耳机所记录的配对信息已经被清除。请按“蓝牙配对”步骤重新连接后使用。</p> <p><b>其他功能</b><br/><b>手动开/关机</b><br/>关机状态下: 长按功能键3秒, 耳机关机。<br/>开机状态下: 长按功能键5秒, 耳机会断开连接并关机。<br/><b>超时未连接</b><br/>耳机待配对状态下, 5分钟内未成功与设备连接, 则自动关机。<br/><b>蓝牙断开连接</b><br/>连接成功后, 若关闭手机蓝牙或者超出蓝牙有效连接距离 (无障碍环境10m), 则蓝牙断开连接, 若5分钟内未成功与设备进行连接, 则自动关机。</p> |  <p><b>指示灯状态</b><br/><b>耳机指示灯</b></p> <ul style="list-style-type: none"> <li>①开机: 白色指示灯亮</li> <li>②关机: 白色指示灯亮后熄灭</li> <li>③未配对: 白色指示灯闪烁</li> <li>④等待配对: 主耳白色指示灯闪烁, 副耳指示灯熄灭</li> <li>⑤配对成功: 指示灯熄灭</li> <li>⑥音乐状态: 指示灯熄灭</li> <li>⑦通话状态: 指示灯熄灭</li> <li>⑧游戏模式: 白色指示灯呈呼吸灯效</li> <li>⑨电量: 白色指示灯闪烁, 有提示音</li> <li>⑩充电状态: 白色指示灯常亮</li> <li>⑪充电完成: 指示灯熄灭</li> </ul> <p><b>充电仓指示灯</b></p> <ul style="list-style-type: none"> <li>①充电: 中: 蓝色指示灯闪烁</li> <li>②充电完成: 蓝色指示灯常亮</li> <li>③电量低: 白色指示灯闪烁至熄灭</li> <li>④对耳机充电: 白色指示灯常亮</li> <li>⑤耳机充满电: 指示灯熄灭</li> </ul> | <p><b>注意事项</b></p> <ol style="list-style-type: none"> <li>1. 请勿以任何理由拆开、维修或改装耳机, 否则可能会导致起火、电子穿孔甚至彻底损坏本产品。</li> <li>2. 请勿将产品置于温度过低或过高(0°C以下或45°C以上)的环境。</li> <li>3. 产品指示灯亮时, 请勿直视, 并远离儿童或动物的接触。</li> <li>4. 请勿在雷雨天气使用本设备, 雷雨天气可能会导致设备故障或电击危险。</li> <li>5. 请勿使用易燃性化学物品、清洁剂或洗涤剂清洁设备或其部件。</li> <li>6. 请勿将设备置于热源或靠近热源, 如电视、微波炉、烤箱、热水器、炉火蜡烛或其他可能产生高温的物品。</li> <li>7. 请勿在雷雨天气使用本设备, 雷雨天气可能会导致设备故障或电击危险。</li> <li>8. 请勿将设备置于热源或靠近热源, 如电视、微波炉、烤箱、热水器、炉火蜡烛或其他可能产生高温的物品。</li> <li>9. 请勿将磁卡(例如银行卡、电话卡等)长期接触本设备, 否则可能会导致磁卡被磁化或损坏。</li> <li>10. 清洁和维护时, 请停止使用本设备, 关闭所有应用, 并断开与其他设备的所有连接或线缆。</li> </ol> <p><b>△ 警告</b></p> <ol style="list-style-type: none"> <li>1. 禁止拆解、撞击、挤压、电池放入火中、插入异物, 以免引起电池漏液过热、起火或爆炸。</li> <li>2. 本设备并非玩具, 儿童应在成人监护下使用本设备配件要求。</li> <li>3. 请勿将声带胶带禁上继续使用。</li> <li>4. 禁止置于高温环境中, 避免火灾。</li> <li>5. 电池浸水或其它液体中后禁止使用。</li> </ol> |  <p>天籁音控<br/>扫描下看APP解锁更多乐趣</p> <p><b>山水永迈(深圳)科技有限公司</b><br/>SANSUI Yongmai (SHENZHEN) Technology Co., LTD</p> <p>① 深圳市龙华区大浪街道上横朗社区联建产业园1栋D座1202<br/>② 全国服务热线: 400-8922-866<br/>③ <a href="http://www.sansuimall.com">www.sansuimall.com</a><br/>Address: Room 1202, Block D, Building 1, Lianjian Industrial Park, Shangchenglou Community, Dalang Street, Longhua District, Shenzhen<br/>E-Mail: gm@yongmaitech.cn</p> |
|--|--|--|--|---|--|

|  <p><b>SANSUI</b><br/>Open Wireless Headset<br/>(W12)</p> | <p><b>FIRST USE</b><br/>Before first use, please confirm earbuds and charge case battery volume full. If battery low, please use the charging cable provided in our product pack, and select the certified charging device.<br/>If the product not use over 2 weeks, suggest you charge our product before use.</p> <p><b>POWER ON/ OFF</b><br/>Power on automatically: Open the charge case, take earbuds out that will power on automatically.<br/>Power off: Put the earbuds back to the charge case, earbuds will disconnect Wireless that power off automatically.</p> <p><b>WIRELESS PAIRING CONNECTION</b><br/>When the earbuds previous turn on when the earbuds power on, Then open the Bluetooth device and search for the pairing name “SANSUI + model”, and click Connect to complete the pairing.<br/>Connecting successfully: Prompt tone.<br/>Connecting successfully: After first connecting successfully, the default connecting device is the last connection device.<br/>(Note: parts of phone need type “0000” as pairing password)</p> | <p><b>RESET TO FACTORY MODE</b><br/>When Left/Right earbud are not connects each other and device cannot pair, the following operation that we can reset earbuds:<br/>1. Delete the “SANSUI” earbuds pairing information on the device.<br/>2. When the earbuds power on but not connection, tap 5 times Left/Right earbuds function button to reset, earbuds will power off and remove pairing information.<br/>3. After reset the earbuds, records information of earbuds has already been deleted, Please according to the “Wireless pairing” steps to re-connection and use.</p> <p><b>OTHER FUNCTION</b><br/><b>Power On/Off Manually</b><br/>Power off status, press &amp; hold function button 3 seconds, earbuds power on.<br/>Power on status, press &amp; hold function button 5 seconds, earbuds will disconnect and power off.</p> <p><b>Unconnected by overtime</b><br/>Earbuds on the pre-pairing status, not connected with device and connecting unsuccessfully in 5 mins, will power off automatically.</p> <p><b>Wireless disconnection</b><br/>After connecting successfully, if turn the phone Wireless off or over the Wireless effective connection distance (no-obstacles environment 10m), Wireless disconnection; if 5 mins not connected with device and connecting unsuccessfully, earbuds power off automatically.</p> |  <p><b>INDICATE LIGHT STATUS</b><br/><b>Earbuds indicate light</b></p> <ul style="list-style-type: none"> <li>① Power on: white indicator light on</li> <li>② Power off: white indicator light on and then off</li> <li>③ Unpairing: white indicator light flashes</li> <li>④ Waiting for pairing: white indicator light flashes on the main ear, and indicator light on the secondary ear is off</li> <li>⑤ Pairing successful: indicator light off</li> <li>⑥ Music status: indicator light off</li> <li>⑦ Game mode: indicator light off</li> <li>⑧ Low power: white indicator light flashes</li> <li>⑨ Charging status: white indicator light always on</li> <li>⑩ Charging completed: indicator light off</li> </ul> <p><b>Charging bay indicator light</b></p> <ul style="list-style-type: none"> <li>① Charging: Blue indicator light fast</li> <li>② Charging completed: Blue indicator light on</li> <li>③ Low Battery: White indicator light fast off</li> <li>④ Charging to earbuds: White indicator light on</li> <li>⑤ Earbuds charging fully: Indicate light off</li> </ul> | <p><b>CAUTION</b></p> <ol style="list-style-type: none"> <li>1. Do not disassemble, repair, or modify the earbuds for any reason, otherwise it may cause fire, electronic breakdown or other damage.</li> <li>2. Do not place the product in an environment where the temperature is too low or too high (below 0°C or above 45°C).</li> <li>3. When the product indicator light is on, do not look directly into it and keep away from the eyes of children and animals.</li> <li>4. Do not use this device during thunderstorms. Thunderstorms may cause equipment failure or risk of electric shock.</li> <li>5. Do not place the device close to heat sources or expose the source, such as electric heaters, microwave ovens, ovens, etc.</li> <li>6. Please do not listen to music at high volume for a long time, which may cause hearing damage. Please adjust the volume to a moderate level.</li> <li>8. Please do not replace the battery by yourself. This device is equipped with a non-removable built-in battery to avoid damaging the battery or the device. It is not recommended to replace it with a permanent external battery.</li> <li>9. Do not expose the device to strong magnetic fields for a long time, otherwise the magnetic stripe card may be damaged by the magnetic field.</li> <li>10. After cleaning and servicing, stop using the device, disconnect all applications, and disconnect all connections or cables from other devices.</li> </ol> <p><b>△ WARNING</b></p> <ol style="list-style-type: none"> <li>1. It is prohibited to disassemble, impact, squeeze the battery, throw it into a fire, or insert foreign objects to avoid battery leakage, overheat, fire, or explosion.</li> <li>2. Do not place the device in a high temperature environment and keep away from fire.</li> <li>3. If severe bulging occurs, it is prohibited to continue using it.</li> <li>4. Do not place it in a high temperature environment and keep away from fire.</li> <li>5. It is prohibited to use this device when the battery immersed in water or other liquids.</li> </ol> | <p><b>产品保修卡 / Warranty card</b><br/>该卡为产品保修凭证, 请妥善保管<br/>This card is a warranty certificate, please keep it properly</p> <table border="1"> <tr> <td>产品名称<br/>Product name</td> <td>产品型号<br/>Product name</td> </tr> <tr> <td>购买日期<br/>Purchase date</td> <td>客户名称<br/>Customer name</td> </tr> <tr> <td>联系方式<br/>Contact</td> <td></td> </tr> </table> <p><b>产品维修记录 / Product fixed record</b></p> <table border="1"> <thead> <tr> <th>日期<br/>Date</th> <th>不良现象<br/>Defective phenomenon</th> <th>解决方案<br/>Solution</th> </tr> </thead> <tbody> <tr> <td></td> <td></td> <td></td> </tr> <tr> <td></td> <td></td> <td></td> </tr> <tr> <td></td> <td></td> <td></td> </tr> </tbody> </table> | 产品名称<br>Product name | 产品型号<br>Product name | 购买日期<br>Purchase date | 客户名称<br>Customer name | 联系方式<br>Contact |  | 日期<br>Date | 不良现象<br>Defective phenomenon | 解决方案<br>Solution |  |  |  |  |  |  |  |  |  |
|--|---|--|--|--|---|----------------------|----------------------|-----------------------|-----------------------|-----------------|--|------------|------------------------------|------------------|--|--|--|--|--|--|--|--|--|
| 产品名称<br>Product name   | 产品型号<br>Product name  |  |  |  |   |                      |                      |                       |                       |                 |  |            |                              |                  |  |  |  |  |  |  |  |  |  |
| 购买日期<br>Purchase date  | 客户名称<br>Customer name   |  |  |  |   |                      |                      |                       |                       |                 |  |            |                              |                  |  |  |  |  |  |  |  |  |  |
| 联系方式<br>Contact  |   |  |  |  |   |                      |                      |                       |                       |                 |  |            |                              |                  |  |  |  |  |  |  |  |  |  |
| 日期<br>Date   | 不良现象<br>Defective phenomenon  | 解决方案<br>Solution   |  |  |   |                      |                      |                       |                       |                 |  |            |                              |                  |  |  |  |  |  |  |  |  |  |
|  |   |  |  |  |   |                      |                      |                       |                       |                 |  |            |                              |                  |  |  |  |  |  |  |  |  |  |
|  |   |  |  |  |   |                      |                      |                       |                       |                 |  |            |                              |                  |  |  |  |  |  |  |  |  |  |
|  |   |  |  |  |   |                      |                      |                       |                       |                 |  |            |                              |                  |  |  |  |  |  |  |  |  |  |

## FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

### RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.