

# 70×105MM 风琴折页

正面：



**SANSUI**  
Mini portable **KTV**  
Portable Wireless Speaker

**D68** INSTRUCTION MANUAL

**Preface**

Thank you for purchasing our company's latest portable speaker product. It can connect to any device with Wireless function, turning it into the ultimate speaker system, allowing you to enjoy high-definition sound quality like live listening when watching movies, playing games, and listening to music.

Before using this product, please read this manual carefully. Please keep this manual for easy reference next time. All contents have been carefully written by our company. Please forgive any printing and omission problems or errors. Thank you again!!

\*Note 1. This product does not come with a power adapter. If consumers use a power adapter, they should purchase a power adapter that has obtained CCC certification and meets standard requirements!

2. Improper battery replacement may cause explosion. Only batteries of the same or equivalent type can be replaced. Please contact technical and maintenance professionals.

**Product Usage Precautions**

(1) Do not use this device in extremely hot or cold, dusty or humid environments.

(2) Do not drop, hit or vibrate the device during use.

(3) The device should be properly ventilated, otherwise it may cause the temperature inside the device to rise and eventually damage the circuit.

(4) When moving the device, turn it off and disconnect the corresponding connection cables with other devices.

(5) The surface of the speaker and the speaker should be kept away from corrosive liquids and gases, and should not be placed in direct sunlight for a long time. If there is dust, clean it regularly with a clean soft cloth. If there are stains, wipe it with a detergent without enhancers.

(6) Do not press the switch or other components with force.

(7) If the device suddenly smokes or has other abnormal phenomena, please turn it off immediately, unplug the charging plug to avoid accidents, and contact the local dealer for repair.

(8) Changes in product performance and functions will not be notified separately.

(9) This product is not dustproof, moisture-proof.

(10) Please do not disassemble the machine without authorization to avoid danger.

**Function Introduction**

D68 supports Wireless connection to play music, supports TF card to play music, supports U disk to play music, has built-in reverberation sound effect function, has built-in colorful LED lights, supports 3.5 audio input, and is fully compatible with current mainstream mobile phones. Whether you are an Apple Karaoke fan or an Android Karaoke fan, you can easily enjoy the pleasure of Karaoke.




**D68 speaker function instructions**

① **M key:** short press mode switch, support Wireless, USB/TF card/AUX mode (Note: need to insert audio cable U disk/TF card to switch);  
 ② **▶ key:** short press music pause/play;  
 ③ **+** key: long press to switch to the next song; short press music volume/accompaniment volume gradually increases;  
 ④ **-** key: long press to switch to the previous song; short press music volume/accompaniment volume gradually decreases;  
 ⑤ **● key:** long press to turn on or off the speaker power;  
 ⑥ **EO key:** short press to switch lighting mode; long press to turn off/on the light;  
 ⑦ **AUX audio input hole:** you can use one end of the audio cable to insert the AUX audio interface, and then connect the other end to the mobile phone or computer interface to play music;  
 ⑧ **Type-C charging port:** connect the USB plug of the Type-C charging cable equipped with the speaker to the USB charger port with DC5V, and connect the Type-C charging head to the DC5V socket on the speaker to charge the speaker;  
**Charging indicator light:** the red indicator light is on when the device is charging, and the light is off when it is fully charged;  
 ⑨ **TF card port:** insert a TF card into the TF card slot to automatically switch to card reader mode to play music;  
 ⑩ **USB port:** insert a USB flash drive into the USB port to automatically switch to USB flash drive mode to play music.

**Microphone function operation instructions**

① **Power button:** long press to turn the microphone on/off; Short press to switch (microphone/reverb/accompaniment volume mode), after switching to the corresponding mode, you can adjust the volume through the +/ - button; double-click to play/pause music;  
 ② **+ button:** short press to adjust the volume to gradually increase (microphone/reverb/accompaniment mode); long press to switch to the previous song;  
 ③ **- button:** short press to adjust the volume to gradually decrease (microphone/reverb/accompaniment mode); long press to switch to the next song;  
 ④ **Microphone button:** short press to switch between professional mode and KTV mode and microphone voice changing effects (original voice/male to female female to male/loli mode mode/Warcraft mode); double-click to turn on/off the original sound;  
 ⑤ **Indicator light:** After the microphone is turned on, the blue light flashes constantly, indicating that the microphone and the speaker are being paired. The speaker needs to be turned on. The blue light is always on. If the pairing is successful, you can speak to the microphone or sing karaoke; the red indicator light is on to indicate that the microphone is charging, and the light is off when it is fully charged;  
 ⑥ **Type-C charging port:** Connect the USB plug of the Type-C charging cable provided with the speaker to the USB charger port with DC5V, and connect the Type-C charging head to the DC5V socket on the microphone to charge the microphone.

**Product accessories**

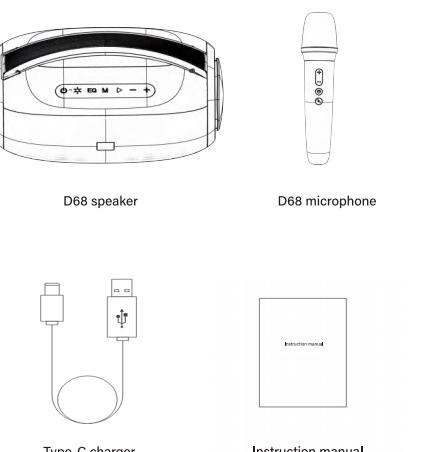

**Accessory list**

D68 speaker x1 Microphone x2 Instruction manual x1  
Type-C charging cable x1 Strap x1

**SANSUI Yongmai (SHENZHEN) Technology Co., LTD**  
Address: Room 1202, Block D, Building 1, Lianjian Industrial Park, Shanghe Lang Community, Dalang Street, Longhua District, Shenzhen  
E-Mail: gm@yongmaitech.cn

背面：

**Product Specifications**

Product model: D68 Frequency response: 20Hz-20KHz  
Wireless version: V5.3 Wireless distance: < 10 meters  
Input specification: DC5V Charging interface: Type-C  
Host size: 280\*150\*185mm Microphone size: 43\*28\*189mm  
Input specification: 7.4V 2000mAh (speaker) 500mAh (microphone)  
Product function: USB, TF card, AUX, cancel original sound, support microphone fun voice change magic sound effect

**Kind tipsns**

When singing karaoke with the original sound turned off (i.e. the original song is playing), it is recommended that the music volume/accompaniment volume should not be turned up to the maximum value. It is better to adjust the volume to about 80% or turn off the original song.

Note: The company is constantly committed to improving the quality and performance of its products. If there are any updates to the technology and design of the products, we will not notify you separately. The company reserves the right to continuously improve the products. Please refer to the actual product for the function.

**Wireless connection method**

- Long press the D68 speaker power button to turn it on, and the voice prompt "Wireless mode" will sound.
- Turn on the mobile phone Wireless and scan, search for "SANSUI D68" and pair and connect. After connecting, you can hear the device send a successful connection prompt tone.
- D68 speaker will automatically pair with D68 speaker after turning on. If it is not paired, the blue light of the microphone will flash quickly: the blue light will stay on after successful pairing.

Note: After the device is connected to the mobile phone once, the Wireless has a memory function and will automatically connect after turning on. If you need to disconnect, you can disconnect the Wireless through the mobile phone settings. If you only listen to music, you can adjust the microphone volume to the minimum.

**Notes on using D68 wireless karaoke microphone & speaker**

**Troubleshooting**

When using the product, if the method of use is incorrect, the following symptoms may be found, which may be considered a malfunction. Please confirm on the table below before troubleshooting. If the symptoms are still not improved, please contact the sales store customer service.

Problem	Possible cause	Solution
No power	Maybe it's out of power	Please connect to a power source to charge
No sound	Please check if the device is connected correctly	Is the connection between this product and the connected device established? Please make sure whether the MicroSD card is correctly inserted.
BT	The connected Wireless device is far away from this product Are there any wireless WLAN access points, other 2.4GHz band wireless equipment, electronic equipment, etc. nearby? Are there obstacles that cause interference between this product and the connected device?	Please use the connected Wireless device and this product close together. Please use away from devices that are considered to be sources of radio wave interference. Please avoid obstacles, or use after removing obstacles
BT	Please check if the Wireless device function is muted. Please check if this product is connected to other devices. If the product is set to a mode other than Wireless. Please check if there are other Wireless devices nearby.	Reconnect Wireless pairing and confirm. Please turn off the power of other Wireless devices, or disable the Wireless function to cancel pairing. Please press the "M" button on the speaker to switch to Wireless mode. Please turn off the power of other Wireless devices, or perform pairing operations away from the device.

**Precautions**

**Warn**

- Disassembly is prohibited  
Do not disassemble this product by yourself, otherwise it may cause fire or electric shock.
- Disassembly is prohibited  
Do not repair or modify the product by yourself, otherwise it may cause electric shock. Please entrust the sales store or our customer support center to inspect and repair the product.
- Notice  
Do not use for purposes other than those specified in the instructions, as this may result in injury or accidents.
- Warn  
Not for business use. This product is for general household use. Do not use it for business purposes.
- Warn  
Do not insert your fingers or foreign objects into the gaps of the product, otherwise it may cause personal injury or malfunction.
- Warn  
Never use it near water or in the bathroom. Do not store it in a humid place. Otherwise, it may cause short circuit, electric shock and other malfunctions.
- Warn  
Do not use or store the product in dusty, fumes, high temperature, or high humidity locations, as this may cause malfunctions.

**FCC Caution**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
 -- Reorient or relocate the receiving antenna.  
 -- Increase the separation between the equipment and receiver.  
 -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
 -- Consult the dealer or an experienced radio/TV technician for help.

**Product inspection certificate**

Product inspection: **QC 2025.7 PASS**  
Inspector: \_\_\_\_\_ Quantity: \_\_\_\_\_  
Code: \_\_\_\_\_ Production date: \_\_\_\_\_  
Implementation standard: \_\_\_\_\_

**Warranty card (Please keep this card for warranty)**

User profile: \_\_\_\_\_ Year \_\_\_\_\_ Month \_\_\_\_\_ Day  
User name: \_\_\_\_\_  
Correspondence address: \_\_\_\_\_  
Contact number: \_\_\_\_\_  
Product name and specifications: \_\_\_\_\_  
Distributor signature: \_\_\_\_\_

**Warranty Terms**

- Unless otherwise specified, from the date of purchase, if the product purchased has quality problems (not product software failure), the user can choose to return the product within 7 days; the replacement period is 15 days; the warranty period is 12 months;
- If the user encounters product quality problems, he can ask the service department designated by our company for three-guarantee service. If delivery is required, the user shall bear the relevant costs such as delivery;
- When the user requests three-guarantee service, he shall actively provide this valid warranty service certificate or invoice;
- Extra services provided by the three-guarantee service of the product shall be charged in accordance with relevant regulations. The warranty period of the product after the paid repair is 3 months from the date of pickup or shipment;
- The three-guarantee service provided by our company is limited to products with quality problems, and does not include compensation for the loss of the consumer's interests, losses caused by accidents and any other indirect or direct losses;
- The user shall take the initiative to fill in these certificates as required at the seller where the purchase is made. Our company shall not be responsible for the consequences of not filling in these certificates as required, nor for the seller's promises to the user beyond the warranty service regulations.