

4—出二模L285*100MM风琴折

<h2>Portable three mode wireless keyboard</h2> <p>Bluetooth+2.4G</p>    <p>For better usage experience of the product, please read this manual before using it.</p> <p>Model: K919</p>	<p>Product features:</p> <ul style="list-style-type: none"> 1. Support switching back and forth across devices 2. Three system mode switching, the mainstream equipment of the general market 3.Bluetooth 3.0 + 2.4G is better compatible with new and old devices 4.Connect version 5.0 to hibernate and wake up faster 5. With high frequency equipment switching, the keyboard works smoothly <p>Connection Description: Note: Please the secret key is fix below left corner of the keyboard.</p> <ol style="list-style-type: none"> 1.Turn the power switch to ON to turn on the keyboard 2. Hold FN + 1, then press 1, and then press and hold for 3 seconds. Press and hold FN, then press 1, and then press and hold for 3 seconds, the blue light flashes, and Bluetooth device 1 enters the searched state on the device side-open the system settings—turn on Bluetooth—search and add <p>Multi-device connection:</p> <ol style="list-style-type: none"> 1.FN + Q1: Connecting the first device 1 2.FN + Q2: Connecting the second device 2 3.FN + E: Connecting USB wireless reception 4.FN + W: Connecting the third device 3 5.FN + Q,W: combined long press for 3 seconds flashing light, can start the searched state (connect new equipment) <p>Connection supplement:</p> <ol style="list-style-type: none"> 1.The initial connection keyboard needs to switch the device to the corresponding system (Windows) 2.If the system is not switched, the function key may not work normally! 3.The use of keyboard is 5-10m, and the distance is related to different equipment and environmental factors 	<p>FN combination function key:</p> <table border="1"> <thead> <tr> <th></th> <th>Connection switching</th> <th>Multimedia buttons</th> </tr> </thead> <tbody> <tr> <td>FN + Connection</td> <td>Search</td> <td>FN + F1</td> <td>Search</td> </tr> <tr> <td>FN + F1</td> <td>fasting light consent to add new device</td> <td>FN + F2</td> <td>Media</td> </tr> <tr> <td>FN + F2</td> <td>Search to switch wireless reception</td> <td>FN + F3</td> <td>screenshots</td> </tr> <tr> <td>FN + F3</td> <td>Apple iOS mode</td> <td>FN + F4</td> <td>screen</td> </tr> <tr> <td>FN + F4</td> <td>Windows mode</td> <td>FN + F5</td> <td>Home</td> </tr> <tr> <td>FN + F5</td> <td>Windows mode</td> <td>FN + F6</td> <td>In a song</td> </tr> <tr> <td>FN + F6</td> <td>Windows 1.0</td> <td>FN + F7</td> <td>Play/Pause</td> </tr> <tr> <td>FN + F7</td> <td></td> <td>FN + F8</td> <td>The next song</td> </tr> <tr> <td>FN + F8</td> <td></td> <td>FN + F9</td> <td>Turn down the volume</td> </tr> <tr> <td>FN + F9</td> <td></td> <td>FN + F10</td> <td>Turn up the volume</td> </tr> <tr> <td>FN + F10</td> <td></td> <td></td> <td></td> </tr> </tbody> </table> <p>Troubleshooting:</p> <ol style="list-style-type: none"> 1. When the keyboard can not be searched—try Bluetooth on the switch device to search again 2. When the keyboard is turned on and there is no indicator light, try to recharge the keyboard 3. After pairing with other devices, you need to delete the old records before reconnecting back to the original device 4. When the pairing fails, the failed pairing record needs to be deleted and another second pairing is performed <table border="1"> <thead> <tr> <th colspan="2">User information</th> </tr> </thead> <tbody> <tr> <td>User name:</td> <td>Contact phone:</td> </tr> <tr> <td>Mailing address:</td> <td></td> </tr> <tr> <td>Email address:</td> <td></td> </tr> <tr> <td>Product model:</td> <td>Date of purchase:</td> </tr> </tbody> </table> <p>The charging voltage cannot be higher than 5V, and the electricity cannot be higher than 2A</p>		Connection switching	Multimedia buttons	FN + Connection	Search	FN + F1	Search	FN + F1	fasting light consent to add new device	FN + F2	Media	FN + F2	Search to switch wireless reception	FN + F3	screenshots	FN + F3	Apple iOS mode	FN + F4	screen	FN + F4	Windows mode	FN + F5	Home	FN + F5	Windows mode	FN + F6	In a song	FN + F6	Windows 1.0	FN + F7	Play/Pause	FN + F7		FN + F8	The next song	FN + F8		FN + F9	Turn down the volume	FN + F9		FN + F10	Turn up the volume	FN + F10				User information		User name:	Contact phone:	Mailing address:		Email address:		Product model:	Date of purchase:
	Connection switching	Multimedia buttons																																																									
FN + Connection	Search	FN + F1	Search																																																								
FN + F1	fasting light consent to add new device	FN + F2	Media																																																								
FN + F2	Search to switch wireless reception	FN + F3	screenshots																																																								
FN + F3	Apple iOS mode	FN + F4	screen																																																								
FN + F4	Windows mode	FN + F5	Home																																																								
FN + F5	Windows mode	FN + F6	In a song																																																								
FN + F6	Windows 1.0	FN + F7	Play/Pause																																																								
FN + F7		FN + F8	The next song																																																								
FN + F8		FN + F9	Turn down the volume																																																								
FN + F9		FN + F10	Turn up the volume																																																								
FN + F10																																																											
User information																																																											
User name:	Contact phone:																																																										
Mailing address:																																																											
Email address:																																																											
Product model:	Date of purchase:																																																										

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement

- The device can be used in portable exposure condition without restriction