


User Manual

Portable Thermal Label Printer

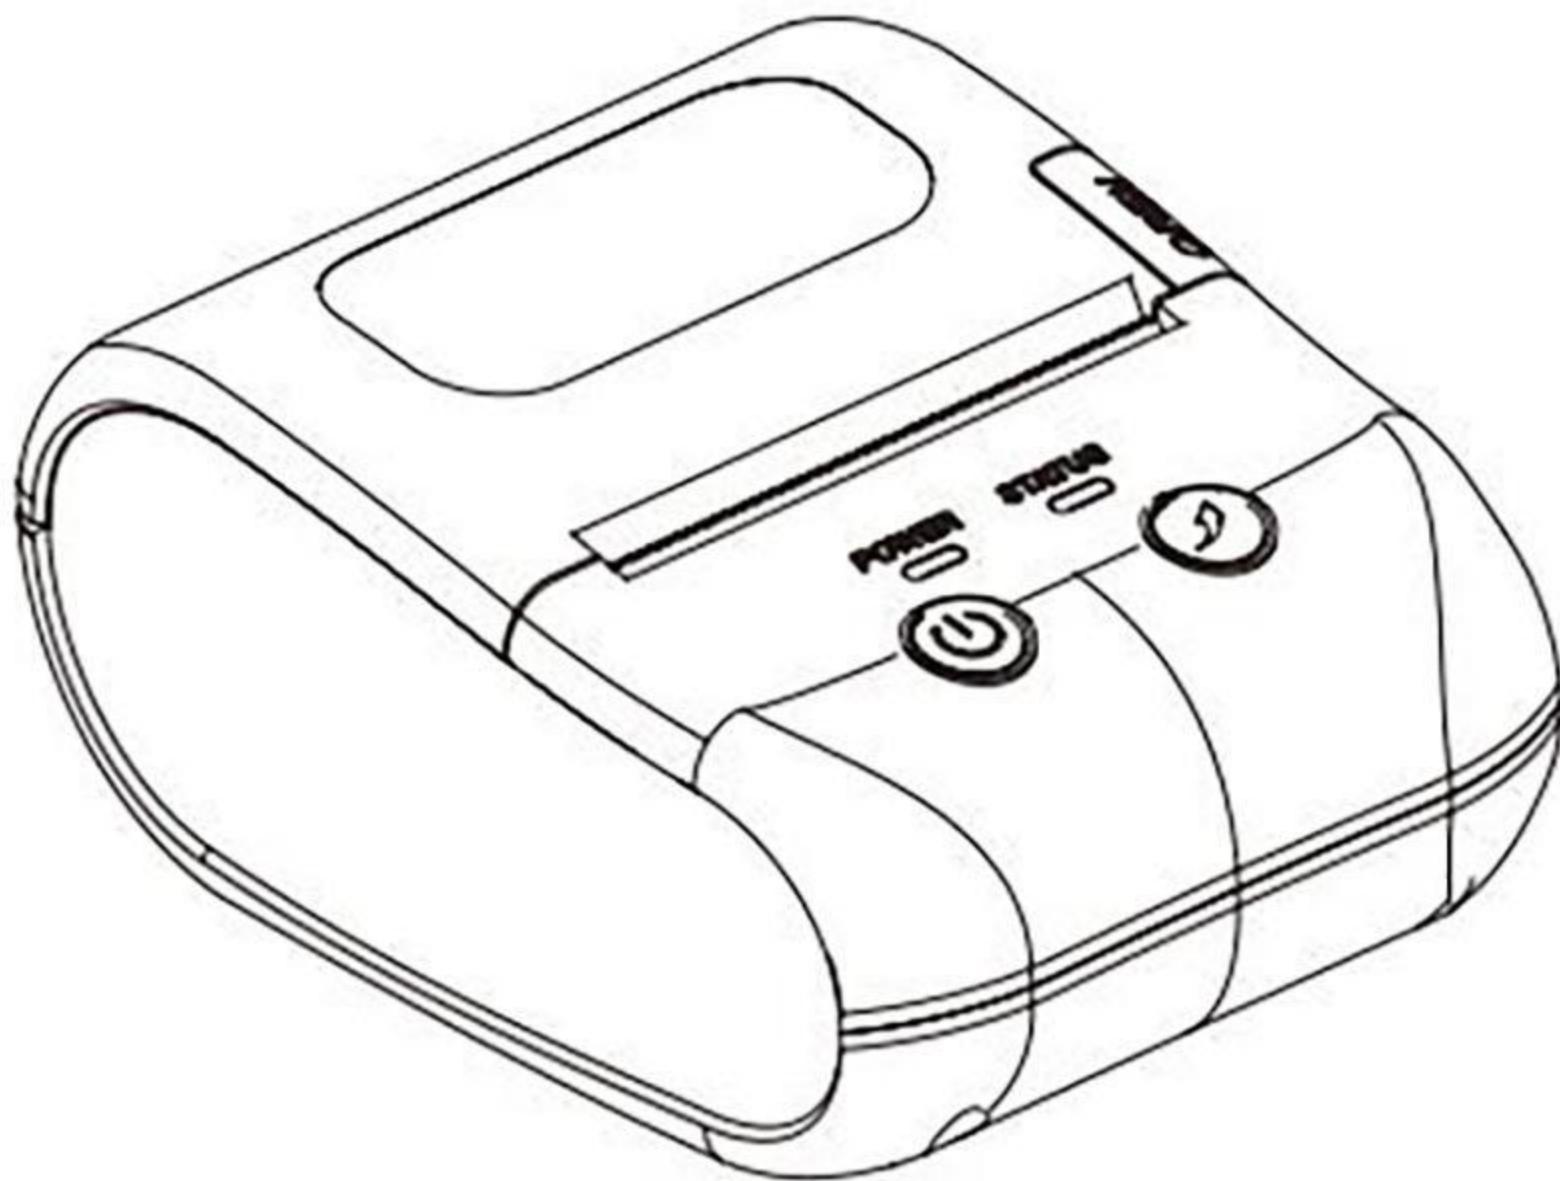

When using the L7 printer (flashing red status light) or L9 printer (paper feed error), please note: Variations in label dimensions, manufacturing processes, materials, or thermal coating thickness across brands/models may cause printer parameter mismatches (head pressure/temperature), leading to printing inaccuracies, jams, or equipment damage.

PEWEGLOW Gloss-Varnished Labels undergo rigorous compatibility testing to ensure optimal print quality and printer stability. For sustained performance we recommend using PEWEGLOW labels.

The gloss varnish coating enhances scratch/environmental resistance, delivering durable high-definition prints with fade-proof longevity.

Please keep user manual for reference

FCC Caution:

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Important: Change or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules.


Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference,
- and (2) this device must accept any interference received, including interference that may cause undesired operation.

Function Overview

1. Button&Indicator

- ① Power Button (⊕)
- ② Power Light
- ③ FEED Button (↗)
- ④ Status Light
- ⑤ Paper exit
- ⑥ USB Port
- ⑦ Cover Opening Button

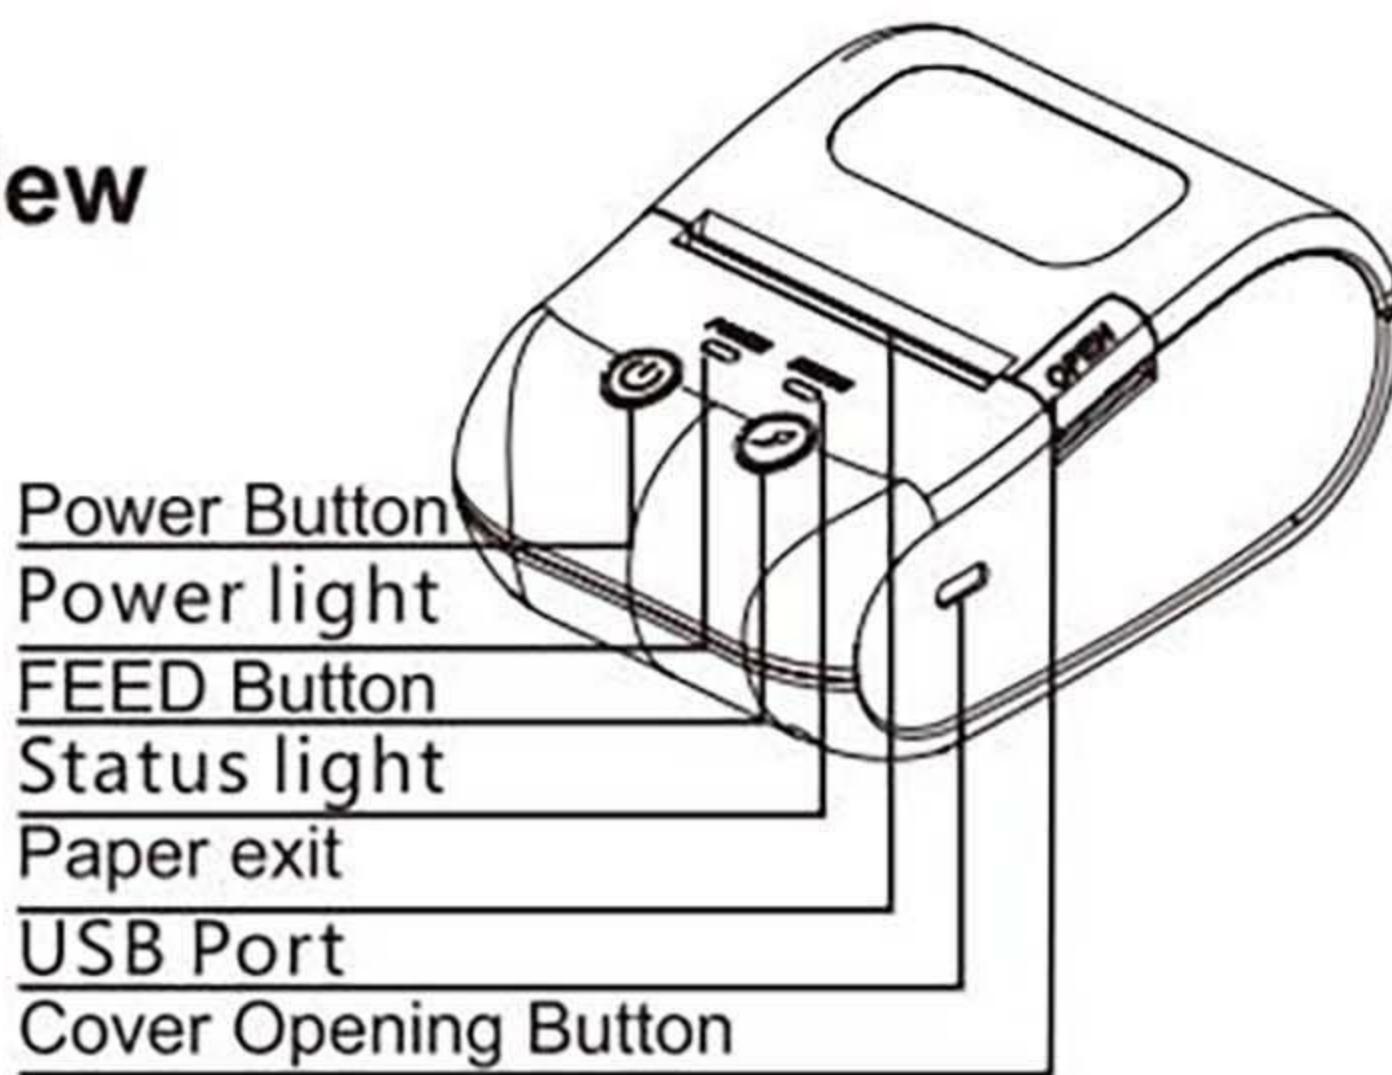

Phone scan QR code
below download the app

What's in the package?

- ① Printer*1 ② USB cable*1 ③ User Manual*1 ④ Label roll*1


Quick Printer connection

1. Power Button-Long press: Power on.
2. Long press again: Shutdown.
3. Press twice: Print a test page
4. Then turn off the wireless of the phone, open the APP, and click the "connect" button to allow wireless connection
5. Select the printer and connect successfully
6. Click "Create label" fill in the corresponding label size, edit the content and print it

**Special Note: When connecting via Bluetooth,
ensure that your phone's Bluetooth
is enabled and grant the software location permission. The default PIN is 0000.**

Please follow the below steps to install the paper roll.

- 1. Open the top cover.**
- 2. Drop in the paper roll as the illustration shows.**
- 3. Pull out a small segment of paper and close the paper roll cover.**
- 4. Print a self-test page to make sure the paper is correctly installed.**

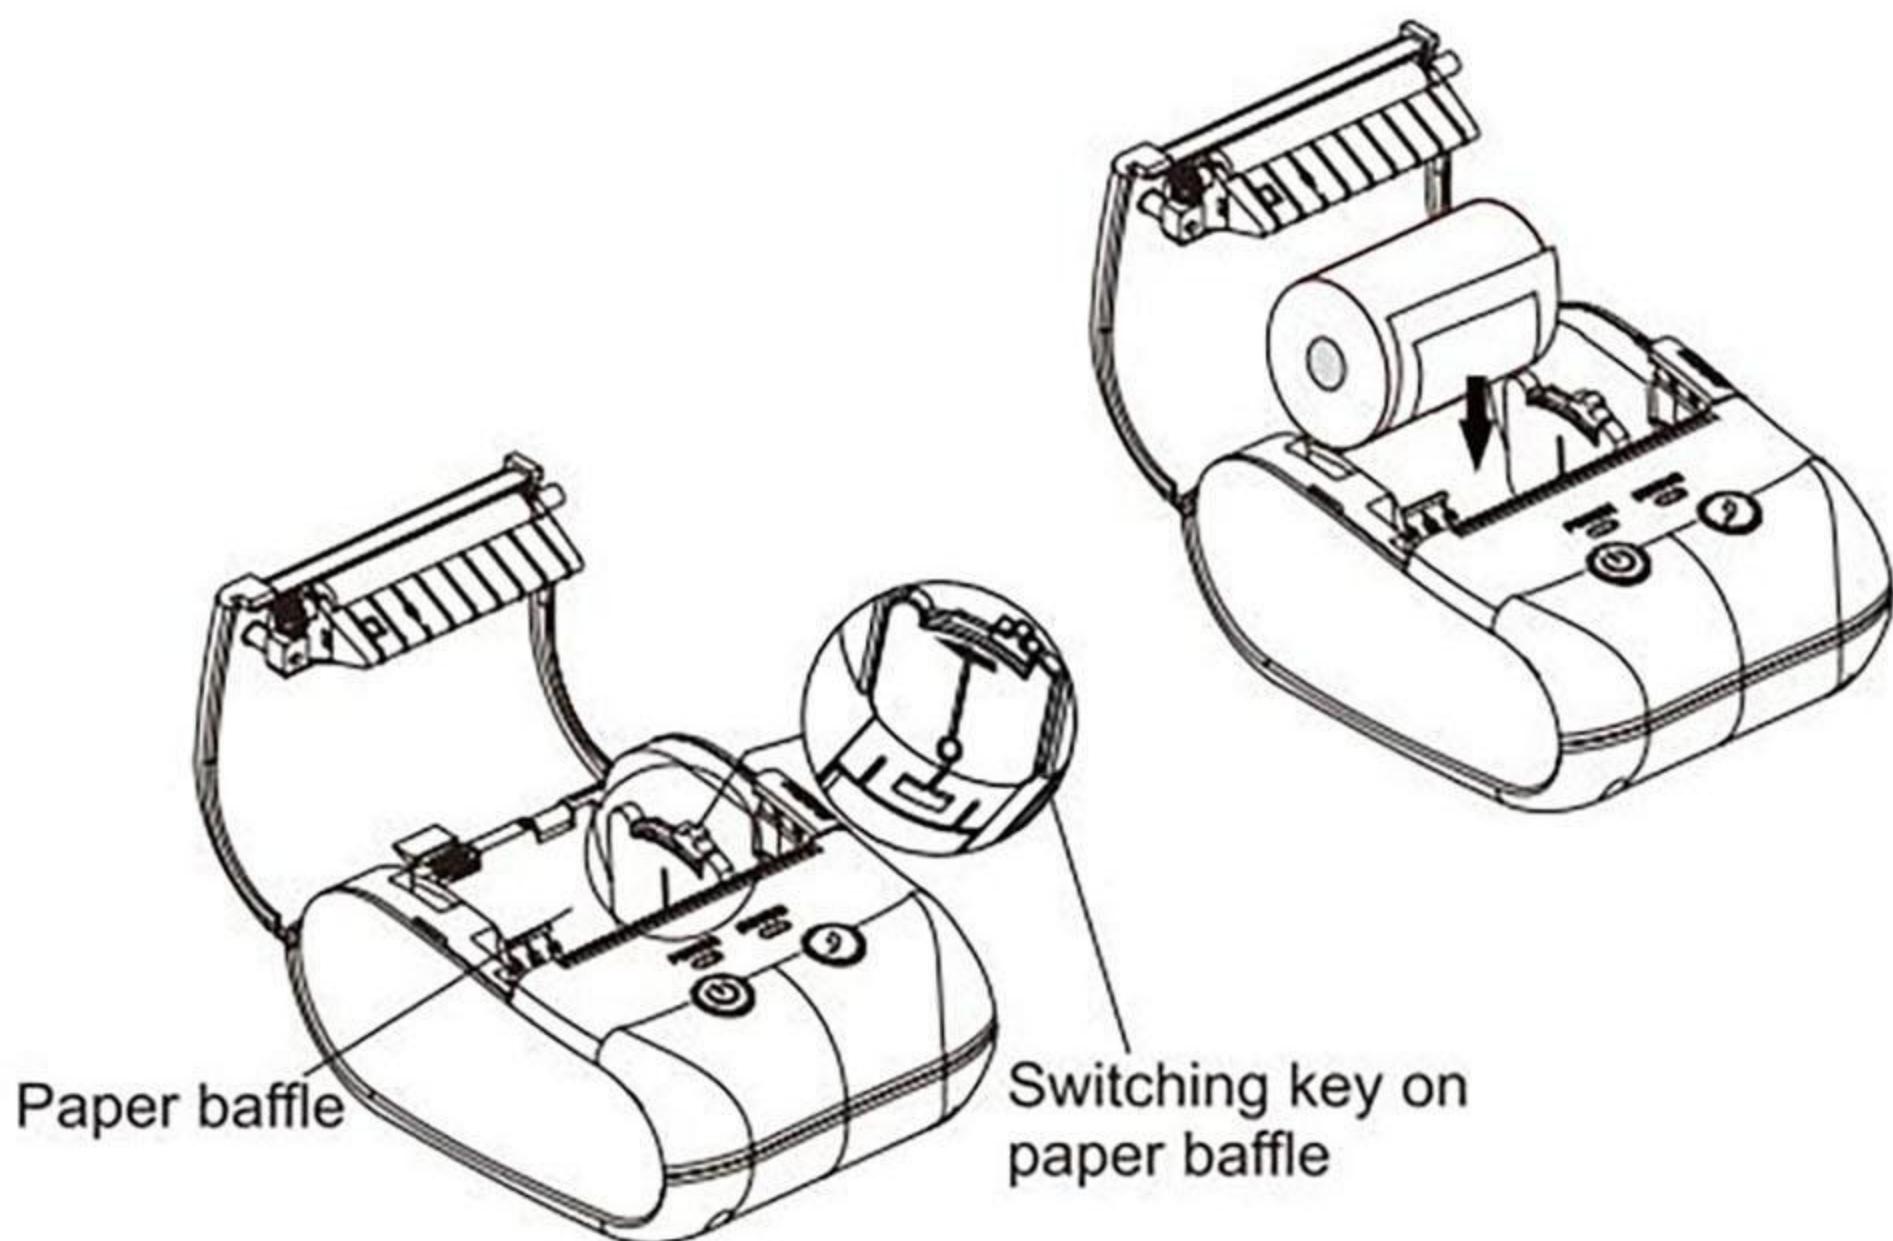

Indicator Light

Yellow Light:Normal, Plenty of power ,Wireless connected

Red Light:Error(No paper, Cover is open, The paper face is not on the print head)