

Instruction Manual

Manual

Name: LED FAN LIGHT
Model: LEC20R
Size: φ470*H180mm
Input voltage : 100-240V/50~60hz
Power: 32W 3000K-6500K

Packing List




X1
Lamp Body




X6
Fan Blades



X1
Remote Control

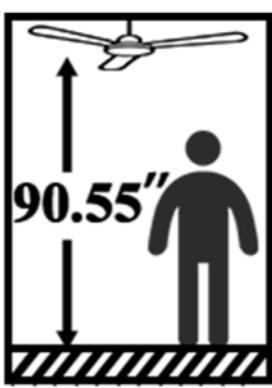

Installation

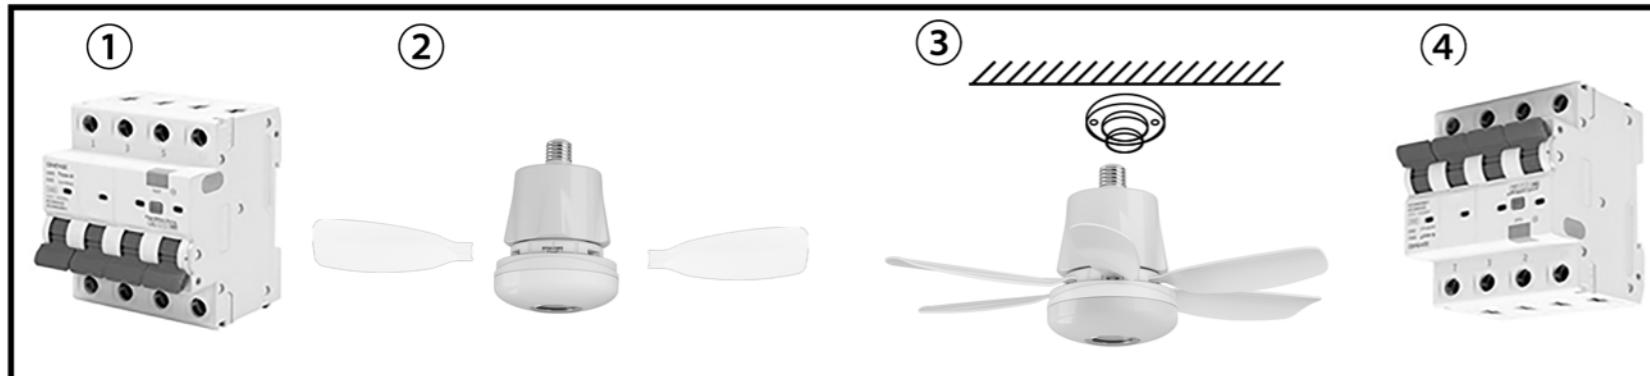

Matters needing attention

Step 1: Be sure to cut off the power before installation.
Step 2: Assemble the 5 fan blades as shown in the figure
Step 3: Install the entire lamp onto the socket.
Step 4: After installation is complete, turn on the power and you can use the fan light through the remote control.
Step 5: Turn on your phone's Bluetooth for pairing, and you can control the speakers through your phone and remote control.

Installation precautions



Please pay attention to safe installation during suspension use and follow best practices during installation.


When installing the fan blade model, attention should be paid to the installation height of the lighting fixtures and maintain a certain safe distance from people.

When hanging and installing, be careful not to have obstacles around.

Matters needing attention

1. Please do not put fingers or other things into the working fan blades
2. For daily cleaning, you can use a damp cloth to wipe the surface without using corrosive chemicals.
3. The fan blades can also be disassembled directly, convenient for cleaning and storage.
4. In case of any accident, disconnect the power first, then ask an electrician to check and fix it.
5. The remote control requires AAA * 2 batteries, please bring your own

Remote Control

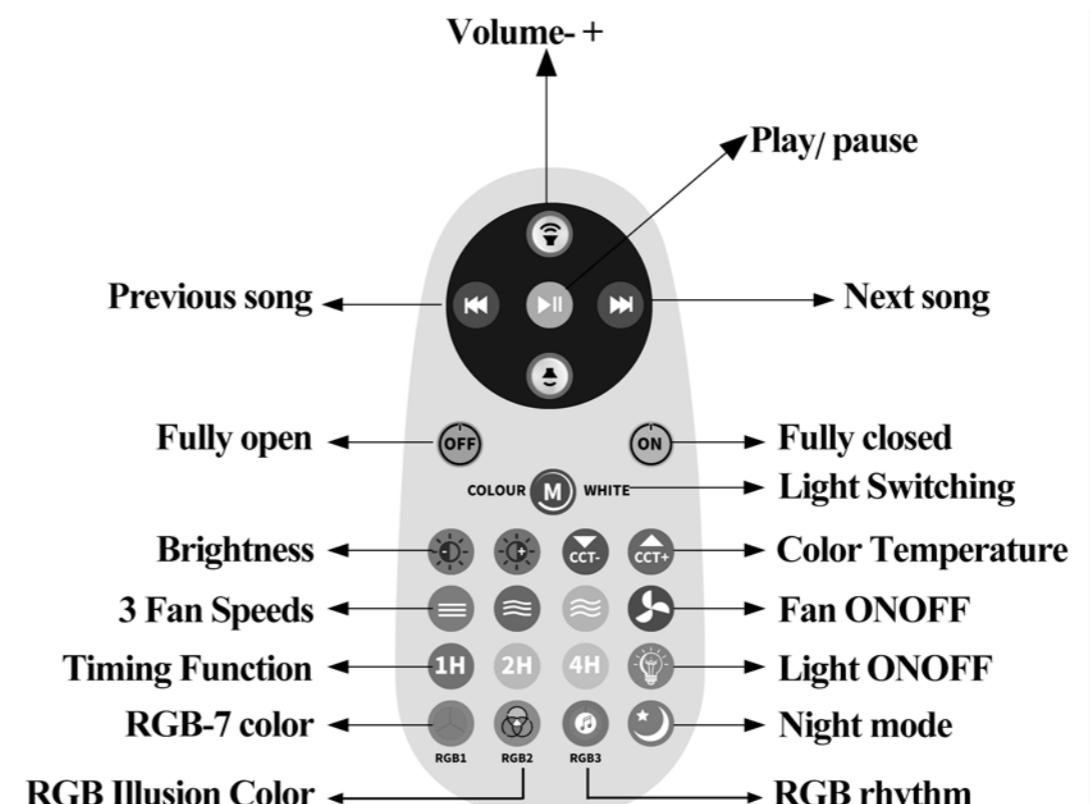

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure Statement

To maintain compliance with FCC'S RF Exposure guidelines, This equipment should be installed and operated with minimum 20cm between the radiator and your body. This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.