

展开尺寸:455x90mm
风琴折尺寸: 65x90mm

Loliworld Alarm

User Manual



Loliworld Alarm Use Manual	1
-------------------------------	---

Rechargeble Personal Safety Alarm

Thank you for your purchase of this personal safety alarm. Our vision is to help bring safer communities to women and children, and because of you we are one step closer!

When to use it

This device is intended for use in emergency situations where you feel you are unsafe and wish to alert people around you to come rescue, or scare off attackers. Some examples include:
1) Suspicion that you are being followed when you are walking alone.

2) You spot a potentially unsafe situation nearby, for example a suspicious person approaching children, and want to draw attention and scare away the attacker.

3) You require immediate assistance and cannot reach people with your voice.

What it does

When the device is activated, the device will emit a very loud alarm noise (130 dB). The alarm will sound continuously until deactivated. In addition, the built-in light will also start flashing, helping you gain even more attention. The alarm duration is expected to last up to 90 minutes with full power.

Charging port: Type-C
Charging time: within 1 hour
Battery capacity: 200mAh

Loliworld Alarm Use Manual	2
-------------------------------	---

Rechargeble Personal Safety Alarm

How to use it

1: To activate the alarm, pull out the pin. To stop the alarm, simply insert the pin back into the device.
2: press the button in side turn on the flashlight, loose to turn off the flashlight.

Low voltage reminder:

when the voltage lower than 3.2 V, press the button or pull the pin everytime, the red light will flash 10 times.



This device has GPS function, please operate it as below instructions.

Loliworld Alarm Use Manual	3
-------------------------------	---

Index

- 01 Getting Started
- 02 Add Your Loliworld Alarm
- 03 Locate Your Loliworld Alarm
- 04 Notifications
- 05 When Your Loliworld Alarm Is Lost
- 06 Resetting Loliworld Alarm
- 07 Extras
- 08 The Fine Print

Loliworld Alarm Use Manual	4
-------------------------------	---

01 Getting Started

01.1 Power On / Off:

Press the Loliworld Alarm Function Button once to turn it on. It should chime once to indicate that it is powered on.

To power off, Press the same button twice rapidly then hold it for five seconds. You will hear two beeps to indicate that your Loliworld Alarm is powered off.

If you could not sure power on or off, just press twice rapidly, it should beep once to indicate that it is powered on.

01.2 Check For Updates:

To use the Apple Find My app to locate this item, the latest version of iOS, iPadOS, or macOS is recommended. The Find Items app on Apple Watch requires the latest version of watchOS.

Loliworld Alarm Use Manual	5
-------------------------------	---

02 Add Your Loliworld Alarm

02.1 Start The App

Open Find My app on your supported iPhone.

02.2 Connect Your Loliworld Alarm

Press the function button once to power on your Loliworld Alarm.

Tap "+", then "Add Other Item".
Once your Loliworld Alarm is located, tap "connect".
Enter a name and choose an emoji for your Loliworld Alarm and tap "Continue".
Find My will ask for confirmation to add your Loliworld Alarm to your Apple ID Tap "Agree".
Tap "Finish" and your Loliworld Alarm will be set up and ready to be used.

Loliworld Alarm Use Manual	6
-------------------------------	---

03 Locate Your Loliworld Alarm

03.1 Find Loliworld Alarm When It's Nearby:

Open Find My app and select the "Items" tab or open the Find Items app on your Apple Watch.

Tap on your Loliworld Alarm from the list.

Tap "Play Sound" to make your Loliworld Alarm beep.

Tap "Stop Sound" to stop the beeps once you find.

03.2 Find Loliworld Alarm's Location:

Open Find My app and select the "Items" tab or open the Find Items app on your Apple Watch.

Tap on your Loliworld Alarm from the list.

Your Loliworld Alarm's location will appear on the Map with a time stamp of when the item was located.

To navigate to the Loliworld Alarm's location, tap "Directions" to open Apple Maps .

Loliworld Alarm Use Manual	7
-------------------------------	---

04 Notifications

04.1 Enabling "Notify When Left Behind":

Open Find My app and select the "Items" tab or open the Find Items app on your Apple Watch.

Tap on your Loliworld Alarm from the list.

Under "Notifications" enable the "Notify When Left Behind" toggle.

You will receive a notification when you leave your Loliworld Alarm behind and it's no longer in range of your device.

04.2 Enabling "Notify When Found":

Under "Notifications", enable the "Notify When Found" toggle.

When your Loliworld Alarm is seen by another Find My network device, you will receive a notification of its location.

Note: "Notify When Found" can only be activated when your Loliworld Alarm is out of range.

Loliworld Alarm Use Manual	8
-------------------------------	---

05 When Your Loliworld Alarm Is Lost

05.1 Enabling "Lost Mode":

Open Find My app and select the "Items" tab or open the Find Items app on your Apple Watch.

Tap on your Loliworld Alarm from the list.

Under "Lost Mode" tap "Enable".

A screen detailing Lost Mode will pop up, tap "Continue".

Enter your phone number or email address and tap "Next".

You may enter a message that will be shared with the person that finds your item.

Tap "Activate" to enable "Lost Mode".

Note: When "Lost Mode" is enabled, "Notify When Found" is automatically enabled.

Note: When "Lost Mode" is enabled, your Loliworld Alarm is locked and cannot be paired to a new device.

Loliworld Alarm Use Manual	9
-------------------------------	---

06 Resetting Loliworld Alarm

06.1 Remove The Loliworld Alarm From Find My App:

Open Find My app and select the "Items" tab.

Tap on your Loliworld Alarm from the list.

please ensure "Lost Mode" is disabled.

Scroll to the bottom of the screen and tap "Remove Item".

A summary will open, tap "Remove" to confirm.

06.2 Factory Reset Your Loliworld Alarm:

After successfully removing the Loliworld Alarm from Find My app, press the Loliworld Alarm's function button four times rapidly and then hold it a fifth time until you hear a ringing chime.

The Loliworld Alarm is now reset and ready to be paired to a new Apple ID.

Loliworld Alarm Use Manual	10
-------------------------------	----

07 Extras

07.1 Unwanted tracking:

If any Find My network accessory separated from its owner is seen moving with you over time, you'll be notified in one of two ways:

1. If you have an iPhone, iPad, Find My will send a notification to your Apple device. This feature is available on iOS or iPadOS 14.5 or later.

2. If you don't have an iOS device or a smartphone, a Find My network accessory that isn't with its owner for a period of time will emit a sound when it's moved.

These features were created specifically to discourage people from trying to track you without your knowledge.

Loliworld Alarm Use Manual	11
-------------------------------	----

08 The Fine Print

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or changes to this equipment. Such modifications or changes not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure conditions without restriction. Federal Communication Commission (FCC) Radiation Exposure Statement Power is so low that no RF exposure calculation is needed.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radiofrequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

Loliworld Alarm Use Manual	12
-------------------------------	----

08 The Fine Print

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receivers are connected.

09 About Apple Find My

The Apple Find My network provides an easy, secure way to locate compatible personal items using the Find My app on your iPhone, iPad, Mac, or the Find Items app on Apple Watch.

To use the Apple Find My app to locate this item, the latest version of iOS, iPadOS, or macOS is recommended. The Find Items app on Apple Watch requires the latest version of watchOS.

Use of the Works with Apple badge means that a product has been designed to work specifically with the technology identified in the badge and has been certified by the product manufacturer to meet Apple Find My network product specifications and requirements. Apple is not responsible for the operation of this device or use of this product or its compliance with safety and regulatory standards.

Apple, Apple Find My, Apple Watch, Find My, iPhone, iPad, iPadOS, Mac, macOS and watchOS are the trademarks of Apple Inc. iOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.

Loliworld Alarm Use Manual	13
-------------------------------	----

10

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or changes to this equipment. Such modifications or changes not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.