



Remote Control Description		Trouble Shooting	FCC WARNING																								
		<table border="1"> <thead> <tr> <th>Problem</th><th>Solution</th></tr> </thead> <tbody> <tr> <td>No power</td><td> <ul style="list-style-type: none"> Check if the power adapter is properly connected to the power and the TV box. Press the power on the remote controller to turn on the power. Check if the status LED is blue when the box is powered. </td></tr> <tr> <td>No pictures</td><td> <ul style="list-style-type: none"> Reconnect with HD cable or AV cable. Check if the TV is switched on. </td></tr> <tr> <td>No sound or distorted sound</td><td> <ul style="list-style-type: none"> Adjust the volume. Check that the speakers are connected correctly. </td></tr> <tr> <td>No audio or digital output</td><td> <ul style="list-style-type: none"> Check the digital connections. Check if your amplifier is set correctly. </td></tr> <tr> <td>The box does not respond to the remote control</td><td> <ul style="list-style-type: none"> Aim the remote directly at the sensor on the front of the TV box. Reduce the distance to the TV box. Replace the batteries in the remote control. </td></tr> <tr> <td>Player does not respond to some operating commands during playback</td><td> <ul style="list-style-type: none"> Operations may not be permitted. Refer to the user manual. Possibility of system halted, re-insert with power adaptor to restart the TV box. </td></tr> <tr> <td>No sound during movies playback</td><td> <ul style="list-style-type: none"> The audio codec may not be supported by the TV box. You can change the supported audio on playing menu. Check the volume. </td></tr> <tr> <td>The contents of the USB flash drive cannot be read</td><td> <ul style="list-style-type: none"> The USB flash drive format is not compatible with the box. If one of the USB cannot be read. Please turn off the TV box for 30 seconds and restart the TV box. </td></tr> <tr> <td>Slow operation of the USB flash drive</td><td> <ul style="list-style-type: none"> Big file size or high resolution USB flash drive takes longer time to read and display on the TV screen. </td></tr> <tr> <td>No sound with HD connection</td><td> <ul style="list-style-type: none"> Check the connection between the TV and the HD jack of box. Check your TV system setup. Check the volume. </td></tr> <tr> <td>The TV screen is blank and the player LED is blinking</td><td> <ul style="list-style-type: none"> Turn off your TV box, wait 30 seconds, turn it on again. If under HD status, check if HD connection is correct or change another HD cable set the output resolution of this TV box into 720p. </td></tr> </tbody> </table>	Problem	Solution	No power	<ul style="list-style-type: none"> Check if the power adapter is properly connected to the power and the TV box. Press the power on the remote controller to turn on the power. Check if the status LED is blue when the box is powered. 	No pictures	<ul style="list-style-type: none"> Reconnect with HD cable or AV cable. Check if the TV is switched on. 	No sound or distorted sound	<ul style="list-style-type: none"> Adjust the volume. Check that the speakers are connected correctly. 	No audio or digital output	<ul style="list-style-type: none"> Check the digital connections. Check if your amplifier is set correctly. 	The box does not respond to the remote control	<ul style="list-style-type: none"> Aim the remote directly at the sensor on the front of the TV box. Reduce the distance to the TV box. Replace the batteries in the remote control. 	Player does not respond to some operating commands during playback	<ul style="list-style-type: none"> Operations may not be permitted. Refer to the user manual. Possibility of system halted, re-insert with power adaptor to restart the TV box. 	No sound during movies playback	<ul style="list-style-type: none"> The audio codec may not be supported by the TV box. You can change the supported audio on playing menu. Check the volume. 	The contents of the USB flash drive cannot be read	<ul style="list-style-type: none"> The USB flash drive format is not compatible with the box. If one of the USB cannot be read. Please turn off the TV box for 30 seconds and restart the TV box. 	Slow operation of the USB flash drive	<ul style="list-style-type: none"> Big file size or high resolution USB flash drive takes longer time to read and display on the TV screen. 	No sound with HD connection	<ul style="list-style-type: none"> Check the connection between the TV and the HD jack of box. Check your TV system setup. Check the volume. 	The TV screen is blank and the player LED is blinking	<ul style="list-style-type: none"> Turn off your TV box, wait 30 seconds, turn it on again. If under HD status, check if HD connection is correct or change another HD cable set the output resolution of this TV box into 720p. 	<p>This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:</p> <p>① this device may not cause harmful interference, and ② this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</p> <p>NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none"> Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. <p>To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body. Use only the supplied antenna.</p>
Problem	Solution																										
No power	<ul style="list-style-type: none"> Check if the power adapter is properly connected to the power and the TV box. Press the power on the remote controller to turn on the power. Check if the status LED is blue when the box is powered. 																										
No pictures	<ul style="list-style-type: none"> Reconnect with HD cable or AV cable. Check if the TV is switched on. 																										
No sound or distorted sound	<ul style="list-style-type: none"> Adjust the volume. Check that the speakers are connected correctly. 																										
No audio or digital output	<ul style="list-style-type: none"> Check the digital connections. Check if your amplifier is set correctly. 																										
The box does not respond to the remote control	<ul style="list-style-type: none"> Aim the remote directly at the sensor on the front of the TV box. Reduce the distance to the TV box. Replace the batteries in the remote control. 																										
Player does not respond to some operating commands during playback	<ul style="list-style-type: none"> Operations may not be permitted. Refer to the user manual. Possibility of system halted, re-insert with power adaptor to restart the TV box. 																										
No sound during movies playback	<ul style="list-style-type: none"> The audio codec may not be supported by the TV box. You can change the supported audio on playing menu. Check the volume. 																										
The contents of the USB flash drive cannot be read	<ul style="list-style-type: none"> The USB flash drive format is not compatible with the box. If one of the USB cannot be read. Please turn off the TV box for 30 seconds and restart the TV box. 																										
Slow operation of the USB flash drive	<ul style="list-style-type: none"> Big file size or high resolution USB flash drive takes longer time to read and display on the TV screen. 																										
No sound with HD connection	<ul style="list-style-type: none"> Check the connection between the TV and the HD jack of box. Check your TV system setup. Check the volume. 																										
The TV screen is blank and the player LED is blinking	<ul style="list-style-type: none"> Turn off your TV box, wait 30 seconds, turn it on again. If under HD status, check if HD connection is correct or change another HD cable set the output resolution of this TV box into 720p. 																										