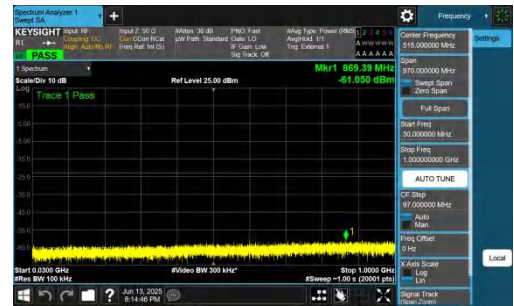 




NTNV-n78(3700-3800)-PC2-30-25-M-DFT-BPSK-Inner_1RB_Right-0.15-30-PASS



NTNV-n78(3700-3800)-PC2-30-25-M-DFT-BPSK-Inner_1RB_Right-30-1000-PASS



NTNV-n78(3700-3800)-PC2-30-25-M-DFT-BPSK-Inner_1RB_Right-1000-3000-PASS



NTNV-n78(3700-3800)-PC2-30-25-M-DFT-BPSK-Inner_1RB_Right-3000-6000-PASS



NTNV-n78(3700-3800)-PC2-30-25-M-DFT-BPSK-Inner_1RB_Right-6000-26000-PASS



NTNV-n78(3700-3800)-PC2-30-25-M-DFT-BPSK-Inner_1RB_Right-26000-40000-PASS



NTNV-n78(3700-3800)-PC2-30-25-M-DFT-QPSK-Inner_1RB_Left-0.09-0.15-PASS



NTNV-n78(3700-3800)-PC2-30-25-M-DFT-QPSK-Inner_1RB_Left-0.15-30-PASS



NTNV-n78(3700-3800)-PC2-30-25-M-DFT-QPSK-Inner_1RB_Left-30-1000-PASS



NTNV-n78(3700-3800)-PC2-30-25-M-DFT-QPSK-Inner_1RB_Left-1000-3000-PASS



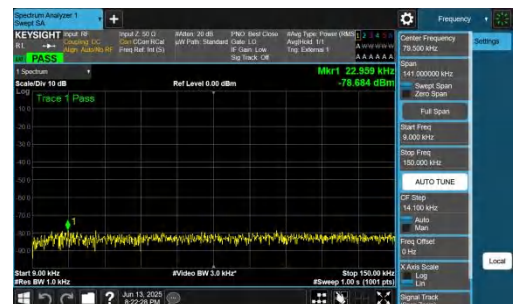 
NTNV-n78(3700-3800)-PC2-30-25-M-DFT-QPSK-Inner_1RB_Left-3000-6000-PASS



NTNV-n78(3700-3800)-PC2-30-25-M-DFT-QPSK-Inner_1RB_Left-6000-26000-PASS



NTNV-n78(3700-3800)-PC2-30-25-M-DFT-QPSK-Inner_1RB_Left-26000-40000-PASS



NTNV-n78(3700-3800)-PC2-30-25-M-DFT-QPSK-Inner_1RB_Right-0.09-0.15-PASS



NTNV-n78(3700-3800)-PC2-30-25-M-DFT-QPSK-Inner_1RB_Right-0.15-30-PASS

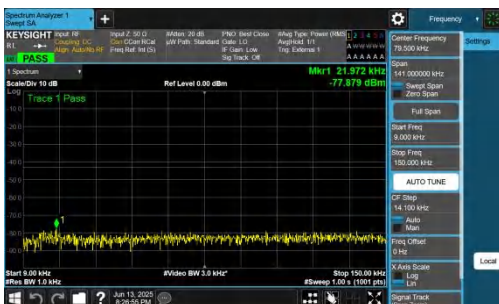 
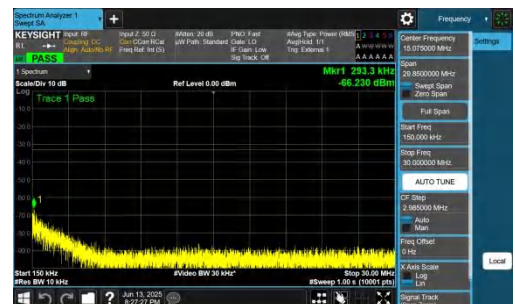 


NTNV-n78(3700-3800)-PC2-30-25-M-DFT-QPSK-Inner_1RB_Right-30-1000-PASS


NTNV-n78(3700-3800)-PC2-30-25-M-DFT-QPSK-Inner_1RB_Right-1
000-3000-PASS

NTNV-n78(3700-3800)-PC2-30-25-M-DFT-QPSK-Inner_1RB_Right-30
00-6000-PASS

NTNV-n78(3700-3800)-PC2-30-25-M-DFT-QPSK-Inner_1RB_Right-6
000-26000-PASS


NTNV-n78(3700-3800)-PC2-30-25-M-DFT-QPSK-Inner_1RB_Right-26
000-40000-PASS

NTNV-n78(3700-3800)-PC2-30-25-H-DFT-BPSK-Inner_1RB_Left-0.0
09-0.15-PASS

NTNV-n78(3700-3800)-PC2-30-25-H-DFT-BPSK-Inner_1RB_Left-0.15-
30-PASS

NTNV-n78(3700-3800)-PC2-30-25-H-DFT-BPSK-Inner_1RB_Left-30-
1000-PASS

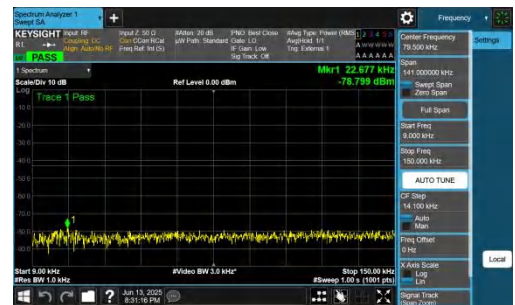 NTNV-n78(3700-3800)-PC2-30-25-H-DFT-BPSK-Inner_1RB_Left-1000
-3000-PASS


NTNV-n78(3700-3800)-PC2-30-25-H-DFT-BPSK-Inner_1RB_Left-300
0-6000-PASS

NTNV-n78(3700-3800)-PC2-30-25-H-DFT-BPSK-Inner_1RB_Left-6000
-26000-PASS

NTNV-n78(3700-3800)-PC2-30-25-H-DFT-BPSK-Inner_1RB_Left-260
00-40000-PASS

NTNV-n78(3700-3800)-PC2-30-25-H-DFT-BPSK-Inner_1RB_Right-0.0
09-0.15-PASS

NTNV-n78(3700-3800)-PC2-30-25-H-DFT-BPSK-Inner_1RB_Right-0.
15-30-PASS

NTNV-n78(3700-3800)-PC2-30-25-H-DFT-BPSK-Inner_1RB_Right-30-
1000-PASS

NTNV-n78(3700-3800)-PC2-30-25-H-DFT-BPSK-Inner_1RB_Right-10
00-3000-PASS

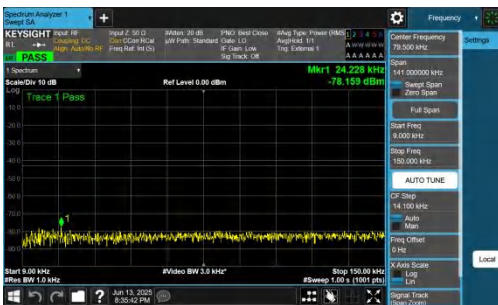 
NTNV-n78(3700-3800)-PC2-30-25-H-DFT-BPSK-Inner_1RB_Right-30
00-6000-PASS




NTNV-n78(3700-3800)-PC2-30-25-H-DFT-BPSK-Inner_1RB_Right-6000-PASS




NTNV-n78(3700-3800)-PC2-30-25-H-DFT-BPSK-Inner_1RB_Right-26000-PASS



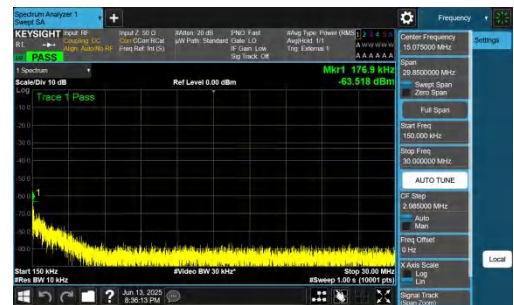 NTNV-n78(3700-3800)-PC2-30-25-H-DFT-QPSK-Inner_1RB_Left-0.09-0.15-PASS



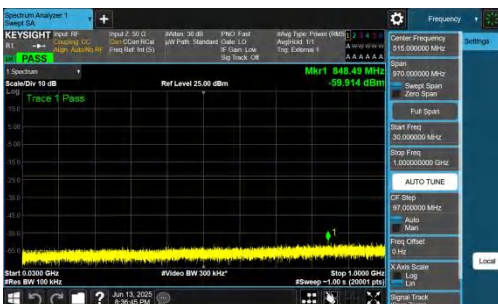 NTNV-n78(3700-3800)-PC2-30-25-H-DFT-QPSK-Inner_1RB_Left-0.15-30-PASS



NTNV-n78(3700-3800)-PC2-30-25-H-DFT-QPSK-Inner_1RB_Left-30-1000-PASS



NTNV-n78(3700-3800)-PC2-30-25-H-DFT-QPSK-Inner_1RB_Left-1000-3000-PASS



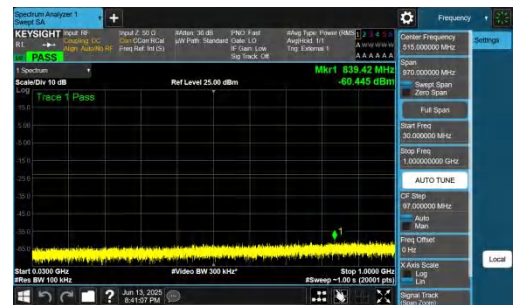 
NTNV-n78(3700-3800)-PC2-30-25-H-DFT-QPSK-Inner_1RB_Left-3000-6000-PASS



NTNV-n78(3700-3800)-PC2-30-25-H-DFT-QPSK-Inner_1RB_Left-6000-26000-PASS


NTNV-n78(3700-3800)-PC2-30-25-H-DFT-QPSK-Inner_1RB_Left-260
00-40000-PASS

NTNV-n78(3700-3800)-PC2-30-25-H-DFT-QPSK-Inner_1RB_Right-0.0
09-0.15-PASS


NTNV-n78(3700-3800)-PC2-30-25-H-DFT-QPSK-Inner_1RB_Right-0.
15-30-PASS

NTNV-n78(3700-3800)-PC2-30-25-H-DFT-QPSK-Inner_1RB_Right-30-
1000-PASS

NTNV-n78(3700-3800)-PC2-30-25-H-DFT-QPSK-Inner_1RB_Right-1
000-3000-PASS

NTNV-n78(3700-3800)-PC2-30-25-H-DFT-QPSK-Inner_1RB_Right-30
00-6000-PASS

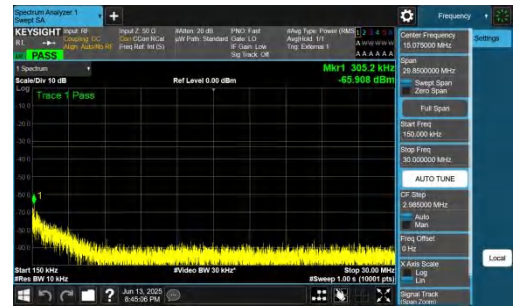 NTNV-n78(3700-3800)-PC2-30-25-H-DFT-QPSK-Inner_1RB_Right-6
000-26000-PASS

NTNV-n78(3700-3800)-PC2-30-25-H-DFT-QPSK-Inner_1RB_Right-26
000-40000-PASS


NTNV-n78(3700-3800)-PC2-30-30-L-DFT-BPSK-Inner_1RB_Left-0.00
9-0.15-PASS

NTNV-n78(3700-3800)-PC2-30-30-L-DFT-BPSK-Inner_1RB_Left-0.15-
30-PASS

NTNV-n78(3700-3800)-PC2-30-30-L-DFT-BPSK-Inner_1RB_Left-30-1
000-PASS

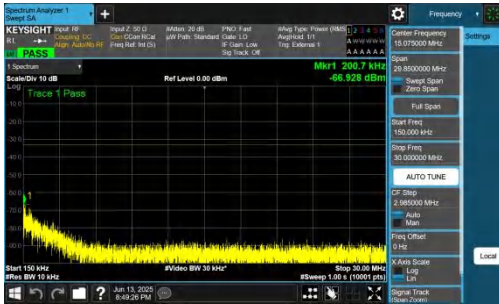 
NTNV-n78(3700-3800)-PC2-30-30-L-DFT-BPSK-Inner_1RB_Left-1000
-3000-PASS

NTNV-n78(3700-3800)-PC2-30-30-L-DFT-BPSK-Inner_1RB_Left-300
0-6000-PASS


NTNV-n78(3700-3800)-PC2-30-30-L-DFT-BPSK-Inner_1RB_Left-6000
-26000-PASS

NTNV-n78(3700-3800)-PC2-30-30-L-DFT-BPSK-Inner_1RB_Left-260
00-40000-PASS

NTNV-n78(3700-3800)-PC2-30-30-L-DFT-BPSK-Inner_1RB_Right-0.0
09-0.15-PASS



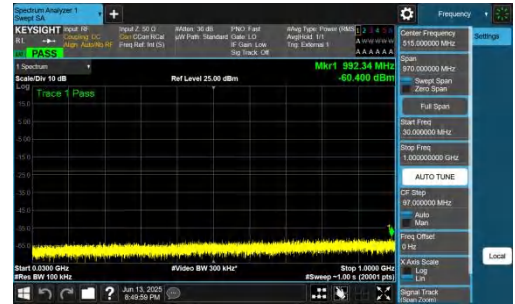 NTNV-n78(3700-3800)-PC2-30-30-L-DFT-BPSK-Inner_1RB_Right-0.15-30-PASS



NTNV-n78(3700-3800)-PC2-30-30-L-DFT-BPSK-Inner_1RB_Right-30-1000-PASS



NTNV-n78(3700-3800)-PC2-30-30-L-DFT-BPSK-Inner_1RB_Right-1000-3000-PASS



NTNV-n78(3700-3800)-PC2-30-30-L-DFT-BPSK-Inner_1RB_Right-3000-6000-PASS



NTNV-n78(3700-3800)-PC2-30-30-L-DFT-BPSK-Inner_1RB_Right-6000-26000-PASS



NTNV-n78(3700-3800)-PC2-30-30-L-DFT-BPSK-Inner_1RB_Right-26000-40000-PASS



NTNV-n78(3700-3800)-PC2-30-30-L-DFT-QPSK-Inner_1RB_Left-0.09-0.15-PASS



NTNV-n78(3700-3800)-PC2-30-30-L-DFT-QPSK-Inner_1RB_Left-0.15-30-PASS



NTNV-n78(3700-3800)-PC2-30-30-L-DFT-QPSK-Inner_1RB_Left-30-1000-PASS



NTNV-n78(3700-3800)-PC2-30-30-L-DFT-QPSK-Inner_1RB_Left-1000-3000-PASS



NTNV-n78(3700-3800)-PC2-30-30-L-DFT-QPSK-Inner_1RB_Left-3000-0-6000-PASS



NTNV-n78(3700-3800)-PC2-30-30-L-DFT-QPSK-Inner_1RB_Left-6000-26000-PASS



NTNV-n78(3700-3800)-PC2-30-30-L-DFT-QPSK-Inner_1RB_Left-26000-00-40000-PASS



NTNV-n78(3700-3800)-PC2-30-30-L-DFT-QPSK-Inner_1RB_Right-0.009-0.15-PASS



NTNV-n78(3700-3800)-PC2-30-30-L-DFT-QPSK-Inner_1RB_Right-0.15-30-PASS

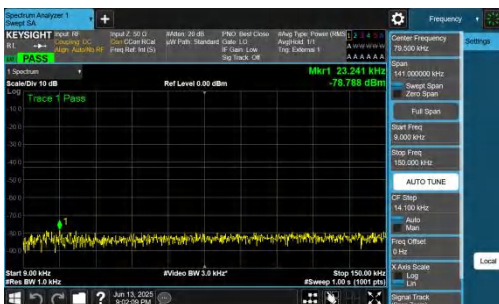 



NTNV-n78(3700-3800)-PC2-30-30-L-DFT-QPSK-Inner_1RB_Right-30-1000-PASS


NTNV-n78(3700-3800)-PC2-30-30-L-DFT-QPSK-Inner_1RB_Right-10
00-3000-PASS

NTNV-n78(3700-3800)-PC2-30-30-L-DFT-QPSK-Inner_1RB_Right-300
0-6000-PASS

NTNV-n78(3700-3800)-PC2-30-30-L-DFT-QPSK-Inner_1RB_Right-60
00-26000-PASS

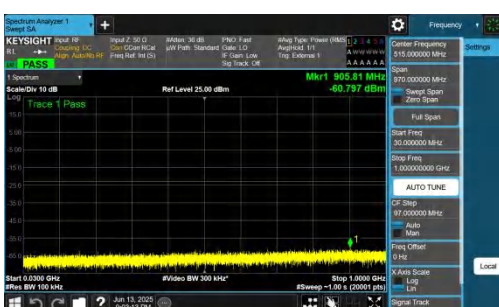 
NTNV-n78(3700-3800)-PC2-30-30-L-DFT-QPSK-Inner_1RB_Right-260
00-40000-PASS

NTNV-n78(3700-3800)-PC2-30-30-M-DFT-BPSK-Inner_1RB_Left-0.0
09-0.15-PASS


NTNV-n78(3700-3800)-PC2-30-30-M-DFT-BPSK-Inner_1RB_Left-0.15
-30-PASS

NTNV-n78(3700-3800)-PC2-30-30-M-DFT-BPSK-Inner_1RB_Left-30-
1000-PASS

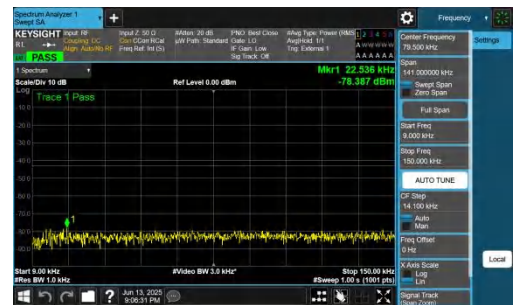 NTNV-n78(3700-3800)-PC2-30-30-M-DFT-BPSK-Inner_1RB_Left-100
0-3000-PASS


NTNV-n78(3700-3800)-PC2-30-30-M-DFT-BPSK-Inner_1RB_Left-300
0-6000-PASS

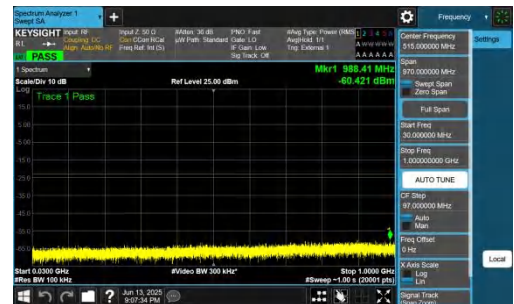 NTNV-n78(3700-3800)-PC2-30-30-M-DFT-BPSK-Inner_1RB_Left-600
0-26000-PASS

NTNV-n78(3700-3800)-PC2-30-30-M-DFT-BPSK-Inner_1RB_Left-260
00-40000-PASS

NTNV-n78(3700-3800)-PC2-30-30-M-DFT-BPSK-Inner_1RB_Right-0.0
09-0.15-PASS

NTNV-n78(3700-3800)-PC2-30-30-M-DFT-BPSK-Inner_1RB_Right-0.0
15-30-PASS

NTNV-n78(3700-3800)-PC2-30-30-M-DFT-BPSK-Inner_1RB_Right-30-
1000-PASS

NTNV-n78(3700-3800)-PC2-30-30-M-DFT-BPSK-Inner_1RB_Right-1
000-3000-PASS

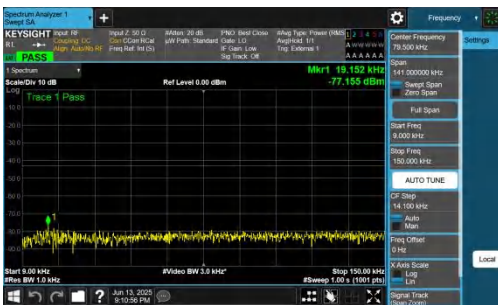 
NTNV-n78(3700-3800)-PC2-30-30-M-DFT-BPSK-Inner_1RB_Right-30
00-6000-PASS



NTNV-n78(3700-3800)-PC2-30-30-M-DFT-BPSK-Inner_1RB_Right-6000-PASS



NTNV-n78(3700-3800)-PC2-30-30-M-DFT-BPSK-Inner_1RB_Right-26000-PASS



NTNV-n78(3700-3800)-PC2-30-30-M-DFT-QPSK-Inner_1RB_Left-0.09-0.15-PASS



NTNV-n78(3700-3800)-PC2-30-30-M-DFT-QPSK-Inner_1RB_Left-0.15-30-PASS



NTNV-n78(3700-3800)-PC2-30-30-M-DFT-QPSK-Inner_1RB_Left-30-1000-PASS



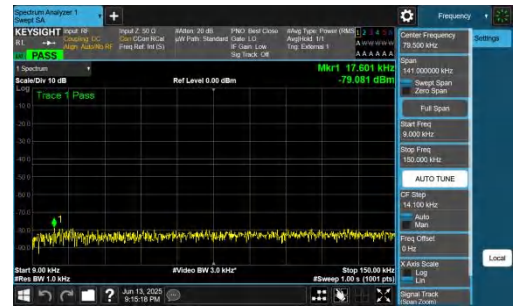 
NTNV-n78(3700-3800)-PC2-30-30-M-DFT-QPSK-Inner_1RB_Left-1000-3000-PASS




NTNV-n78(3700-3800)-PC2-30-30-M-DFT-QPSK-Inner_1RB_Left-3000-6000-PASS



NTNV-n78(3700-3800)-PC2-30-30-M-DFT-QPSK-Inner_1RB_Left-6000-26000-PASS

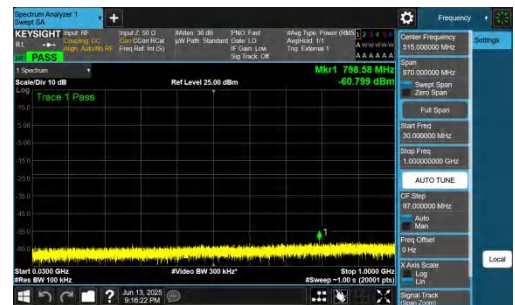 
NTNV-n78(3700-3800)-PC2-30-30-M-DFT-QPSK-Inner_1RB_Left-26
000-40000-PASS

NTNV-n78(3700-3800)-PC2-30-30-M-DFT-QPSK-Inner_1RB_Right-0.0
09-0.15-PASS

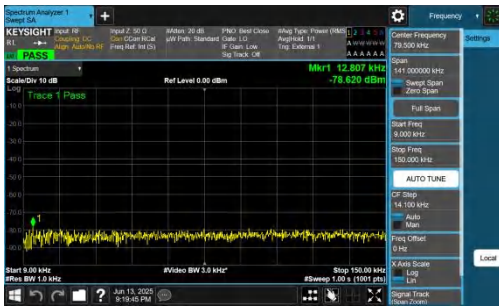 
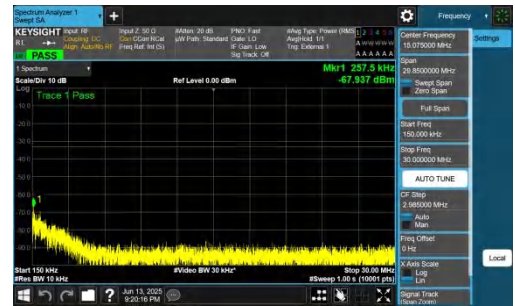 
NTNV-n78(3700-3800)-PC2-30-30-M-DFT-QPSK-Inner_1RB_Right-0.
15-30-PASS

NTNV-n78(3700-3800)-PC2-30-30-M-DFT-QPSK-Inner_1RB_Right-30
-1000-PASS

NTNV-n78(3700-3800)-PC2-30-30-M-DFT-QPSK-Inner_1RB_Right-1
000-3000-PASS

NTNV-n78(3700-3800)-PC2-30-30-M-DFT-QPSK-Inner_1RB_Right-30
00-6000-PASS

NTNV-n78(3700-3800)-PC2-30-30-M-DFT-QPSK-Inner_1RB_Right-6
000-26000-PASS

NTNV-n78(3700-3800)-PC2-30-30-M-DFT-QPSK-Inner_1RB_Right-26
000-40000-PASS


NTNV-n78(3700-3800)-PC2-30-30-H-DFT-BPSK-Inner_1RB_Left-0.0
09-0.15-PASS

NTNV-n78(3700-3800)-PC2-30-30-H-DFT-BPSK-Inner_1RB_Left-0.15-
30-PASS

NTNV-n78(3700-3800)-PC2-30-30-H-DFT-BPSK-Inner_1RB_Left-30-
1000-PASS

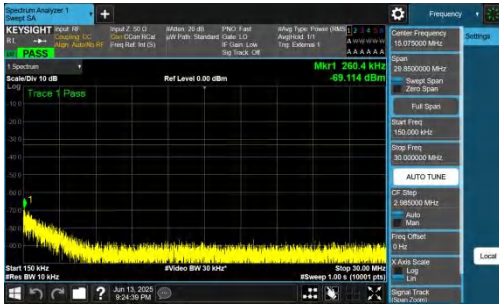 
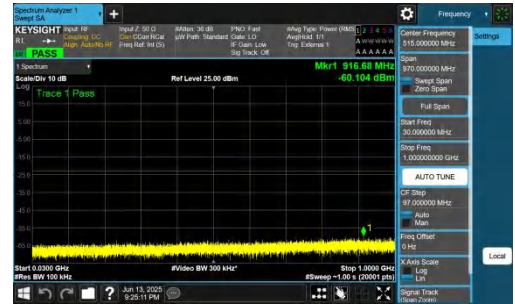 
NTNV-n78(3700-3800)-PC2-30-30-H-DFT-BPSK-Inner_1RB_Left-1000
-3000-PASS

NTNV-n78(3700-3800)-PC2-30-30-H-DFT-BPSK-Inner_1RB_Left-300
0-6000-PASS

NTNV-n78(3700-3800)-PC2-30-30-H-DFT-BPSK-Inner_1RB_Left-6000
-26000-PASS

NTNV-n78(3700-3800)-PC2-30-30-H-DFT-BPSK-Inner_1RB_Left-260
00-40000-PASS

NTNV-n78(3700-3800)-PC2-30-30-H-DFT-BPSK-Inner_1RB_Right-0.0
09-0.15-PASS


NTNV-n78(3700-3800)-PC2-30-30-H-DFT-BPSK-Inner_1RB_Right-0.
15-30-PASS

NTNV-n78(3700-3800)-PC2-30-30-H-DFT-BPSK-Inner_1RB_Right-30-
1000-PASS

NTNV-n78(3700-3800)-PC2-30-30-H-DFT-BPSK-Inner_1RB_Right-10
00-3000-PASS

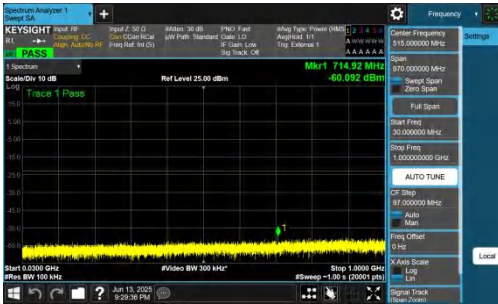 
NTNV-n78(3700-3800)-PC2-30-30-H-DFT-BPSK-Inner_1RB_Right-30
00-6000-PASS

NTNV-n78(3700-3800)-PC2-30-30-H-DFT-BPSK-Inner_1RB_Right-60
00-26000-PASS

NTNV-n78(3700-3800)-PC2-30-30-H-DFT-BPSK-Inner_1RB_Right-26
000-40000-PASS

NTNV-n78(3700-3800)-PC2-30-30-H-DFT-QPSK-Inner_1RB_Left-0.0
09-0.15-PASS

NTNV-n78(3700-3800)-PC2-30-30-H-DFT-QPSK-Inner_1RB_Left-0.15
-30-PASS



NTVN-n78(3700-3800)-PC2-30-30-H-DFT-QPSK-Inner_1RB_Left-30-1000-PASS



NTVN-n78(3700-3800)-PC2-30-30-H-DFT-QPSK-Inner_1RB_Left-1000-3000-PASS



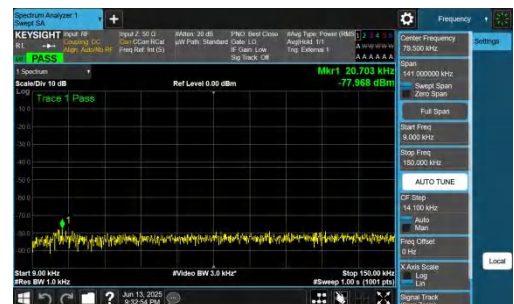 
NTVN-n78(3700-3800)-PC2-30-30-H-DFT-QPSK-Inner_1RB_Left-3000-6000-PASS



NTVN-n78(3700-3800)-PC2-30-30-H-DFT-QPSK-Inner_1RB_Left-6000-26000-PASS



NTVN-n78(3700-3800)-PC2-30-30-H-DFT-QPSK-Inner_1RB_Left-26000-40000-PASS



NTVN-n78(3700-3800)-PC2-30-30-H-DFT-QPSK-Inner_1RB_Right-0.09-0.15-PASS



NTVN-n78(3700-3800)-PC2-30-30-H-DFT-QPSK-Inner_1RB_Right-0.15-30-PASS



NTVN-n78(3700-3800)-PC2-30-30-H-DFT-QPSK-Inner_1RB_Right-30-1000-PASS



NTNV-n78(3700-3800)-PC2-30-30-H-DFT-QPSK-Inner_1RB_Right-1
000-3000-PASS



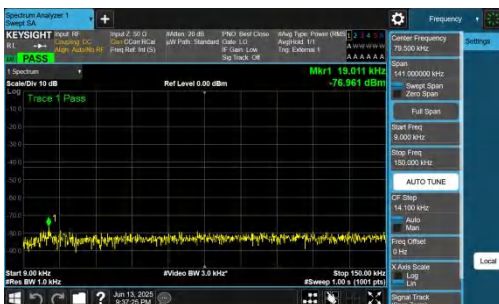 
NTNV-n78(3700-3800)-PC2-30-30-H-DFT-QPSK-Inner_1RB_Right-30
00-6000-PASS



NTNV-n78(3700-3800)-PC2-30-30-H-DFT-QPSK-Inner_1RB_Right-6
000-26000-PASS



NTNV-n78(3700-3800)-PC2-30-30-H-DFT-QPSK-Inner_1RB_Right-26
000-40000-PASS



NTNV-n78(3700-3800)-PC2-30-40-L-DFT-BPSK-Inner_1RB_Left-0.00
9-0.15-PASS



NTNV-n78(3700-3800)-PC2-30-40-L-DFT-BPSK-Inner_1RB_Left-0.15-
30-PASS



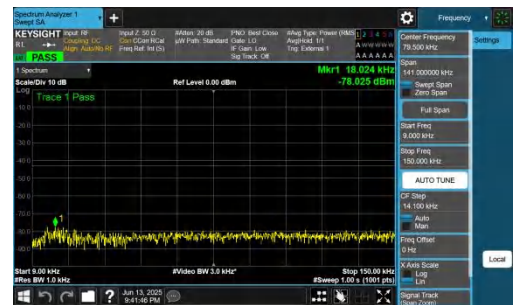 
NTNV-n78(3700-3800)-PC2-30-40-L-DFT-BPSK-Inner_1RB_Left-30-1
000-PASS




NTNV-n78(3700-3800)-PC2-30-40-L-DFT-BPSK-Inner_1RB_Left-1000
-3000-PASS


NTNV-n78(3700-3800)-PC2-30-40-L-DFT-BPSK-Inner_1RB_Left-300
0-6000-PASS

NTNV-n78(3700-3800)-PC2-30-40-L-DFT-BPSK-Inner_1RB_Left-6000
-26000-PASS

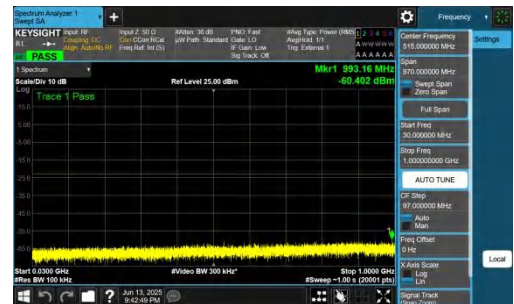 NTNV-n78(3700-3800)-PC2-30-40-L-DFT-BPSK-Inner_1RB_Left-260
00-40000-PASS

NTNV-n78(3700-3800)-PC2-30-40-L-DFT-BPSK-Inner_1RB_Right-0.0
09-0.15-PASS

NTNV-n78(3700-3800)-PC2-30-40-L-DFT-BPSK-Inner_1RB_Right-0.
15-30-PASS

NTNV-n78(3700-3800)-PC2-30-40-L-DFT-BPSK-Inner_1RB_Right-30-
1000-PASS

NTNV-n78(3700-3800)-PC2-30-40-L-DFT-BPSK-Inner_1RB_Right-10
00-3000-PASS

NTNV-n78(3700-3800)-PC2-30-40-L-DFT-BPSK-Inner_1RB_Right-300
0-6000-PASS



NTNV-n78(3700-3800)-PC2-30-40-L-DFT-BPSK-Inner_1RB_Right-6000-26000-PASS



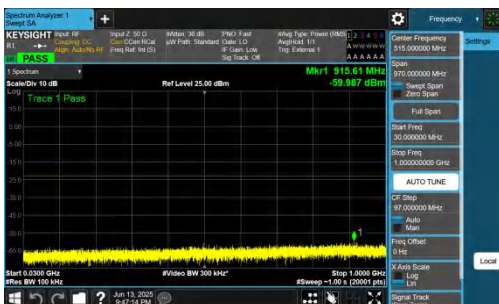 
NTNV-n78(3700-3800)-PC2-30-40-L-DFT-BPSK-Inner_1RB_Right-26000-40000-PASS



NTNV-n78(3700-3800)-PC2-30-40-L-DFT-QPSK-Inner_1RB_Left-0.009-0.15-PASS



NTNV-n78(3700-3800)-PC2-30-40-L-DFT-QPSK-Inner_1RB_Left-0.15-30-PASS



NTNV-n78(3700-3800)-PC2-30-40-L-DFT-QPSK-Inner_1RB_Left-30-1000-PASS



NTNV-n78(3700-3800)-PC2-30-40-L-DFT-QPSK-Inner_1RB_Left-1000-3000-PASS



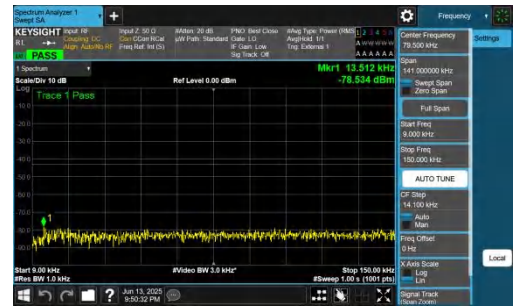 
NTNV-n78(3700-3800)-PC2-30-40-L-DFT-QPSK-Inner_1RB_Left-3000-6000-PASS



NTNV-n78(3700-3800)-PC2-30-40-L-DFT-QPSK-Inner_1RB_Left-6000-26000-PASS




NTNV-n78(3700-3800)-PC2-30-40-L-DFT-QPSK-Inner_1RB_Left-2600-40000-PASS



NTNV-n78(3700-3800)-PC2-30-40-L-DFT-QPSK-Inner_1RB_Right-0.09-0.15-PASS



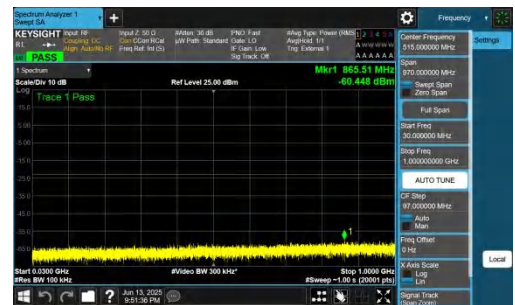 NTNV-n78(3700-3800)-PC2-30-40-L-DFT-QPSK-Inner_1RB_Right-0.15-30-PASS



NTNV-n78(3700-3800)-PC2-30-40-L-DFT-QPSK-Inner_1RB_Right-30-1000-PASS



NTNV-n78(3700-3800)-PC2-30-40-L-DFT-QPSK-Inner_1RB_Right-1000-3000-PASS



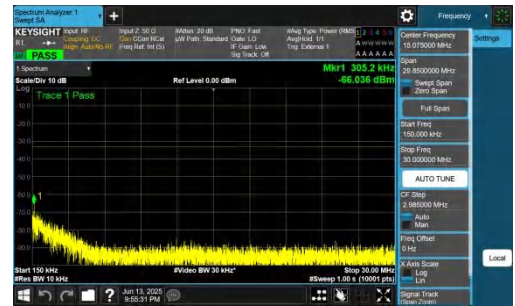 
NTNV-n78(3700-3800)-PC2-30-40-L-DFT-QPSK-Inner_1RB_Right-3000-6000-PASS



NTNV-n78(3700-3800)-PC2-30-40-L-DFT-QPSK-Inner_1RB_Right-6000-26000-PASS



NTNV-n78(3700-3800)-PC2-30-40-L-DFT-QPSK-Inner_1RB_Right-26000-40000-PASS



NTNV-n78(3700-3800)-PC2-30-40-M-DFT-BPSK-Inner_1RB_Left-0.0
09-0.15-PASS

NTNV-n78(3700-3800)-PC2-30-40-M-DFT-BPSK-Inner_1RB_Left-0.15
-30-PASS

NTNV-n78(3700-3800)-PC2-30-40-M-DFT-BPSK-Inner_1RB_Left-30-
1000-PASS

NTNV-n78(3700-3800)-PC2-30-40-M-DFT-BPSK-Inner_1RB_Left-100
0-3000-PASS

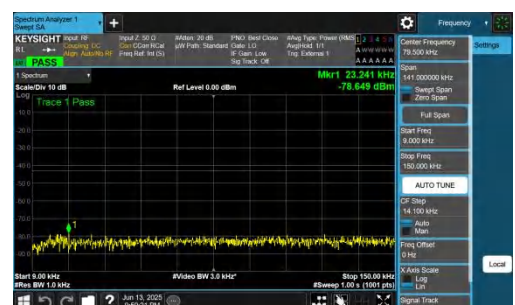 NTNV-n78(3700-3800)-PC2-30-40-M-DFT-BPSK-Inner_1RB_Left-300
0-6000-PASS

NTNV-n78(3700-3800)-PC2-30-40-M-DFT-BPSK-Inner_1RB_Left-600
0-26000-PASS

NTNV-n78(3700-3800)-PC2-30-40-M-DFT-BPSK-Inner_1RB_Left-260
00-40000-PASS

NTNV-n78(3700-3800)-PC2-30-40-M-DFT-BPSK-Inner_1RB_Right-0.0
09-0.15-PASS



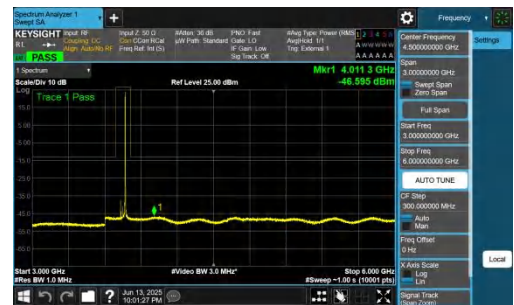 
NTNV-n78(3700-3800)-PC2-30-40-M-DFT-BPSK-Inner_1RB_Right-0.15-30-PASS



NTNV-n78(3700-3800)-PC2-30-40-M-DFT-BPSK-Inner_1RB_Right-30-1000-PASS



NTNV-n78(3700-3800)-PC2-30-40-M-DFT-BPSK-Inner_1RB_Right-1000-3000-PASS



NTNV-n78(3700-3800)-PC2-30-40-M-DFT-BPSK-Inner_1RB_Right-3000-6000-PASS



NTNV-n78(3700-3800)-PC2-30-40-M-DFT-BPSK-Inner_1RB_Right-6000-26000-PASS



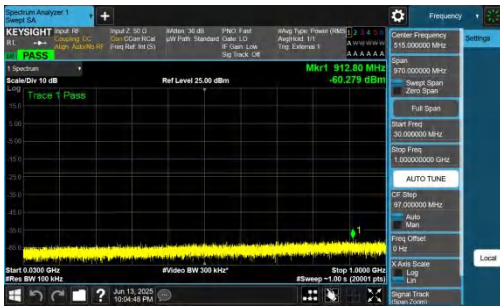 
NTNV-n78(3700-3800)-PC2-30-40-M-DFT-BPSK-Inner_1RB_Right-26000-40000-PASS



NTNV-n78(3700-3800)-PC2-30-40-M-DFT-QPSK-Inner_1RB_Left-0.09-0.15-PASS



NTNV-n78(3700-3800)-PC2-30-40-M-DFT-QPSK-Inner_1RB_Left-0.15-30-PASS



NTNV-n78(3700-3800)-PC2-30-40-M-DFT-QPSK-Inner_1RB_Left-30-1000-PASS



NTNV-n78(3700-3800)-PC2-30-40-M-DFT-QPSK-Inner_1RB_Left-1000-3000-PASS



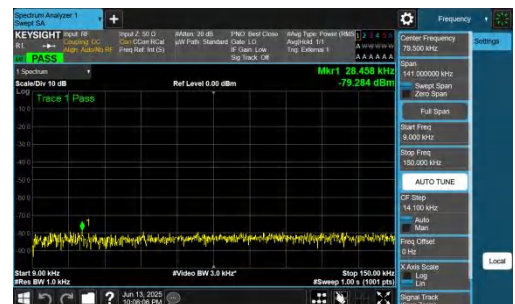 
NTNV-n78(3700-3800)-PC2-30-40-M-DFT-QPSK-Inner_1RB_Left-3000-6000-PASS



NTNV-n78(3700-3800)-PC2-30-40-M-DFT-QPSK-Inner_1RB_Left-6000-26000-PASS



NTNV-n78(3700-3800)-PC2-30-40-M-DFT-QPSK-Inner_1RB_Left-26000-40000-PASS



NTNV-n78(3700-3800)-PC2-30-40-M-DFT-QPSK-Inner_1RB_Right-0.09-0.15-PASS



NTNV-n78(3700-3800)-PC2-30-40-M-DFT-QPSK-Inner_1RB_Right-0.15-30-PASS



NTNV-n78(3700-3800)-PC2-30-40-M-DFT-QPSK-Inner_1RB_Right-30-1000-PASS



NTNV-n78(3700-3800)-PC2-30-40-M-DFT-QPSK-Inner_1RB_Right-1000-3000-PASS



NTNV-n78(3700-3800)-PC2-30-40-M-DFT-QPSK-Inner_1RB_Right-3000-6000-PASS



NTNV-n78(3700-3800)-PC2-30-40-M-DFT-QPSK-Inner_1RB_Right-6000-26000-PASS



NTNV-n78(3700-3800)-PC2-30-40-M-DFT-QPSK-Inner_1RB_Right-26000-40000-PASS



NTNV-n78(3700-3800)-PC2-30-40-H-DFT-BPSK-Inner_1RB_Left-0.009-0.15-PASS



NTNV-n78(3700-3800)-PC2-30-40-H-DFT-BPSK-Inner_1RB_Left-0.15-30-PASS



NTNV-n78(3700-3800)-PC2-30-40-H-DFT-BPSK-Inner_1RB_Left-3000-1000-PASS



NTNV-n78(3700-3800)-PC2-30-40-H-DFT-BPSK-Inner_1RB_Left-1000-3000-PASS

NTNV-n78(3700-3800)-PC2-30-40-H-DFT-BPSK-Inner_1RB_Left-300
0-6000-PASS

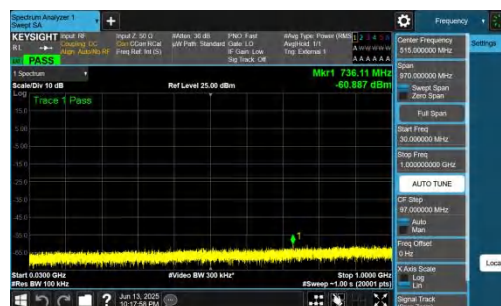 
NTNV-n78(3700-3800)-PC2-30-40-H-DFT-BPSK-Inner_1RB_Left-6000
-26000-PASS

NTNV-n78(3700-3800)-PC2-30-40-H-DFT-BPSK-Inner_1RB_Left-260
00-40000-PASS

NTNV-n78(3700-3800)-PC2-30-40-H-DFT-BPSK-Inner_1RB_Right-0.0
09-0.15-PASS



NTNV-n78(3700-3800)-PC2-30-40-H-DFT-BPSK-Inner_1RB_Right-0.
15-30-PASS



NTNV-n78(3700-3800)-PC2-30-40-H-DFT-BPSK-Inner_1RB_Right-30-1000-PASS

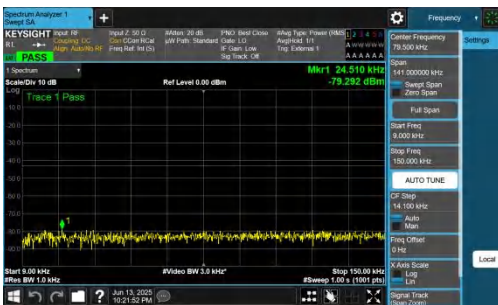 
NTNV-n78(3700-3800)-PC2-30-40-H-DFT-BPSK-Inner_1RB_Right-10
00-3000-PASSNTNV-n78(3700-3800)-PC2-30-40-H-DFT-BPSK-Inner_1RB_Right-30
00-6000-PASS




NTNV-n78(3700-3800)-PC2-30-40-H-DFT-BPSK-Inner_1RB_Right-6000-26000-PASS



NTNV-n78(3700-3800)-PC2-30-40-H-DFT-BPSK-Inner_1RB_Right-26000-40000-PASS



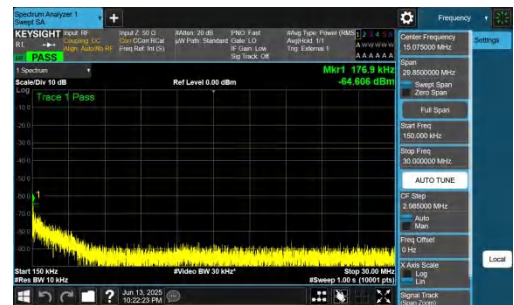 NTNV-n78(3700-3800)-PC2-30-40-H-DFT-QPSK-Inner_1RB_Left-0.009-0.15-PASS



NTNV-n78(3700-3800)-PC2-30-40-H-DFT-QPSK-Inner_1RB_Left-0.15-30-PASS



NTNV-n78(3700-3800)-PC2-30-40-H-DFT-QPSK-Inner_1RB_Left-30-1000-PASS



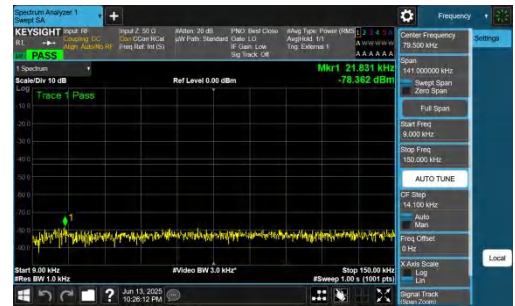 
NTNV-n78(3700-3800)-PC2-30-40-H-DFT-QPSK-Inner_1RB_Left-1000-3000-PASS




NTNV-n78(3700-3800)-PC2-30-40-H-DFT-QPSK-Inner_1RB_Left-3000-6000-PASS



NTNV-n78(3700-3800)-PC2-30-40-H-DFT-QPSK-Inner_1RB_Left-6000-26000-PASS

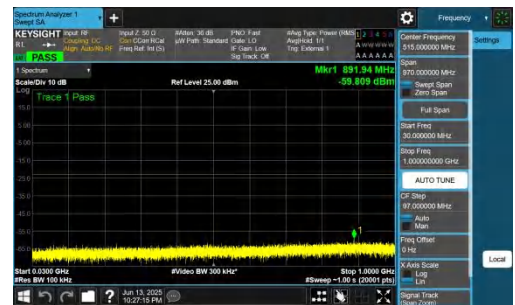 
NTNV-n78(3700-3800)-PC2-30-40-H-DFT-QPSK-Inner_1RB_Left-260
00-40000-PASS

NTNV-n78(3700-3800)-PC2-30-40-H-DFT-QPSK-Inner_1RB_Right-0.0
09-0.15-PASS

NTNV-n78(3700-3800)-PC2-30-40-H-DFT-QPSK-Inner_1RB_Right-0.
15-30-PASS

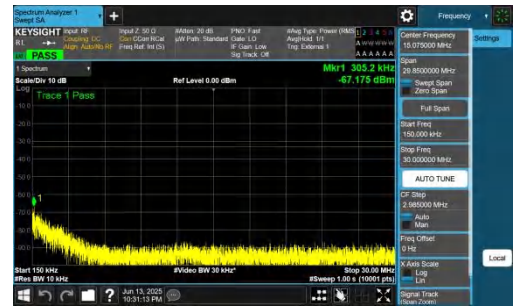 
NTNV-n78(3700-3800)-PC2-30-40-H-DFT-QPSK-Inner_1RB_Right-30-
1000-PASS

NTNV-n78(3700-3800)-PC2-30-40-H-DFT-QPSK-Inner_1RB_Right-1
000-3000-PASS

NTNV-n78(3700-3800)-PC2-30-40-H-DFT-QPSK-Inner_1RB_Right-30
00-6000-PASS

NTNV-n78(3700-3800)-PC2-30-40-H-DFT-QPSK-Inner_1RB_Right-6
000-26000-PASS

NTNV-n78(3700-3800)-PC2-30-40-H-DFT-QPSK-Inner_1RB_Right-26
000-40000-PASS


NTNV-n78(3700-3800)-PC2-30-50-L-DFT-BPSK-Inner_1RB_Left-0.00
9-0.15-PASS

NTNV-n78(3700-3800)-PC2-30-50-L-DFT-BPSK-Inner_1RB_Left-0.15-
30-PASS

NTNV-n78(3700-3800)-PC2-30-50-L-DFT-BPSK-Inner_1RB_Left-30-1
000-PASS

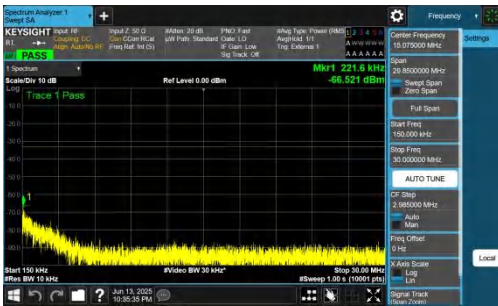 
NTNV-n78(3700-3800)-PC2-30-50-L-DFT-BPSK-Inner_1RB_Left-1000
-3000-PASS

NTNV-n78(3700-3800)-PC2-30-50-L-DFT-BPSK-Inner_1RB_Left-300
0-6000-PASS


NTNV-n78(3700-3800)-PC2-30-50-L-DFT-BPSK-Inner_1RB_Left-6000
-26000-PASS

NTNV-n78(3700-3800)-PC2-30-50-L-DFT-BPSK-Inner_1RB_Left-260
00-40000-PASS

NTNV-n78(3700-3800)-PC2-30-50-L-DFT-BPSK-Inner_1RB_Right-0.0
09-0.15-PASS



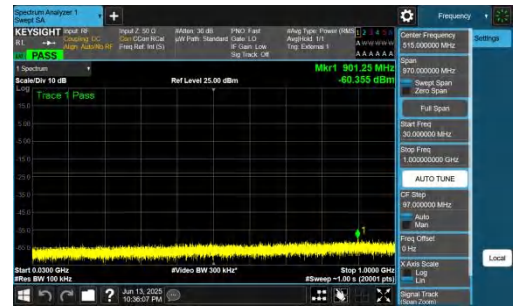 NTVN-n78(3700-3800)-PC2-30-50-L-DFT-BPSK-Inner_1RB_Right-0.15-30-PASS



NTVN-n78(3700-3800)-PC2-30-50-L-DFT-BPSK-Inner_1RB_Right-30-1000-PASS



NTVN-n78(3700-3800)-PC2-30-50-L-DFT-BPSK-Inner_1RB_Right-1000-3000-PASS



NTVN-n78(3700-3800)-PC2-30-50-L-DFT-BPSK-Inner_1RB_Right-3000-6000-PASS



NTVN-n78(3700-3800)-PC2-30-50-L-DFT-BPSK-Inner_1RB_Right-6000-26000-PASS



NTVN-n78(3700-3800)-PC2-30-50-L-DFT-BPSK-Inner_1RB_Right-26000-40000-PASS



NTVN-n78(3700-3800)-PC2-30-50-L-DFT-QPSK-Inner_1RB_Left-0.09-0.15-PASS



NTVN-n78(3700-3800)-PC2-30-50-L-DFT-QPSK-Inner_1RB_Left-0.15-30-PASS



NTNV-n78(3700-3800)-PC2-30-50-L-DFT-QPSK-Inner_1RB_Left-30-1000-PASS



NTNV-n78(3700-3800)-PC2-30-50-L-DFT-QPSK-Inner_1RB_Left-1000-3000-PASS



NTNV-n78(3700-3800)-PC2-30-50-L-DFT-QPSK-Inner_1RB_Left-3000-0-6000-PASS



NTNV-n78(3700-3800)-PC2-30-50-L-DFT-QPSK-Inner_1RB_Left-6000-26000-PASS



NTNV-n78(3700-3800)-PC2-30-50-L-DFT-QPSK-Inner_1RB_Left-26000-00-40000-PASS



NTNV-n78(3700-3800)-PC2-30-50-L-DFT-QPSK-Inner_1RB_Right-0.009-0.15-PASS



NTNV-n78(3700-3800)-PC2-30-50-L-DFT-QPSK-Inner_1RB_Right-0.15-30-PASS

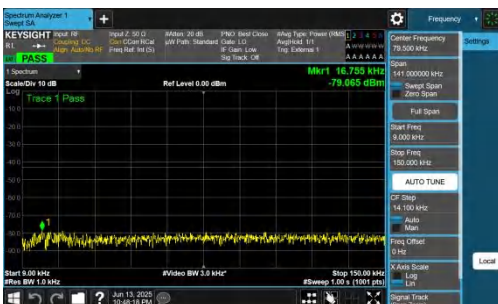 


NTNV-n78(3700-3800)-PC2-30-50-L-DFT-QPSK-Inner_1RB_Right-30-1000-PASS


NTNV-n78(3700-3800)-PC2-30-50-L-DFT-QPSK-Inner_1RB_Right-10
00-3000-PASS

NTNV-n78(3700-3800)-PC2-30-50-L-DFT-QPSK-Inner_1RB_Right-300
0-6000-PASS

NTNV-n78(3700-3800)-PC2-30-50-L-DFT-QPSK-Inner_1RB_Right-60
00-26000-PASS

NTNV-n78(3700-3800)-PC2-30-50-L-DFT-QPSK-Inner_1RB_Right-260
00-40000-PASS

NTNV-n78(3700-3800)-PC2-30-50-M-DFT-BPSK-Inner_1RB_Left-0.0
09-0.15-PASS

NTNV-n78(3700-3800)-PC2-30-50-M-DFT-BPSK-Inner_1RB_Left-0.15
-30-PASS

NTNV-n78(3700-3800)-PC2-30-50-M-DFT-BPSK-Inner_1RB_Left-30-
1000-PASS

NTNV-n78(3700-3800)-PC2-30-50-M-DFT-BPSK-Inner_1RB_Left-100
0-3000-PASS