


K16 Portable Speaker Microphone

User's Guide

Features:

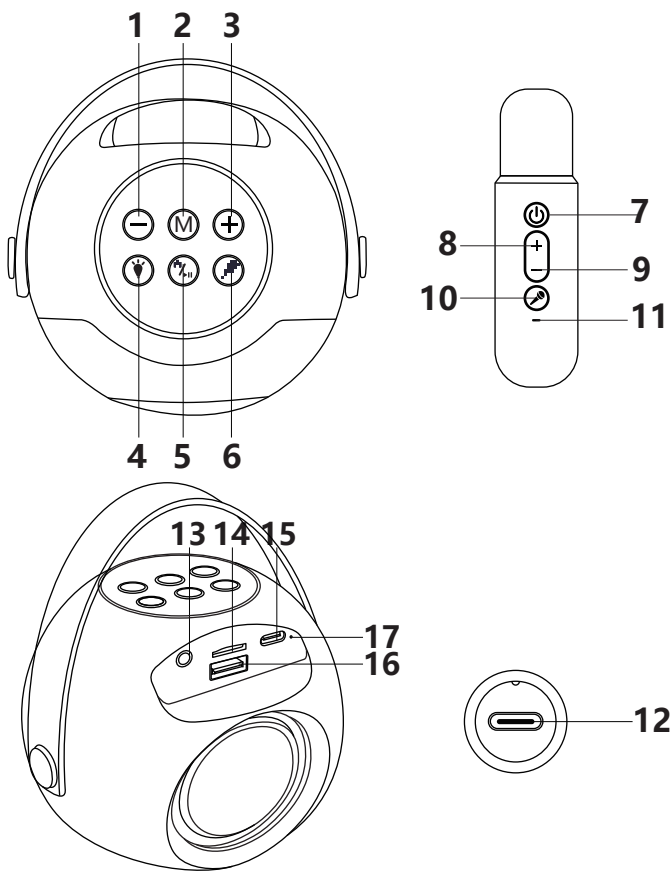

1. Short press to previous song, long press to decrease volume.
2. Manually switch playback mode, wireless/TF card/U disk, etc.
3. Short press for next song, long press for volume up.
4. Short press to switch LED/light effects.
5. Long press for three seconds to turn on/off, short press to play /pause.
6. Short press to turn on/off the original sound.
7. Press and hold the microphone for three seconds to turn on/off.
8. Short press the microphone to increase the volume.
9. Short press the microphone to decrease the volume.
10. Long press to switch to magic sound, short press to turn on/off the original sound.
11. Microphone indicator: blue light flashes when not connected, blue light is always on when successfully connected, red light is on when charging, red light is off when fully charged.
12. Microphone Type-C, 5V charging port.
13. Headphone jack.
14. TF card slot, automatically switch to TF mode when inserting files with MP3 audio type.
15. Audio Type-C5V charging interface.
16. USB port, insert the MP3 audio file to automatically switch to USB mode.
17. Speaker indicator light: Blinking blue light when not connected, solid blue light when connected successfully. Lights up when charging. Red light, after full, red light off.

The Main Function:

- Adopt high-reduction electroacoustic system
- 3.7V high performance battery
- Strong sound penetration and wide coverage
- Super powerful MP3 audio decoding technology
- All-digital audio processing, clear and high-sensitivity sound quality.

Frequently Asked Questions:

1. If the indicator light is not on after switching on, please check whether the power of the stereo is sufficient or connect the stereo to a 5V/1A power supply for charging, the charging time is about 3~4 hours. Connect it to 5V/1A power supply for charging, the charging time is about 3~4 hours.
2. No sound from the microphone, it may be that the power is not turned on, the mode is not correct, or the volume is not adjusted, please adjust the microphone volume. Please adjust the microphone volume.
3. If there is no reverb in the sound, it may be that the reverb switch has been turned off, please turn on the reverb switch.
4. If the microphone is noisy, it may be due to environmental noise, signal interference, or the speaker is too close to the microphone. Please adjust the direction of the microphone again.
5. If the Bluetooth playback is interrupted, it may be because the Bluetooth distance is too far, or there is an obstacle between the mobile phone and the loudspeaker, affecting the microphone. If the Bluetooth playback is interrupted, it may be because the Bluetooth distance is too far, or there are obstacles between the mobile phone and the loudspeaker, which affects the transmission of the signal.
6. If the Bluetooth can not be connected, it may be because the distance is too far, there are obstacles, or by other mobile phone. If Bluetooth cannot be connected, it may be because the distance is too far, there is an obstacle, or it is connected by another mobile phone, please get close to the mobile phone to avoid the obstacle and disconnect the connected mobile phone.
7. If it can not be charged, check whether the charger is normal, and whether the red indicator light of the charging port is on when the stereo is charging. Light on the charging port when the stereo is charging.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Product Information:

- Product Name: Karaoke speaker in the palm of your hand
- Product Model: K16
- Execution Standard: GB-T9254.1-2021
- Output Power: 5W
- Power Supply method: DC charging and built-in battery
- Battery: High-capacity lithium battery
- Charging Voltage: DC5V
- Frequency Range: 90Hz-18KHZ
- Output Signal: 42DB

Charging Connection Schematic:

