

Instructions for Using the Remote Control

Model: ZK - 75



WARNING

Keep Out of Reach of Children: Store the remote control out of the reach of children to avoid the risk of battery ingestion, which can lead to serious injury.

Proper Disposal: If the remote control requires disposal or recycling, please follow local regulations for electronic waste to ensure the safe disposal of the button cell battery.

Do Not Disassemble: Do not attempt to disassemble the remote control, as this may result in battery leakage or damage.

- When the battery is exhausted, please replace the battery.
- When it is used for the first time, it is in the initial state. After the smart lock sets a password, the remote control key becomes invalid and the remote control key needs to be relearned.

Learn the remote control key

Press and hold the "ADD" button for 5 seconds. When a beep is heard, it means that the remote control learning state has been entered. Press any button on the remote control key to learn. When a beep is heard, the learning of the remote control key is completed.

Product description

This product adopts a one-click locking design scheme. When locked, neither the internal nor external handle can be opened. After unlocking, the internal and external handles can be opened normally.

Unlocking method

- Key: The lock can be opened and closed with a key from the outside. (Please do not leave the key in the car.)
- Password: Enter the password on the keyboard to unlock. Press the lock button to lock.
- Remote control: Press the unlock button on the remote control to unlock. Press the lock button to lock.
- Internal: When inside, rotate the bolt switch to open and close the lock.
- All locking and unlocking methods can be used to cross-lock and unlock.

Set password

This product is set to the initial state when it leaves the factory. In the initial state, there is no password. The remote control key is in an unencrypted initial state. You can press and hold the "ADD" button to add a new password or remote control key. After setting a new password, it will automatically exit the initial mode.

Steps are as follows:

- Press and hold the "ADD" button for 5 seconds. After hearing a beep, enter your new password and press the Unlock button to confirm. The new password is set successfully. You can also add more passwords.
- Press and hold the "ADD" button for 5 seconds. After hearing a beep, press any button on the remote control key to learn the remote control. The new remote control is set successfully.

You can also add more remote control keys.

- Press and hold the "RESET" button for 5 seconds. After hearing a beep, press the Unlock button to confirm. The smart lock will restore the initial settings and delete all passwords and remote control keys.

It is recommended that you do not leave the key in the car. Generally, the key is not needed.

The key is only used when the battery is exhausted and the lock cannot be opened by remote control or password. Therefore, you can leave the key at home. When the smart lock is out of power, you can use the key to open the door.

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning for portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.