



The diagrams illustrate the controls and ports of the Philips SHB9500/00 headphones:

- Top View:** Shows the top of the right earcup with the "Watch and Earbuds Button" at the top and the "Microphone/Mobile Phone port" at the bottom.
- Side View:** Shows the side of the right earcup with the "Earbuds charging port" on the left and the "Watch charging port" on the right.
- Front View (Left Earcup):** Shows the front of the left earcup with the "Ear Button" on the left, the "Microphone Up/Next Song Button" and "Microphone Down/Previous Song Button" in the center, and the "Mobile Phone Answer Button" on the right.
- Front View (Right Earcup):** Shows the front of the right earcup with the "Watch and Earbuds Button" at the top, the "Type-C Input" on the left, the "Charging/Indicator Light" in the center, and the "Phone Charging/Indicator Light" on the right.

© 2025 OXAA CORPORATION.
 MADE IN CHINA

风琴页折页 四折五页 正反面128g双铜 120*90mm 单色

[illegible]

Le problème peut provenir de la bobine de réception du téléphone. Il est recommandé de mettre à jour ou de réparer la bobine de réception (si intégrée).

Déclaration sur l'exposition aux radiofréquences (Bluetooth):
Cet appareil a été évalué et répond aux exigences générales en matière d'exposition aux radiofréquences. Il peut être utilisé dans des conditions d'exposition portables sans restriction.

