

10.51-inch Tablet PC

Quick Start Guide



Welcome to use

Support private customization of industry computers

introduce

Thank you for choosing a new tablet PC.

This guide aims to help users quickly understand and familiarize themselves with our products. Here we have briefly introduced the key layouts and definitions using numbers and text.

Contents

I . Precautions before Use	-----	03
II .Key Layout and Definitions	-----	03
III. Introduction to Desktop	-----	04
IV. Basic Operations	-----	05
1. Introduction to app Interface	-----	05
2.All settings	-----	05
3. Dormancy, restart and power off	-----	06
4. Security Management	-----	06
V .Simple troubleshooting:	-----	06
1. crash	-----	06
2. Wireless unable to log in or access the Internet	-----	06
3. Wake up problem	-----	07
4. blue screen	-----	07
5. System crash	-----	07
6. Hardware damage	-----	07
VI. after-sale repairing	-----	08

I. Precautions before Use

1. This production is suitable for use in non-tropic areas below 2,000 meters, and the mark  in the nameplate indicates the product is suitable for use in non-tropic areas.
2. Prevent the Tablet PC from falling to the ground or being strongly impacted otherwise.
3. Do not use it in the long term in any environment where the air is too cold, too hot (<35°C), too humid or with too much dust. Do not expose the Tablet PC to sunlight.
4. Avoid using it in the strong magnetic and strong static environment as much as possible.
5. Once any water or other liquid splashes onto the Tablet PC, close it immediately and do not use it until it dries out.
6. Do not clean the Tablet PC with any detergent containing chemical element or other liquid to avoid causing damage due to corrosion and becoming damp. If cleaning is really necessary, clean it with dry soft cloth tissue paper.
7. Our company shall not bear any and all responsibilities for loss or deletion of material inside the machine caused due to abnormal software and hardware operation, maintenance or any other accident.
8. Please back up your important material at any time to avoid loss.
9. Please do not disassemble the Tablet PC by yourself; otherwise you will lose the right to warranty.
10. This product supports the overwhelming majority of mainstream brands of 3G DONGLE network cards. The cases for 3G Dongle may be different. It is suggested that you test it to make sure it is OK before buying it.
11. Quick Use Guide and the relevant software shall be updated at any time. If any anything is found to be inconsistent with the Quick Use Guide, the material object shall prevail.
12. Replacement with incorrect type batteries may cause explosion. Make sure to use original batteries.

II. Key Layout and Definitions




- ① Power button: Press it down to start or close the touch screen panel. You can also let the computer to enter dormancy through this button or wake from the dormancy mode.
- ② Sound+: Raise volume
- ③ Sound-: Lower volume

- ④ USB 3.0 Interface: You can directly inserted USB flash disk, mouse, keyboard.
- ⑤ RJ45 connection port :A connector that connects Ethernet cables and network devices. Its function is to connect different types of network devices through Ethernet cables for data transmission in local or wide area networks
- ⑥ Front CCD camera: take photos, and record pictures
- ⑦ Logo display light: Customizable logo
- ⑧ Movable base keyboard interface: This interface is magnetic, which is convenient for alignment and firmly linking the Table PC and the keyboard.
- ⑨ Socket for earphone and microphone: This socket can transmit the audio signals of Tablet PC to loudspeaker or earphone.
- ⑩ TYPE-C interface: charging and data transmission
- ⑪ HDMI Interface: High-Definition Multimedia Interface
- ⑫ USB 3.0 Interface: You can directly inserted USB flash disk, mouse, keyboard.
- ⑬ Power DC Interface: Recharge your Tablet PC through DC interface.
- ⑭ SIM card slot: Built-in 4G internet
- ⑮ Pogopin magnetic attraction: used to connect to a charging cabinet for charging
- ⑯ Back CCD camera: take photos, and record pictures
- ⑰ Battery compartment: for storing batteries
- ⑱ Bracket: Fix the computer onto the desktop

III. Introduction to Desktop

Windows start image: On the start screen, you can see many programs fixed in the image. These application programs are displayed in the form of “magnet”. As long as you click them, you can easily visit them. You need to log on your Microsoft account before the application program completely runs.

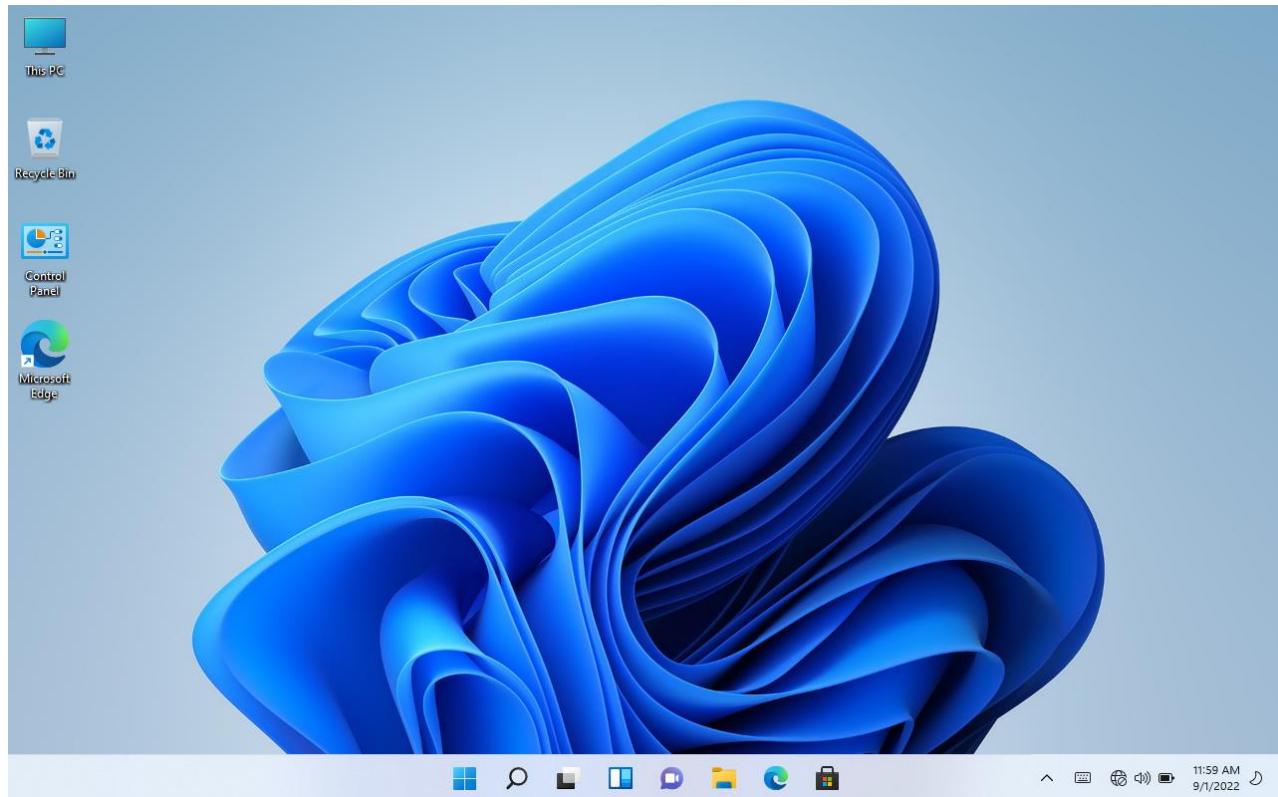

IV. Basic Operations


1. Introduction to app Interface

Besides the application programs already fixed on the start screen, you can also start other application programs in all application programs, such as other software application programs attached to the Tablet PC. If you want to fix more application programs on the start interface, see the operation in the figure below, (1) lightly touch, press and hold the application program magnet for about one second and then let go, and select (2) to fix to the start screen.

Conversely, if you want to cancel or delete a certain application in the start screen, (1) lightly touch, press and hold the application program magnet for about one second and then let it go and run, and select (2) attribute column to cancel the programs such as fixation and deletion and then it can be completed.

2. All settings

There is a square balloon icon in the lower right corner of the tablet desktop. Click it and all the settings menu will pop up. You can set up your computer.

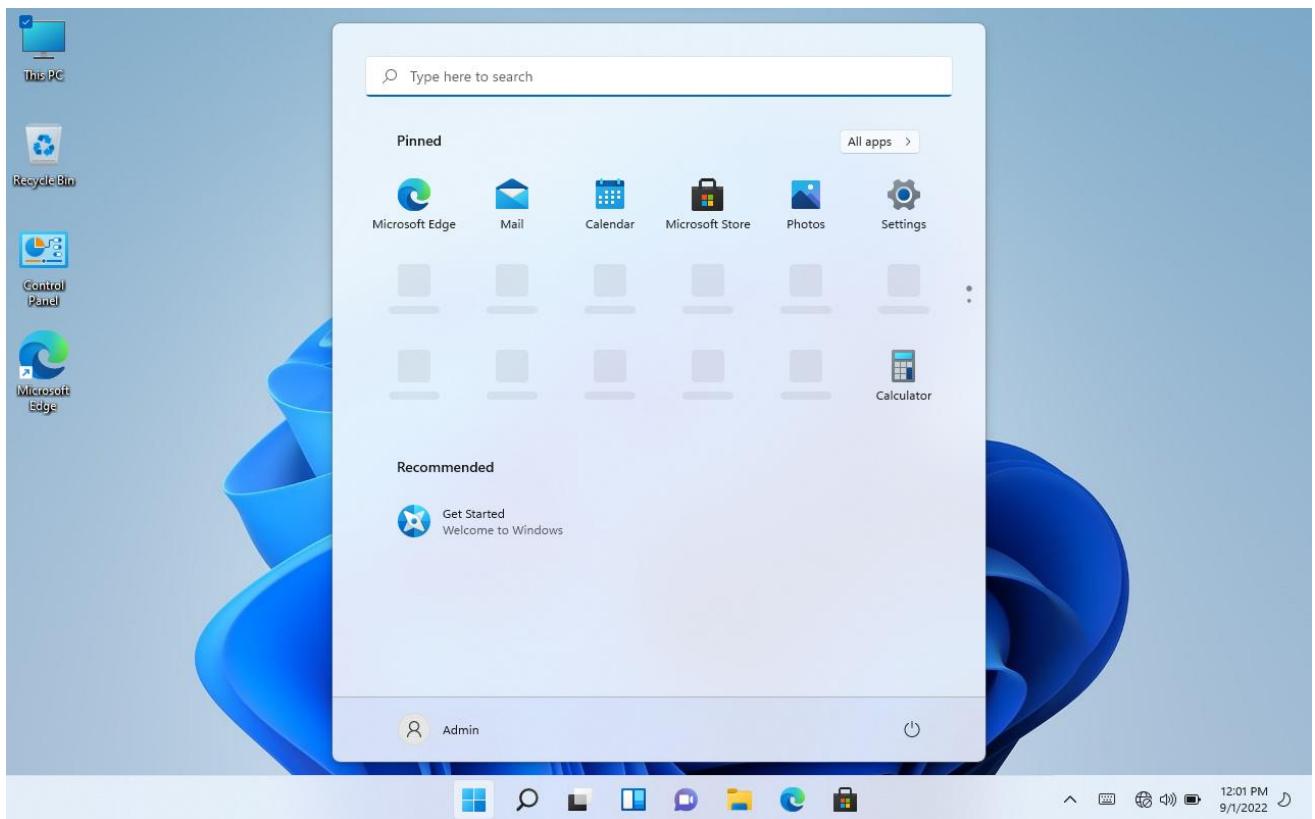

Virtual keyboard


Taskbar settings



3. Dormancy, restart and power off , Click the start menu bar in the lower left corner, pop up a window, and select the on / off icon

4. Security Management

Time, language, standby, key function, user, all function settings can be customized according to your needs

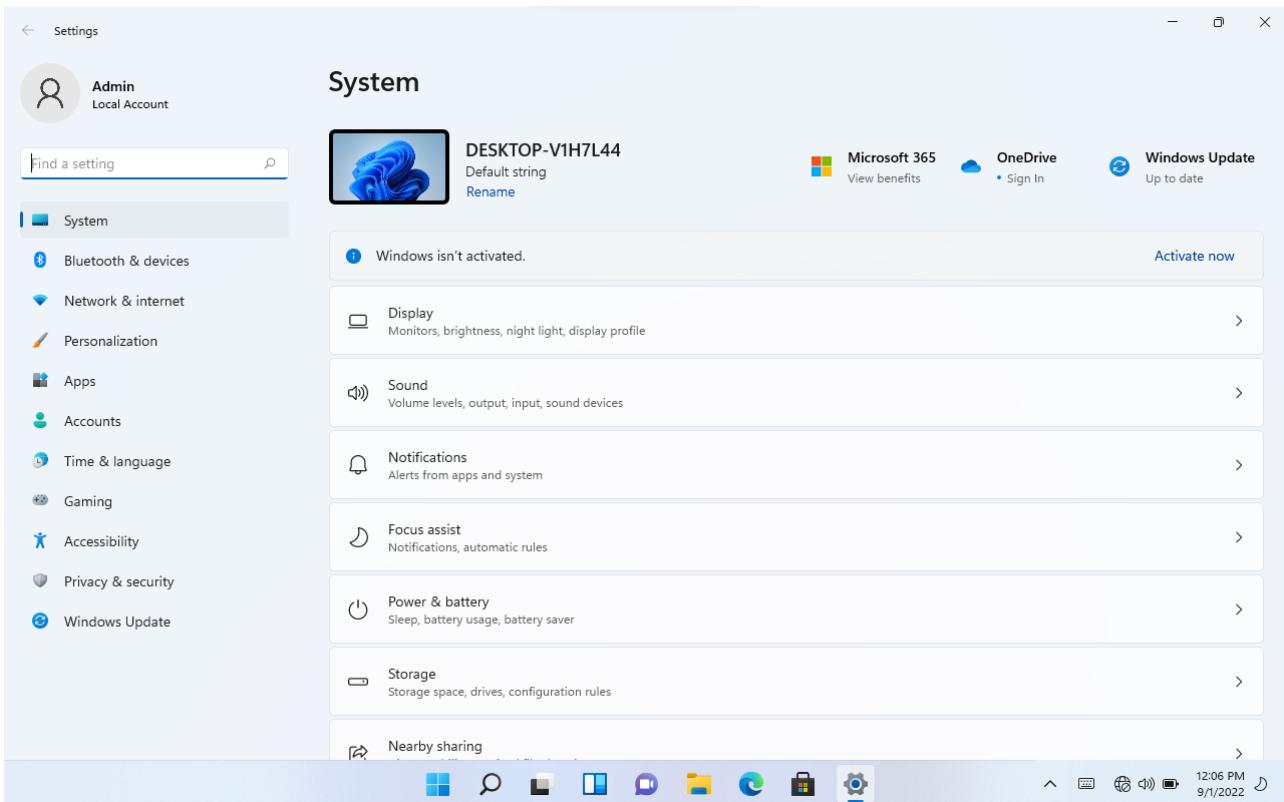

V. Simple troubleshooting:

1. crash:

If there is a crash in use, you can wait for two minutes. If the process returns to normal after completion, you can save the file and restart it, and observe it. If there is a crash occasionally, you need to observe it to see if it happens frequently. If there is a long-term phenomenon, it is recommended to replace the system or clean up the software.

2. Wireless cannot log in or access to the Internet:

- A. if there is a fault in the wireless or wired Internet, generally restart the computer and reconnect.
- B. If you still can't connect to the network, please turn off the router and the computer and wait for more than 15 minutes at the same time. After a break, turn on the router and the computer again and reconnect.
- C. if the fault has not been eliminated, you can restore the router and reset it, and connect to the computer wireless network again.
- D. please confirm your password again, and check whether the wireless icon has an exclamation point or is abnormal.
- E. you can right-click this computer on the desktop, click manage, open the device manager, check whether the wireless device driver in the device manager is abnormal, open the network adapter, click the device, and uninstall the network device. When uninstalling, please do not check "uninstall delete driver". If you check the box, the driver will be permanently deleted. This method is to add again Load the driver. After uninstalling, you can restart the computer. The computer will automatically install the driver. In general, 80% of the computer WiFi failures can be fixed.
- F. if none of the above methods can be solved, you can check the delete driver in step e and reinstall the original WiFi driver of the computer.

G. if all the above methods are invalid, please reinstall the system. Generally speaking, the failure probability of WiFi is very low. Generally, these methods can solve the problem.

3. Wake up problem:

After the computer is in standby mode, please do not press the power on button immediately. Normally, you need to wait for 3-5 seconds. When you wake up, you also need to wait for 3-5 seconds. If you press the on key frequently, the machine will shut down or crash.

4. blue screen:

Enter the blue screen before entering the system, please restart the computer and check whether the incompatible software has just been installed. If there is any incompatible software or driver, please uninstall,

The system has been changed or updated so that the computer cannot enter the system. If the boot file is not damaged, restart it twice more. The problem can be fixed automatically. If the blue screen is long-term, it is recommended to reinstall the system. The blue screen may be caused by loose memory or incompatibility.

5. System crash:

The system fails to enter the system due to system crash. You can prepare a 16gu disk. Download the system image on our network disk, make your own U disk recovery disk and install the system through the tutorial. Please communicate with customer service directly.

6. Hardware damage:

The computer is warranted for one year. If the hardware (except for consumables, battery and power supply) is not faulty by human, you can enjoy free repair service. You can bring the warranty card (in this manual), fill in your name, address, telephone number, purchase time and fault description for warranty service.

after-sale repairing

Dear users! Hello!

Please take good care of your computer, do not water, do not fall, artificial fall and water is not in the scope of warranty, computer BIOS has been set up, please do not brush the motherboard BIOS at will.

If you want to return to the factory for maintenance or repair, you can send this card for warranty! And fill in the following information.

Please give support and cooperation!

Your name: _____

Your phone number: _____

Your backup phone number: _____

Your permanent address: _____

Computer purchase date: _____

Brief description of computer failure: _____

Your requirements for us: _____

Whether the computer is damaged: _____

Other non repaired products: _____

Please contact us in time if you have any difficulty in using

Welcome to our products
Thank you for your purchase

FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.