

TOY SERIES

Stunt car



- 1)PRESS AND HOLD THE BUTTON FOR 3 SECONDS TO TURN
THE MUSIC FUNCTION ON/OFF
2)SHORT PRESS THE BUTTON TO SWITCH ON/OFF THE AUTO
DEMO FUNCTION

Model No.:

9086

9076, 9076S, 9078, 9078S, 9079, 9079S, 9086, 9086S, 9086-1, 9086-1S, 9086-2,
9086-2S, 9071, 9072, 9073, 9074, 9071S, 9072S, 9073S, 9074S, 283, 283Q, 8080,
8080S, 8081, 8081S, 8082, 8082S, 9029QA, 9085, 9084, 281, 282, 285, 286, 8068,
8069, 9066-1, 9066-1S, 9066, 9066S, 9029SA, 9061, 9062, 9060S, 9061S, 9062S,
9093, 9095, 9096, 9097, 9098, 9010, 9011, 9013, 9015, 9016, 9017, 9018, 9019,
9020, 9021, 9022, 9023, 9025, 9026, 9027, 9028, 9029, 9030, 9031, 9032, 9033,
9035, 9036, 9037, 9038, 9039, 9050, 9051

Manufacturer: Shantou Chenghai Long Xiang Toys Industry Co. , Ltd.
Address:Chenghua industrial zone, Wenguan Road, Chenghai District
city, Shantou

EN - INFORMATION TO KEEP - TO READ BEFORE USING

Instruction sheet must be retained since it contains important information.

WARNING! Not suitable for children under 3 years. Small parts : choking hazard.

The dinosaur is equipped with one non replaceable 3.7V rechargeable lithium battery, and the remote control uses two 1.5V AA batteries.

Non-rechargeable batteries must not be recharged. Do not mix new and used batteries or batteries of different types or different brands. Insert the batteries being careful to respect the polarity of the batteries indicated in the box (+ and -). The terminals of a battery must not be short circuited. Remove the used batteries from the box. Remove the batteries before disposing of the product. Remove the batteries if you do not use the product during a prolonged period. In the event leaks occur with the batteries, and the liquid (electrolyte) touches the skin, immediately clean with water and soap or neutralise with a mild acid like lemon juice or vinegar. If the liquid comes into contact with the eyes, immediately rinse with clear water for at least 10 minutes, then consult a doctor. Rechargeable batteries are to be removed before being charged. Rechargeable batteries are only to be charged under adult supervision.

WARNING: KEEP BATTERIES OUT OF REACH OF CHILDREN. Batteries are small objects. Replacement of batteries must be done by adults.


WARNING: This toy generates lightning which can trigger epileptic seizures in sensitive people.




The crossed out wheeled bin symbol means that this product shall not be disposed of with normal household waste. Electronic and Electrical Equipment not included in the selective sorting process are potentially dangerous for the environment and human health due to the presence of hazardous substances. Please dispose of responsibly at an approved waste or recycling facility.



Batteries should not be disposed of with household waste. Please dispose of them in an appropriate recycling point for electrical and electronic equipment. Consult your local authorities or dealer for advice on recycling. Batteries must be disposed of safely.

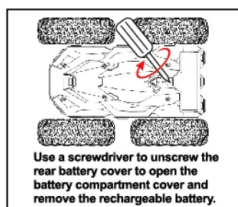


Use a screwdriver to unscrew the rear battery cover to open the battery compartment cover and remove the rechargeable battery.

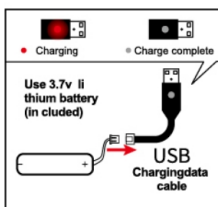

• Charging • Charge complete

Use 3.7v lithium battery (included)

USB Charging data cable

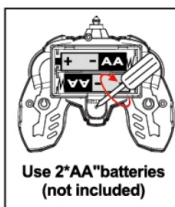

Use 2*AA"batteries (not included)

WARNING:
CHOKING HAZARD-Small parts
Not for children under 3 years

NOT SUITABLE FOR CHILDREN UNDER 3 YEARS
DUE TO SMALL PARTS
غير مناسب للأطفال
تحت 3 سنوات (3) سنوات
سحب القالب المستوردة
COUNTRY OF ORIGIN: CHINA
بلد المنشأ: الصين


صنعت وفقاً للمواصفات العالمية
Tested according to international standards

PRECAUCIONES:
PELIGRO DE AHOGARSE. Contiene partes pequeñas. No recomendado para niños menores de 3 años.

Battery precautions

- 1) The product uses one set of 3.7V rechargeable lithium batteries; The remote control uses two 1.5V "AA" non rechargeable batteries;
 - 2) The removal and installation of batteries should be carried out correctly according to the polarity and voltage markings on the toy battery room. It should not be short circuited;
 - 3) Non rechargeable batteries cannot be charged;
 - 4) Different types of batteries or old and new batteries cannot be mixed;
 - 5) Rechargeable batteries should be removed from toys before charging;
 - 6) Rechargeable batteries must be charged under adult supervision;
 - 7) Only batteries that are the same or equivalent to the recommended battery can be used;
 - 8) The exhausted battery should be removed from the toy. If it is not used for a long time, please remove the battery from the toy.
 - 9) The power terminal must not be short circuited.
 - 10) Cannot connect to more than the recommended number of power sources.
- During the use of USB cables, their wires, plugs, casings, and other components should be regularly checked for damage. If any damage is found, the use should be stopped until it is repaired.

Warning:

This product must be used under the direct supervision of an adult. This product is not suitable for children aged 3 and under because it contains some components and please don't swallow them to avoid the risk of suffocation.
* Remove all packaging and tags before giving this toy to your child.
* Keep package for future reference.
The package contains important information which must be retained.
SPECIFICATIONS COLOURS AND CONTENTS MAY VARY FROM ILLUSTRATIONS

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC RF Exposure Warning Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment can be used in portable exposure conditions.

STUNT CAR

ROLLING DANCE STUNT CAR

360° FLIPPING FUNCTION

360°
FLIP OVER



**STUNT
REMOTE CONTROL**

MORE FEATURES NEW UPGRADES



- 1)PRESS AND HOLD THE BUTTON FOR 3 SECONDS TO TURN THE MUSIC FUNCTION ON/OFF
- 2)SHORT PRESS THE BUTTON TO SWITCH ON/OFF THE AUTO DEMO FUNCTION