 


X6

Wireless game controller

User Manual (X6)

Function diagram:

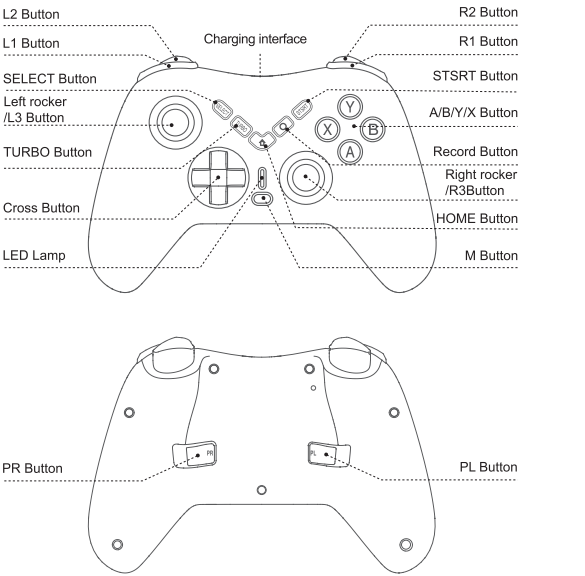

Applicable instructions:

1. This product adopts ergonomic design and feels comfortable.
2. It adopts Bluetooth 5.0 edr/ble connection, and the controller is connected with N-S and other hosts through Bluetooth.
3. This handle is applicable to switch, ps3/ps4, Android, IOS mfi/apple arcade, PC Steam and other platforms.
4. It supports shootingplus V3 app, which can be downloaded through various mobile application markets.
5. Support Android and Hongmeng hid standard mode, and you can play all kinds of game hall games that support HID standard mode.
6. Support mfi/apple arcade games in iOS 13.0 and above systems, and MFI games can also be found inShanwan MFI app download.
7. Support PS3 /ps4/switch game console to play games with Bluetooth connection.
8. Support Bluetooth connection of windows 10 system laptop and play X-input games.
9. It supports USB cable and can play pc/ps3/switch games.

- Due to the problem of mobile phone system, some mobile phones may not support this device.
- Our company is not responsible for the inability of some games to connect with this product due to irresistible factors such as software upgrade or source code change of he official game platform. Our company reserves the right of final interpretation.

 
Electrical parameters:

1. Working voltage:DC3,7V
2. Duration of use:>20H
3. Charging voltage / current:DC5V/300mA
4. Battery capacity: 450mAh
5. Working current:<25mA
6. Sleep current:<10uA
7. Bluetooth transmission distance: <=8M
8. Standby time: 30 days at full power

SWITCH Mode:


On the SWITCH host, select Controllers-> Change Grip/order,

the SWITCH host pairing mode screen is displayed. Press L+R on the controller. At the same time, press **R2 + SELECT Button** for 2 seconds to enter the SWITCH mode for pairing. The LED indicator of the handle blinks green at short intervals, and the LED indicator of the controller blinks green for a long time after pairing. Have successfully connected, you can directly press **SELECT Button** , LED light green slow flashing. automatic back connection.

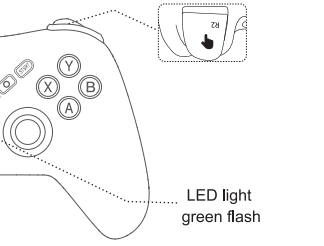


PS3/PS4 Mode:

 Connect the controller directly to the PS3/PS4 host with the USB data cable. Press **SELECT Button** to perform code alignment. After code alignment is successful, the LED indicator blinks red slowly. Has been successfully connected, you can directly press the **SELECT Button**, LED light red long bright, automatic back connection.

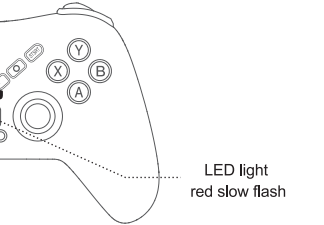


Android ShootingPlus V3 Mode (Hongmeng system is the same as Android ShootingPlus V3 Mode):

 At the same time, press **A + SELECT Button** for 2 seconds to enter the V3 Android mode. The LED light of the controller blinks purple quickly. When the Android phone searches for Gamepad, select Connect. After the connection is successful, the LED light of the controllers will brighten in purple. Has been successfully connected, you can directly press the **SELECT Button**, LED light purple light slowly flashing, automatic back connection.

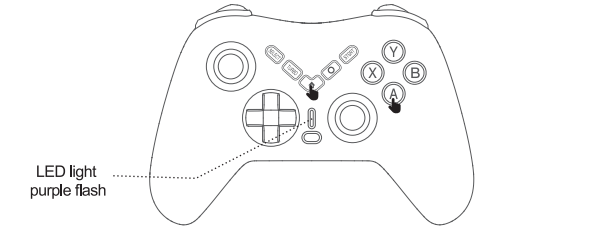


iOS ShootingPlus V3 mode:

 At the same time, press **Y + SELECT Button** for 2 seconds to enter the V3 iOS mode. The LED light of the Controller flashes cyan quickly. When the iPhone searches for Gamepad, select Connect. After the connection is successful, the LED light of the controllers will brighten in purple. Have successfully connected, you can directly press the **SELECT Button**, LED light purple slow flash, automatic back connection.

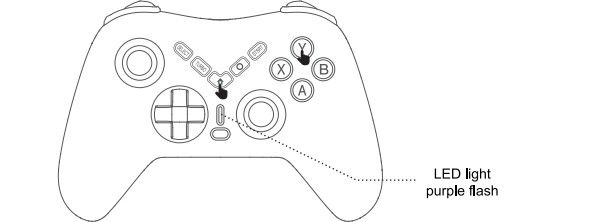


Android Standard Mode:

 1. Press **X + SELECT Button** at the same time to enter the standard Android mode. The LED light of the controller flashes yellow quickly. When the device name "Gamepad" is found on the Android/Hongmon phone, select Connect. After the connection is successful, the LED light of the controllers will be bright yellow. Have successfully connected, you can directly press the **SELECT Button**, LED light yellow slow flash, automatic back connection.
2. Android/Hongmeng standard mode game download, you can download a variety of game halls, enter the platform to download the required games.

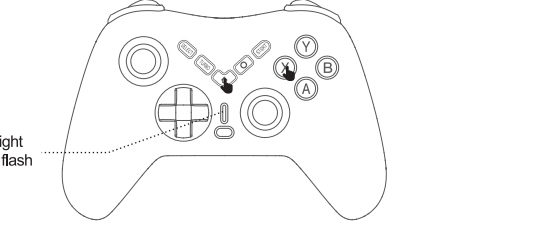


iOS MFi / Apple Arcade mode (iOS 13.0 or later):

 At the same time, press the **B + SELECT Button** for 2 seconds to enter the iOS MFi mode. The LED light of the Controller flashes cyan quickly. When the device name"DUALSHOCK 4 Wireless Controller" is found on the iPhone, select Connect. After successful connection, the controllers LED light is cyan and bright. Have successfully connected, you can directly press the **SELECT Button** , LED light cyan slow flashing, automatic back connection. MFI games can also be downloaded from the ShanWan MFI app.

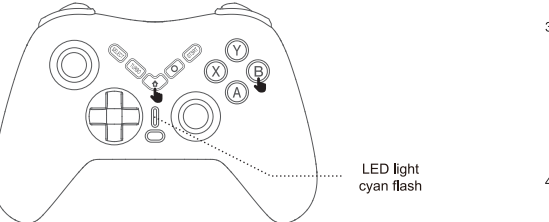


PCX-input Bluetooth mode

 At the same time, press the **R1 + SELECT Button** for 2 seconds to enter the X-input Bluetooth mode. The LED light of the Controller flashes blue quickly. When the PC searches for the device name "Xbox Wireless Controller", select Connect. After the connection is successful, the LED light of the controllers will be blue and bright. Have successfully connected, you can directly press the **SELECT Button**, LED light blue slow flash, automatic back connection.

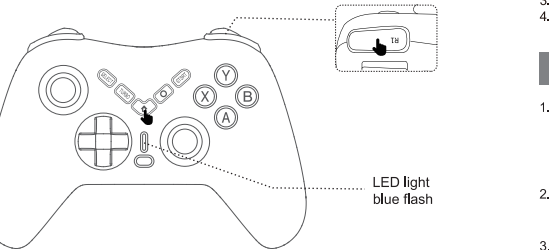

Programming:

 1. When the gamepad is enabled, the default programming key PL/PR is null
2. Press and hold the "M" button and the programming button (PL/PR), which need to be set at the same time, and then pair the LED indicator The light flashes slowly,the motor shakes a hint, and the key is released to enter the programming mode.
3. Press one or more regular function keys to copy (for example, press "A/B/X/Y /R1 /R2 / L 1/L2 / L3 / R3 and arrow keys and left and right joysticks [joysticks count as eight keys]". When you press the copy key, the LED flashes [can recognize and record two or more consecutive entries of the same key, for example, the A key is pressed twice continuously during the input, and the A key is also pressed twice continuously during the output], press the corresponding programming "PL/PR" button again to confirm and automatically exit [if you do not press the M key for 60 seconds to automatically save the exit], and the motor vibrates when exiting. When the programming setting is complete, the mode indicator returns to the display state before the setting.
4. Cancel the programming function: After entering the programming setting mode,directly press the PL/PR Key to exit, without setting any Key [This PL/PR Key is empty without any key value].

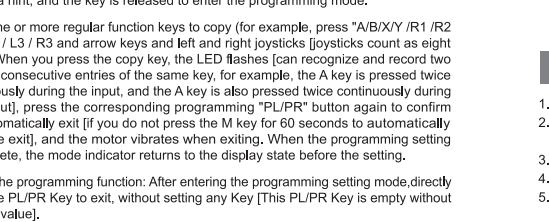

2.4G mode (optional):

PC device / smart TV / TV box /PS3 host 2.4G wireless connection operation method:

1. Insert the 2.4G wireless receiver into the USB port of the PC device/smart TV/TV box.
- 2.After pressing the **L1 + SELECT Button** at the same time, the controller enters wireless pairing mode, and the LED light flashes white.
- 3.After the wireless connection is OK, the LED light will remain white for a long time.
4. You can start operating PC devices/smart TVs/TV boxes/PS3 consoles to download and install games.

Controller charge / sleep / wake-up function:

1. When the controller is charged in the off state (press the **SELECT Button** to turn on / off), the corresponding mode indicator flashes slowly and remains on after full charge. When charging in the Bluetooth connection state, the corresponding mode indicator light flashes slowly and stays on after being fully charged.
2. Sleep / wake-up function: the game controller will enter sleep state if it is not used within 1 minutes. When heavy Press the **SELECT Button** to wake up when new use, and then connect back.
3. When the battery is low, the corresponding mode indicator flashes.
4. In wired mode, the corresponding mode does not make charging instructions.

Wired USB mode operation method and precautions:

1. Insert the USB cable, and the controller will automatically recognize the currently inserted device (there is no need to press the **SELECT Button** to power on in wired mode);
2. After inserting the USB, the LED light flashes. In PS3 and Switch host modes, the indicator light for successful USB recognition will automatically assign colors based on the channel issued by the host

Matters needing attention:

1. Please do not store this product in a damp or hot place.
2. Do not knock, beat, stick, puncture, or try to disassemble this product, so as to avoid unnecessary damage to the product.
3. The built-in battery of the product should not be discarded with garbage.
4. Do not charge the handle near fire or other heat sources.
5. Non professionals are not allowed to disassemble this product, otherwise it will not be included in the after-sales warranty service.

Operation mode:

Bluetooth profile:

| Applicable system                       | Android system                       |                             | iOS system                   |                          |
|---|--------------------------------------|-----------------------------|------------------------------|--------------------------|
| Working mode                            | Android V3 games mode                | Android standard HID mode   | iOS MFi mode                 | iOS V3 mode              |
| Mode pairing (long press for 2 seconds) | A Button + SELECT Button             | X Button + SELECT Button    | B Button + SELECT Button     | Y Button + SELECT Button |
| Indicator light                         | Purple                               | Yellow                      | Cyan                         | Purple                   |
| Remarks                                 | Play Android Market Downloaded games | Play games in the game hall | Play ShanWan MFi App in game | Play App Store in game   |

Other Bluetooth profiles:

| Working mode                            | PS3 host                | PS4 host                | Switch host               | PC Bluetooth mode         |
|---|-------------------------|-------------------------|---------------------------|---------------------------|
| Mode pairing (long press for 2 seconds) | Plug in USB for pairing | Plug in USB for pairing | R2 Button + SELECT Button | R1 Button + SELECT Button |
| Indicator light                         | Red                     | Red                     | Green                     | blue                      |
| Remarks                                 | Play PS3 games          | Play PS4 games          | Play Switch games         | Play PC X-input game      |

PS4 Bluetooth mode has no function in Android version

2.4G mode:

| Applicable system                       | Windows system   | PS3 Game Console           | Switch game console        |
|---|--|----------------------------|----------------------------|
| Working mode                            | 2.4G wireless mode   | 2.4G wireless mode         | 2.4G wireless mode         |
| Mode pairing (long press for 2 seconds) | L1 Button + SELECT Button  | L1 Button + SELECT Button  | L1 Button + SELECT Button  |
| Indicator light                         | White  | White                      | White                      |
| Remarks                                 | Wireless receiver is required. Power on the default bit X-input 360 mode, press Select + start key for 2 seconds to switch to D-input mode | Wireless receiver required | Wireless receiver required |

Wired mode:

| Applicable system     | Windows system  | PS3 Game Console                             | Switch game console                          |
|-----------------------|---|--|--|
| Working mode          | USB Wired mode  | USB Wired mode                               | USB Wired mode                               |
| Mode pairing          | Plug in USB automatic recognition                                 | Plug in USB automatic recognition            | Plug in USB automatic recognition            |
| Unrecognized status   | LED light flashes blue  | LED light flashes blue                       | LED light flashes blue                       |
| Identification status | X -INPUT: LED Blue<br>D-INPUT :LED Green                          | The corresponding channel light is always on | The corresponding channel light is always on |
| Remarks               | Long press MODE for 5 seconds to switch X & D INPUT to each other | —  | —  |

List of products:



Android Version(Overseas version)

**FCC Warning:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Caution:** Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.