


Kingimage

Kingimage

Quick Start Guide

KI-E055TV

KI-E065TV

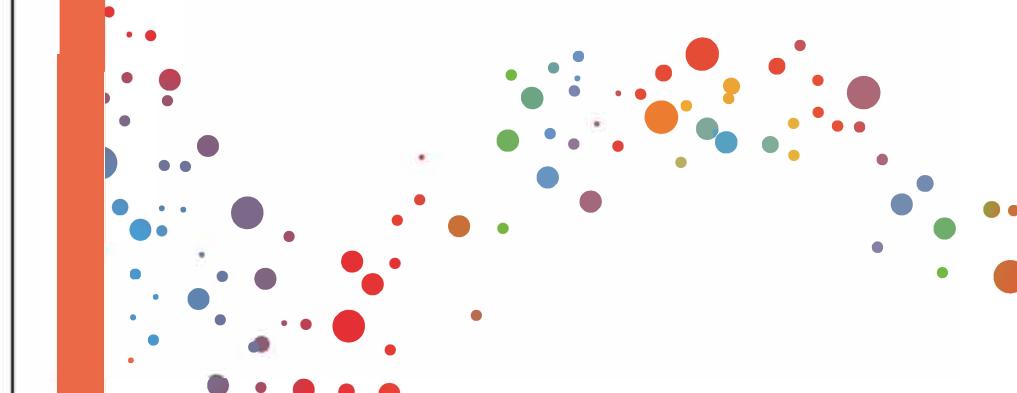

(封底)

(封面)

PANTONE 2026 C

<p>外观质量要求:</p> <ol style="list-style-type: none">1. 图文清晰、无残缺、无乱码、颜色准确, 内容与文档一致。2. 尺寸正确, 符合公差要求; 表面清洁无刮花、无破损; 不掉色、无透印, 边缘切割整齐等。	<p>Appearance and quality Requirements:</p> <ol style="list-style-type: none">1. Contents should be clearly printed without defects or garbled characters. Contents and colors should be consistent with the drawing.2. Size should be correct and conform to the tolerance requirements. The edges should be cut neatly, and the surface should be clean without scratches, damages, fading or printing through.
---	--

<p>技术要求:</p> <ol style="list-style-type: none">1. 材质:封面/封底120g铜版纸彩色印刷, 表面过哑膜; 内页80g书写纸, 黑白色印刷。2. 尺寸:A5(148X210mm), 尺寸公差(0~-3)。3. 书本式装订:页数≤80P时, 脊马钉装订, 页数>80P时胶装。4. 若封面为彩色印刷, 纸张250克以下过PPE膜; 250克及以上过UV。5. 环保:符合RoHS、Reach和TSCA最新标准。

物料名称(TITLE)	快操作指南	品牌名称(BRAND NAME)	
产品型号(MODEL)	43 55 65G3P	销售型号(SALES MODEL)	
视 角 (PROJECTION)			
单 位 (UNITS)	mm	批准/日期(APP./DATE)	
比 例 (SCALE)	1:1		
版 本 号 (VERSION NO.)	1. 0		

PREPARATION


Note

- 1). The pictures are only for reference
- 2). Avoid pressing the screen to prevent screen damage
- 3). Two or more persons are required for safe handling of a large TV to prevent any damages or injuries

Unpacking and Installation



1

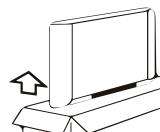

2



3



4

Open the package.

Take out the TV

Install the TV stands.

Connect the power cord

Standard Accessories



Batteries /2
Remote Control



HDMI



 
Power Cord



Quick Start
Guide



Warranty Card





55" 65"
Base Stands /2

Stand Installation

Step 1: Take out the TV and carefully put it (screen downward) on a stable and flat table with a soft cloth or cushion on it.

Step 2: Fix the stand bases to the TV by fastening the matching stand screws provided in the box. The bases may vary depending on the region or model.

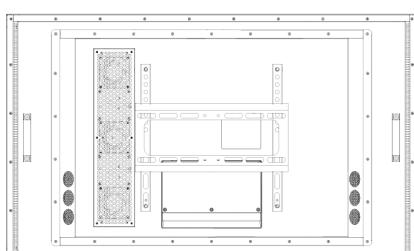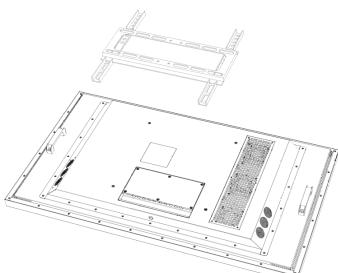

WARNING AND PRECAUTION

Read all of the instructions before operating the set. Keep these instructions well for later use.

Important Safety Instructions

- Read these instructions – All the safety and operating instructions should be read before this product is operated.
- Keep these instructions – The safety and operating instructions should be retained for future reference.
- Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
- Follow all instructions – All operating and use instructions should be followed.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as direct sunlight, radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet
- Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.

-  Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Unplug the apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped
- CAUTION: These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.
- Do not install this equipment in a confined or building-in space such as a book case or similar unit, and remain a well ventilation conditions at open site. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc
- Please refer the information on rear enclosure for electrical and safety information before installing or operating the apparatus
- To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

- For the terminals marked with symbol of “” may be of sufficient magnitude to constitute a risk of electric shock. The external wiring connected to the terminals requires installation by an instructed person or the use of ready-made leads or cords.
- To prevent injury, use the stand/wall-mount bracket to securely install this apparatus on the table/wall in accordance with the installation instructions.
- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.
- Excessive sound pressure from earphones and headphones can cause hearing loss. Listening to music at high volume levels and for extended durations can damage one's hearing. In order to reduce the risk of damage to hearing, one should lower the volume to a safe, comfortable level, and reduce the amount of time listening at high levels.
- The appliance coupler is used as disconnect device, the disconnect device shall remain readily operable.
- When not in use and during movement, please take care of the power cord set, e.g. tie up the power cord set with cable tie or something like that. It shall be free from sharp edges and the like that can cause abrasion of the power cord set. When put into use again, please make sure the power cord set being not damaged, If any damages found, please look for the service person to replace the power cord set specified by the manufacturer or have the same characteristics as the original one.
- Attention should be drawn to environmental aspects of battery disposal.
- No naked flame sources, such as lighted candles, should be placed on the apparatus. To prevent the spread of fire, keep candles or other open flames away from the apparatus at all times.
- If the apparatus have the symbol  in its rating label and the power cord has two pins, it means that the equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.(Only for Class II appliance)
- Warning for Apparatus containing COIN / BUTTON CELL BATTERIES (Below instruction only used for the apparatus containing a user-replaceable coin/button cell battery)
WARNING:
Do not ingest the battery, Chemical Burn Hazard (The remote control supplied with) this product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

- To reduce the risk of electric shock. Do not remove cover (or back). No user serviceable parts inside. Refer to qualified service personnel.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.

- The following information are recommended to be included as far as applicable where applicable:

 Refer to alternating current(AC).	 Refer to stand-by or power on.
 Refer to direct current(DC).	 Refer to power on.
 Refer to ClassII equipment.	 Refer to dangerous voltage.

WEEE Directive



Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Positioning the TV

- **Warning: Stability Hazard**


A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- ALWAYS use cabinets or stands or mounting methods recommended by the manufacturer of the television set.
- ALWAYS use furniture that can safely support the television set
- ALWAYS ensure the television set is not overhanging the edge of the supporting furniture
- ALWAYS educate children about the dangers of climbing on furniture to reach the television set or its controls.
- ALWAYS route cords and cables connected to your television so they cannot be tripped over, pulled or grabbed.
- NEVER place a television set in an unstable location
- NEVER place the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- NEVER place the television set on cloth or other materials that may be located between the television set and supporting furniture.
- NEVER place items that might tempt children to climb, such as toys and remote controls, on the top of the television or furniture on which the television is placed.


If the existing television set is being retained and relocated, the same considerations as above should be applied.

Mounting on a Wall


- An optional wall mount can be used with your television. Consult with your local dealer to purchase the recommended wall mount bracket. Carefully attach the wall mount bracket at the rear of the TV. Install the wall mount bracket on a solid wall perpendicular to the floor. If you are attaching the TV to other building materials, please contact qualified personnel to install the wall mount. Detailed instructions will be included with the wall mount. Please use a wall mount bracket where the device is adequately secured to the wall with enough space to allow connectivity to external devices.

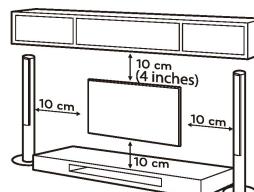

- To prevent product damages or personal injuries, please make sure that the TV screen is kept upright, or tilted upward or downward within the angle range of $0^\circ\sim 5^\circ$ while mounting the TV onto the wall
- In case of exceeding the above angle range ($0^\circ\sim 5^\circ$) of tilting downward, please purchase the auxiliary accessories from the local dealer to mount the TV for safe installation and usage. Otherwise, it will not be covered by the warranty and the user should be liable for all consequences and responsibilities.

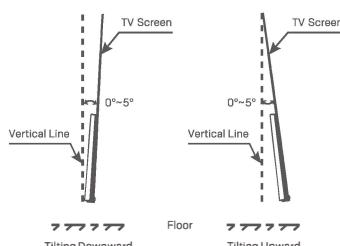

- Disconnect the power before moving or installing the TV. Otherwise electric shock may occur
- Remove the stand before installing the TV on a wall mount by performing the stand attachment in reverse.
- If you install the TV on a ceiling or slanted wall, it may fall and result in severe injury. Use an authorized wall mount and contact the local dealer or qualified personnel. Otherwise it is not covered by the warranty.
- Do not over tighten the screws as this may cause damage to the TV and void your warranty
- To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.
- Use the screws and wall mounts that meet the following specifications. Any damages or injuries by misuse or using an improper accessory are not covered by the warranty

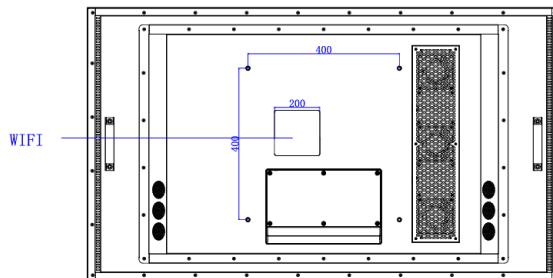

Note

- 1). The picture is only for reference
- 2). X is Spacer 15mm
- 3). For the TV sets with terminals towards the wall, in order to leave enough space to use the terminals, a plastic spacer is needed together with each screw to fix the wall mount. It is a small hollow pillar, the height of which is $\geq 30\text{mm}$

Precautions For Using Remote Control

- Use the remote control by pointing it towards the remote sensor. The items between the remote control and the remote sensor will interfere the normal operation.
- Do not make remote control vibrate violently. Also, do not splash liquid on the remote control, also do not put the remote control in high humidity place.
- Do not place remote control under direct sunlight which will cause deformation of the unit by heat
- When the remote sensor is under direct sunlight or strong lighting, the remote control will not work. If so please change the lighting or TV's position, or operate the remote control closer to the remote sensor.

Precautions For Using Battery

Improper using of the battery will cause leakage. So please do as the following methods and use carefully

- Please note the batteries' polarities, to avoid short circuit.
- When the battery's voltage is insufficient which affect the use range, you should replace new battery.
- Remove the batteries from the remote control unit if you do not intend to use it for a long time.
- Do not use different types of batteries (for example, Manganese and Alkaline batteries) together.
- Do not put the battery into fire, and charge or decompose the battery.
- Please dispose of batteries in compliance with relevant environmental protection regulations

WARNING: The batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

WARNING: A battery should not be exposed to extremely low air pressure that may result in an

 
TERMINAL CONNECTION

Note:

- 1). The pictures are only for reference.
- 2). Terminal quantities and names may vary depending on the region or model.
- 3). External equipments and cables shown herein are not supplied with the TV.
- 4). To avoid product damage or personal injury, please make sure that you have disconnected the TV power cord before connecting the external devices.


• AV IN

Receive audio and video signals from external AV devices.



• ANTENNA IN

 Connect a coaxial cable to receive signal from the antenna, cable or satellite.



• USB

Connect a USB storage device.



• HDMI

Receive HD input signal from external HDMI devices.



• DIGITAL AUDIO OUT

Use an optical cable to output your TV's audio signal to a compatible digital audio receiver.



• LAN

Wired network port.



• HEADPHONE (Ω)


Output the TV sound to the connected headphone. Speakers will be muted when headphone is plugged in.



REMOTE CONTROL

Note:

- 1). The picture is only for reference.
- 2). The image, buttons and functions of remote control may vary depending on the region, model or source.
- 3). To turn on or turn off the function of fast boot, please select < **MENU** → ... (Setup) → General Settings → Advanced Option → Fast Boot → On/Off >.
- 4). Due to software upgrades or updates, the functions of remote control are subject to change without notice. Please refer to your actual TV set.

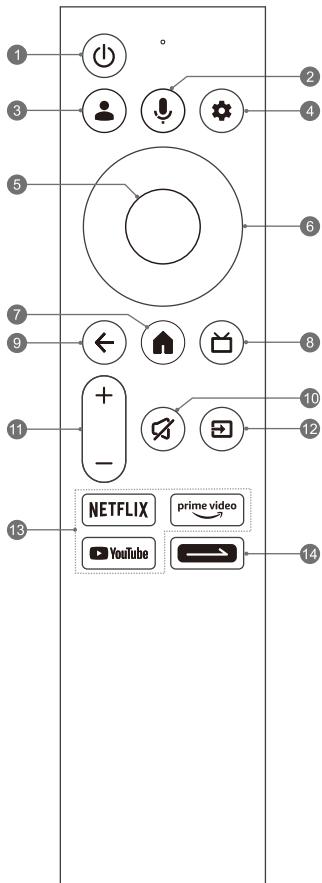

1. POWER (⊕)

Turn on or turn off the TV.

2. MIC (MIC)

Start using the near field voice function.

- Short press MIC button to wake up the voice assistant.
- Long press MIC button to start receiving your voice command. After your speaking, release MIC button to run voice function.

3. ACCOUNT (ACCOUNT)

Sign in with your Google account to get the entertainment you love.

4. Dashboard (DASHBOARD)

Access the dashboard of your Google TV.

5. OK

Confirm, enter or execute the selected item, or show the list of Quick Button.

6. Navigation Buttons (UP/DOWN/LEFT/RIGHT)

Navigate the menu to select the content you need.

7. HOME (HOME)

Access the home screen.

8. GUIDE (GUIDE)

Access the Electronic Program Guide in DTV mode.

9. BACK (BACK)

Return to upper-level content, or exit the current screen or operation.

10. MUTE (MUTE)

Mute or restore the TV sound.

11. Volume Up/Down (+/-)

Adjust the sound volume.

12. SOURCE (SOURCE)

Access the source menu.

13. Application Buttons


Access specific applications quickly and directly.

14. Daily Key (DAILY KEY)

- Short press to start the shortcut function, or setup it for the first time.
- Long press to setup the shortcut function.

Install Remote Control Batteries

Place two AAA size batteries in the remote control's battery compartment, making sure to match the polarity markings inside the compartment.

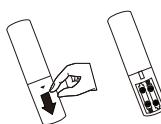


Note: The picture is only for reference.

VOICE FUNCTION

Note:

- 1). The pictures are only for reference.
- 2). The voice function may not be available depending on the region, model or language.
- 3). Due to software upgrades or updates, the function of TV control button is subject to change without notice. Please refer to your actual TV set.

Far Field Voice

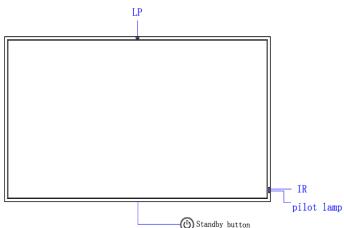

1. TV Control Button (Located under this icon)

* In standby mode:

Short press this button to turn on the TV.

The power indicator is now green

2. Remote Sensor

Receives the signal transmitted by the remote control.

3. Power Indicator

Indicate the status of the TV power.

4. Far Field Mic (Located under these icons)

Turn ON or OFF the hands-free far field voice function.

5. Light Sensor

Detects the ambient light in your room to adjust the panel brightness automatically.

6. Far Field Indicator

Indicate the ON status of far field microphones and far field voice function.

7. Far Field Microphone

The far field voice function mic location. This feature works within 10 feet or up to 3 meters away.

Near Field Voice



1. Near Field Microphone

Microphone of near field voice function. It is best to keep your mouth within 5 centimeters away from the near field microphone while using the near field voice function.

2. MIC Button of Near Field Voice Function

Press to start using the near field voice function.

< Pair Bluetooth remote control with your TV >

For the remote control supplied with your TV, please finish pairing with your TV before using it for near field voice function. The pairing could be done at the first step of "Initial Setup", or in "Settings".

In settings, please refer to the following steps to pair the remote control:

1. Select "Dashboard" button → Settings → Remotes & accessories".
2. Press **BACK** and **HOME** buttons simultaneously until there shows the name of your Bluetooth remote control on the TV searching interface.
3. Press **OK** button to start pairing.
4. It will show "Paired" after Bluetooth remote control is paired with the TV successfully.

TROUBLE SHOOTING

Before calling a service technician, please check the following table for a possible cause of the symptom and some solutions.

General Problem / Solution

- **Remote control does not work**

Change the batteries.

Check if batteries are installed correctly.

Check if main power is connected.

Check if there are some items between remote sensor and remote control.

- **Poor Signal**

This is usually caused by interference from electronic equipments or radio interference sources.

Picture & Sound / Solution

- **No picture, no sound**

Check the signal source.

Plug another electrical device into the outlet to check if it is working or turned on.

Check if power plug is in good contact with the outlet.

- **No sound, picture OK**

If no sound, unmute the sound or increase the volume.

Open the sound menu and adjust 'Balance'.

- **Abnormal picture**

For no color or bad picture quality, you may:

1. Adjust the color option in menu settings.

2. Keep the TV at a sufficient distance from other electronic products.

3. Try another channel.

Bad TV signal (Display mosaic or snowflakes)

1. Check the signal cable and adjust the antenna.

2. Fine tune the channel.

3. Try another channel.

Multimedia Player / Solution

- **'This file is invalid' /'Unsupported audio' appears , or audio is normal but video is abnormal, or video is normal but audio is abnormal**

The media file maybe damaged, check if the file can be played on the PC.

Check if video and audio codec is supported.

Network / Solution

- **Network failure**

Check if the router works well.

Make sure the TV has connected to the router successfully.

Browser / Solution

- **Web page can not be displayed completely**

Some third-party extensions of the current web page may not be supported, and please close the current web page.

- **Browser is forced to be shut down**

The current web page may include too many contents which cause there isn't sufficient memory and the browser is closed.

SPECIFICATION

Note: Specifications may vary depending on the region or model.

Working voltage:	100-240V~50/60Hz
Dimensions without stand (W X H X D):	55: 1249.6 × 720.5 × 105 MM 65: 1468.5 × 843.6 × 99.6 MM
Net weight without stand:	
RF aerial input:	75 ohm unbalanced
Language of OSD:	Multiple options
System:	DTV: DVB - T/T2/C/S ATV: PAL BG/I/DK
Channel coverage:	DVB-T/T2: 174 MHz ~ 230 MHz, 470 MHz ~ 860 MHz DVB-C: 48 MHz ~ 859 MHz DVB-S: 10700 MHz ~ 12750 MHz ATV: 47.25 MHz ~ 865.25 MHz
Environment:	Working temperature: -10°C~50°C Working humidity: 20%~80% Storage temperature: -20°C~60°C Storage humidity: 10%~90%, non-condensing

LICENSE



Google TV is the name of this device's software experience and a trademark of Google LLC. Google, YouTube, and Chromecast built-in and other related marks are trademarks of Google LLC.



The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.



Dolby, Dolby Vision, Dolby Atmos, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 2012-2024 Dolby Laboratories. All rights reserved.

Note:

- 1). The pictures in this document are only for reference.
- 2). Due to software upgrades or updates, functions are subject to change without notice. Please refer to your actual TV set.
- 3). In dry environment due to static electricity, the product may restart and return to the main OSD interface, USB player interface or the previous source mode. It is normal and please continue to operate the TV as you will.



E-waste Management:

For clean and green environment, please do not dispose of it anywhere or give to unauthorized dealers as this material falls in the purview of E-waste Management Rule 2022 and it should be disposed of in an environmentally-sound manner. To collect your E-waste, please contact to following center.

RoHS: This Product Follows the RoHS Compliance

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.