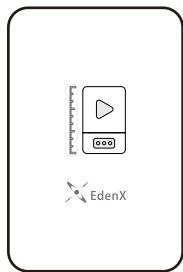 


INKSI-01 手持打印机说明书

随时随地
所想所印

www.edenexplore.com


使用本产品前请仔细阅读本说明书，并妥善保管。

APP下载与使用技巧


请使用手机扫描以下二维码：下载APP、观看玩机技巧和微信公众号。




开箱清单

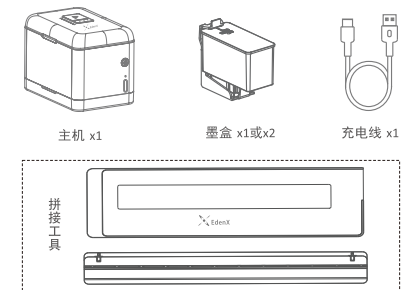

产品简介

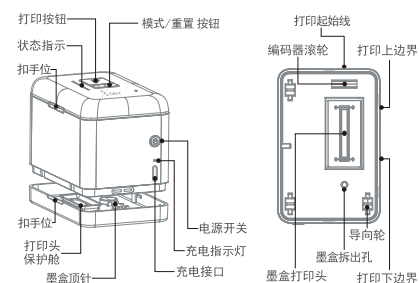


基本打印操作

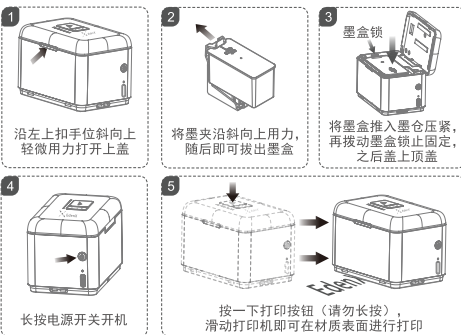

- *1. 需打印自定义内容，请下载APP进行操作；
*2. AP直连所需连接的热点名称为：INKSI_XXXX，密码为：12345678；
*3. 在任何材质上打印时，需保证编码器滚轮接触打印面滑动。

定位和拼接操作


01所需工具

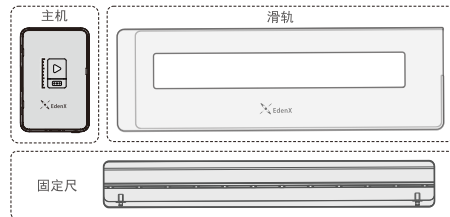

02具体操作


[首拼打印操作]

- 先将纸张或其他材质用固定尺固定住；
- 再将滑轨左侧背面的凸起点嵌入进固定尺的凹陷卡位处；
- 把主机放置于滑轨的最左端，按下打印键后，从左往右进行滑动，即可完成首拼打印。

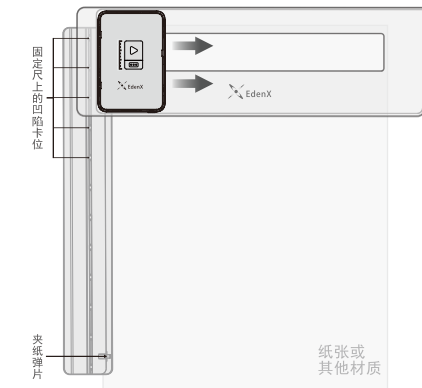

[拼接打印操作]

- 完成首拼（第一拼）打印后，用手稳定住固定尺；
- 将主机与滑轨同时移动到固定尺第2拼的位置后；
- 确保主机回到至滑轨的最左端，再次按下打印键后，从左往右滑动即可完成第二拼打印；
- 重复以上操作，直至打印结束（最多能打印12拼）。

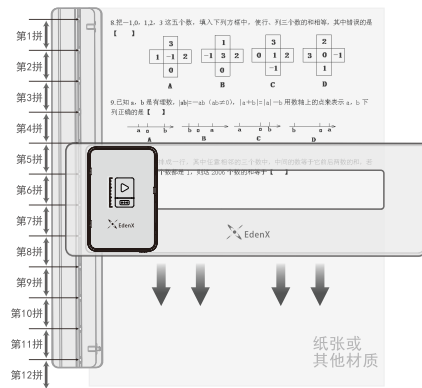

状态指示

操作状态	指示灯	提示音
开机未连接	蓝灯快闪	无状态
开机已连接	蓝灯常亮	滴1声
传输开始	绿灯快闪	滴1声
按下打印按钮	绿灯常亮	滴1声
双击模式按钮	回到传输完成状态	滴2声
长按模式按钮	-	滴滴2声
长时间未使用	每3分钟滴2声，10分钟内无操作关机，有操作中中断该状态	
墨盒超温	红灯闪烁3次	滴3声
低电量	红灯替代蓝灯显示	无状态

备注：

- 双击模式按钮：即可中断当前打印内容，恢复为数据传输完成的状态；
- 长按模式按钮：【AP直连】模式与【Wi-Fi配网】模式互换；
- 当墨盒未安装或打印头过热的情況下，打印机会发出连续三声提示音，同时红灯会闪烁三下，提醒用户出现上述异常；
- 当出现打印头过热情况时，请静置打印机一分钟再继续打印。

基本参数

型号	INKSI-01
产品尺寸	82*54*56mm (L*W*H)
重量	138g
打印方式	喷墨打印
最大印刷速度	200mm/s
单次打印宽度	23.3mm
分辨率范围	300DPI至1200DPI
墨盒容量	20ml=600页的A4/US Letter内容
工作温度	15°C-35°C
电池容量	850毫安
充电输入	5V 2A USB Type-C
待机时间	30 天
连接方式	无线连接
支持系统	Android (6.0或以上版本) iOS (10.0或以上版本)
墨盒储存环境	密封，在室温下保存，避免阳光直射

保修说明

01保修政策

- 本产品提供终身免费OTA升级服务；
- 自签收30日内，产品出现故障，经售后人员确认，在整机包装和配件完整的前提下可享受退换货服务(墨盒一经拆封，非质量问题恕不退换)；
- 本产品提供整机保修一年服务。保修期自客户购买产品之日起开始计算，在保修期内，本产品出现性能故障，可享受免费维修服务；
- 请妥善保管购买发票或凭证，如有遗失，机器将以生产之日起后30天为起始日计算保修时间；
- 免费维修服务不包括保险、邮递、运送等杂费，且不提供上门服务。

02非保修条例

- 未经授权的维修、错用、碰撞、进液及使用非本产品配件造成的损坏；
- 撕毁、涂改标贴及防伪标记；
- 已超过一年保修期；
- 因不可抗力造成的损坏；
- 人为原因导致本产品及配件产生的性能故障。

△警告及注意事项

01注意事项

- 打印机使用完毕，请及时关闭电源并扣上打印机保护盖；
- 若长时间不使用打印机请取出墨盒，并使用墨盒保护夹保存墨盒，否则有可能出现喷头堵塞情况；
- 墨盒打印头如有堵塞或打印不完整现象，请使用不含酒精的湿纸巾擦拭打印头，并重复打印直至堵塞消除；
- 打印机充电接口为Type-C，若使用电源适配器供电，则应使用获得认证并满足CCC标准要求的电源适配器；
- 请注意正确安装及拆卸墨盒，以免损伤墨盒；
- 当在皮肤上打印时，请避免打印头直接接触皮肤；
- 部分iOS系统设备建议使用AP直接或Wi-Fi配网，使用其他传输会较慢；
- AP直连是直接连接打印机发出的热点(密码12345678)，拥有较快传输速度，但无法使用网络；
- Wi-Fi配网拥有更快的传输速度，但首次连接时需配置网络，且在复杂环境中连接可能不稳定(建议通过手机热点使用)。

02电池警告说明

- 禁止拆解、撞击、挤压或投入火中；
- 若出现严重鼓胀，请勿继续使用；
- 请勿置于高温环境中，电池浸水后禁止使用；
- 自主更换会有爆炸危险，务必由专业售后人员进行维修。

客服及联系方式

- 客服热线：+86 191 2935 8802
- 邮箱：hello@edenexplore.com
- 制造商：深圳伊甸探索科技有限公司
- 地址：深圳市南山区国际创新谷2栋A座9层





AIoT

INKSI-01 Handheld Printer User Manual



Print Bigger
Print More

www.edenexplore.com

Please read this USER MANUAL in detail and keep it properly.

APP Download And Use



iOS
APP Download



Android
APP Download



Youtube Channel

Please use smart phone/tablet to scan the QR code on the left and download our APP. You can also follow our Youtube channel for user guide and operating techniques.

Unboxing Checklist




Main Unit x1




Ink Cartridge
(1 or 2 pcs)




Charging Cable x1

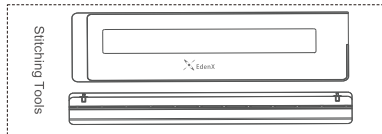

Product Introduction

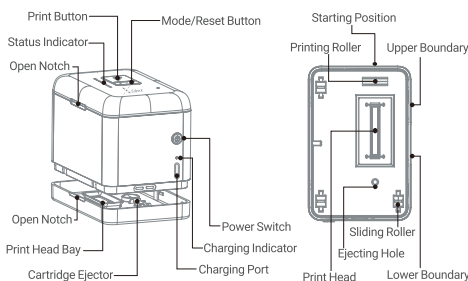


Basic Operation

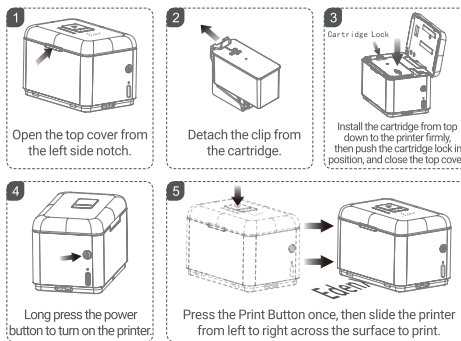

- * 1. For more customized printing and settings please download our APP.
2. Hotspot name for AP Direct mode is "INKSI XXXX" and password is "12345678".
3. Ensure the Printing Roller is contacting the print surface when sliding.


Positioning and Stitch Printing

1. Required Tools

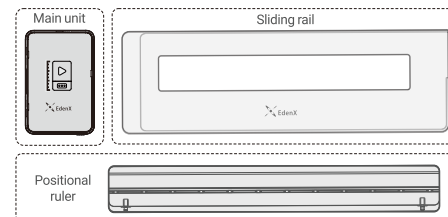


2. Print the first part

- Fix the paper or material with the positional ruler.
- Align the sliding rail's protrusion with the notch on positional ruler.
- Place the main unit on the sliding rail and slide from left to right to complete the first part.

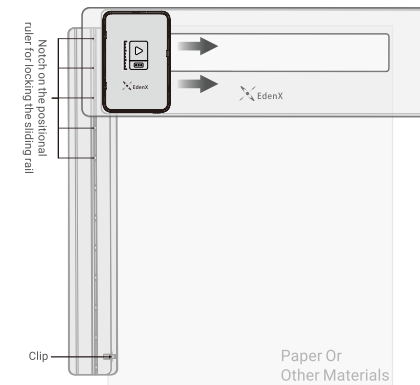

3. Stitch Printing

- After finish the first part, move the sliding rail and main unit down to the next notch on the positional ruler.
- Repeat sliding from left to right for up to 12 passes or until the content is fully printed.

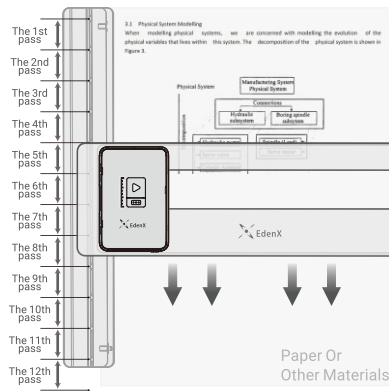

Status Indicator

Status	Indicator/Buzzer	Action
Disconnected	Blue light flashing	Ready to connect to APP
Connected	Blue light ON Beep once	Connection successful
Transmission in progress	Green light flashing Beep once	No printing during transmission
Press print button	Green light ON Beep once	Slide and print
Double press mode button	Beep once	Cancel current printing job
Press hold Mode button	Beep twice	Switch between AP Direct and Wi-Fi Configuration
Alert status	Beep twice every 3 mins	Auto Power OFF after idle for 10 mins
Cartridge malfunction	Red light flashing 3 times Beep 3 times	Check cartridge status
Low battery (20% or less)	Red light replace Blue light	Charge battery to full

Basic Parameters

Model	INKSI-01
Product Dimensions	82*54*56mm (L*W*H)
Weight	138g
Printing Method	Inkjet Printing
Maximum Printing Speed	200mm/s
Printing Width Per Charge	23.3mm
Adjustable Resolution Range	300DPI to 1200DPI
Ink Cartridge Capacity	20ml ≈ 600 pages (US Letter / A4 Size)
Optimal Working Environment	15°C-35°C
Battery Capacity	850mAh
Input Power	5V 2A USB Type-C
Standby Time	30 Days
Connection Method	Wireless
Supported Systems	Android (version 6.0 or above) iOS (version 10.0 or above)
Ink Cartridge Storage Conditions	Stored at room temperature Away from direct sunlight

Customer Service & Warranty

- Lifetime free software supports and upgrades are provided for this product.
- Return and Exchange
 - For Printer: within 30 days of receiving the product, if there is a product malfunction confirmed by customer service representative, and the packaging and accessories are intact, you're eligible for return or exchange the product.
 - For Ink Cartridge: cartridges are NOT eligible for return or exchange once been OPEN, unless it's a production defect or damage during transportation confirmed by customer service representative.
- Warranty Period
 - This product provide one year warranty from the date of purchase. Any product malfunction during this period will be entitled for free repair services. (Ink Cartridge NOT included)
 - Free repair services do not include insurance, postage, transportation, and other miscellaneous fees. On-site service is not provided.
 - Please keep the purchase invoice or purchase record properly. The warranty period will start 30 days after the production date in case of missing proof of purchase.
- Non-Warranty Conditions
 - Unauthorized repairs, misuse, collision, liquid ingress, use of non-original accessories, torn or altered labels, and tampered anti-counterfeit marks.
 - One year warranty period expired.
 - Damage caused by force majeure.
 - Performance faults caused by human factors.

Maintenance and Warning

- Maintenance
 - Shutting Down: after use, turn off the printer and put the bottom cover back on.
 - Long-term Storage: if not going to use the printer for an extended period, please take out the ink cartridge and put the protective clip back on to prevent clogging.
 - Clogging: in case of clogging, please wipe the print head with a wet tissue gently and print again.
 - Charging: the charging port is USB Type-C, please make sure using a safety certified adaptor to charge the printer.
 - In some cases iOS device may occur slow in transmission, we advise you to use AP Direct or Wi-Fi Configuration instead slow;
 - AP Direct: Connect to printer's hotspot directly, faster and stable in transmission but will cause your device disconnected to the Internet;
 - Wi-Fi Configuration: Connect via local Wi-Fi network, faster in transmission but needs to configure the printer in first time use, and connection maybe unstable in complex environment.
- Warning
 - Skin Contact: Avoid direct contact between the print head and skin when printing.
 - Cartridge Installation: Handle ink cartridges carefully during installation and removal to avoid damage.
 - DO NOT disassemble, crash, squeeze the battery inside.
 - DO NOT continue if the battery is severely swollen.
 - DO NOT place the printer in high temperature environment, and DO NOT use the battery after water ingress.
 - Replace wrong type of battery will have the risk of explosion, please repair by professional after-sales personnel.

Contact Info

Manufacturer: EdenX Technology Co., Ltd
Address: Room 901, Block A, Building 2, Shenzhen International
Innovation Valley, Nanshan District, Shenzhen, China
Service Email: hello@edenexplore.com



Official Website

Federal Communications Commission (FCC) Statement. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received,

including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide Reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this device not expressly approved by EdenX Technology Co., Ltd may void the FCC authorization to operate this

device. Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

RF exposure statement:

This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. The device is installed and operated without restriction.