


70MM

105MM

CL07


Screen selfie stick

 No APP/wireless screen projection/dual Bluetooth remote control/
image display/1.7 m height required




Instructions for use

 
Welcome to the screen selfie stick

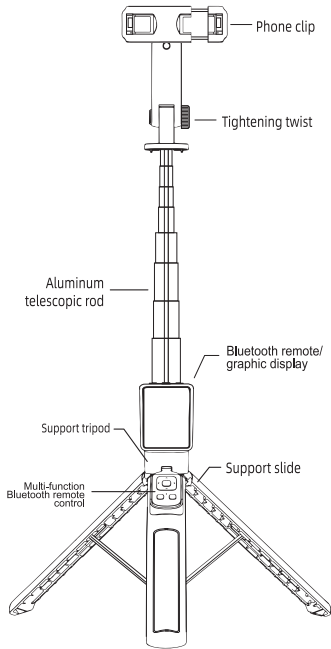


PRODUCT USE METHOD

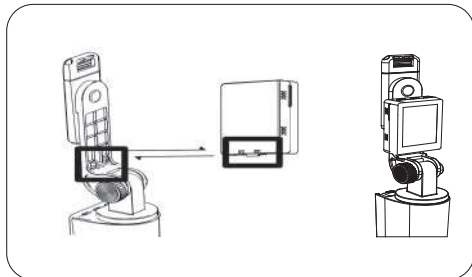 

 The snap on the back of the mobile phone clip can correspond to the combination of sunken slots on the display screen

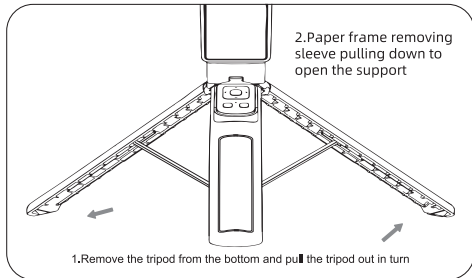

Screen projection operation method

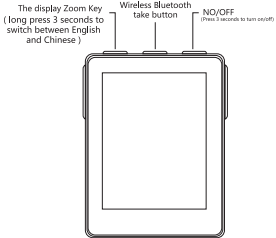 

Note
some mobile phone projection screen image distortion, you can click on the zoom key to adjust the appropriate image size
(projection screen is based on the mobile phone size scale on the screen, can not be unified please understand
No WIFI or Bluetooth connection after boot 5 minutes after automatic shutdown)

Online step

Iphone:

- 1: Turn On wi-fi and search for CL07 in "Settings" on your phone click on your password: 12345678.
- 2: find the mirror screen () in the drop-down area and search for CL07 connection to start the screen.

Android phone:

 
- 1: find the wireless screen in the drop-down area () turn on both WIFI and Bluetooth and search for CL07 connections to start the screen

About how to permanently put an APP on the screen after an Android phone is connected to the screen?

- 1: Click on the projection screen in the upper right corner to switch mirroring About the inability to play sound externally after the mobile phone is connected to the screen

- 1: On the Android phone, click on the projection screen in the upper right corner to find the audio and video Switch and click to select this machine.
- 2: Apple phones do not support sound playback when projecting the screen.

BLUETOOTH REMOTE CONTROL

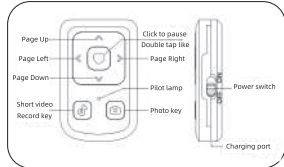

- 1.Pull the side switch of the remote control (ON/OFF). The remote indicator flashes automatically.
2. Open the phone "Settings" - "Bluetooth" to enable Bluetooth, search for "CL-SXP" and click the device name to pair.
- 3.Direction keys: When watching short videos, up/down keys switch videos, and left/right keys slide left and right keys slide.
- 4.Like button: Watch short video (click pause/double click like)
- 5.Short video recording button: Enter the short video interface, click to start and pause shooting.
- 6.Camera key: Go to the camera screen and click to start and pause the camera.

*Apple phones are unable to swipe videos through the up, down, left, and right buttons on the remote control. To do so, the phone comes with settings:

1. Settings - Accessibility - Touch - Accessibility Touch (Open) - Tracking Sensitivity (You can find the tracking sensitivity function in the drop-down menu of the Accessibility Touch menu)

Turn the small white dot towards the direction of the turtle (the best remote control sensitivity is set to 1/3 or 1/4 on the progress bar), and after completion, you can remotely swipe videos and read books up, down, left and right (long press the up and down buttons to adjust the volume)

TROUBLESHOOTING

- 1 Bluetooth remote control cannot be turned on
>>>Charge the remote control and try again after charging is complete.
2. Bluetooth cannot connect/function properly after turning on>>Remove Bluetooth pairing from the phone, restart the Bluetooth remote control, and then re pair and connect.
3. If the remote control cannot be used to take photos on an Android phone
>>Press the camera button to adjust the volume: Open the camera interface of the app, open the settings icon, and modify the "volume button function" to default or use the volume button to take photos to use the music Remote camera with controller at 10 meters.

TIPS

- 1.Do not store the product in a low temperature or humid environment.
- 2.Do not place the product in high temperature environments such as exposure to sunlight or fire.
- 3.Do not use in restricted areas to avoid violating public order.
- 4.This product contains small components, please keep out of reach of infants and young children to prevent accidental ingestion.
- 5.The pictures and dimensions shown in the packaging and instructions are for reference only. Please refer to the actual product.
- 6.If the remote control is not used for a long time, please turn off the side switch



iOS
operation video



Android
operation video

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

CL07


投屏自拍杆

 无需APP/无线投屏/双蓝牙遥控/图像显示屏/1米7高度




使用说明书

 
欢迎使用投屏自拍杆

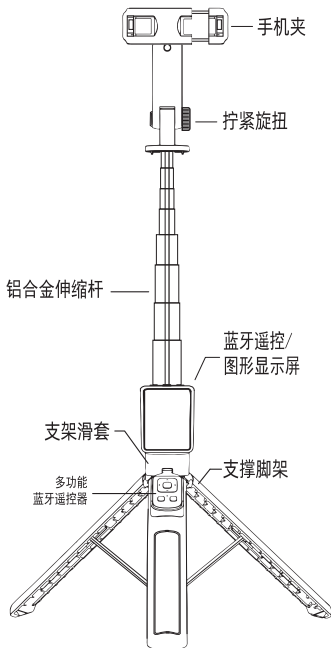

产品使用方法

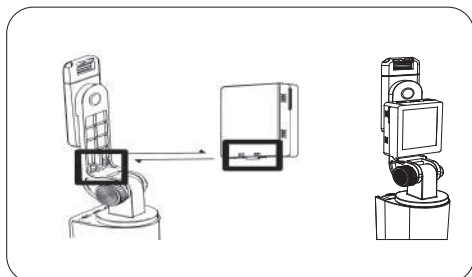 


手机夹背后卡扣可对应显示屏陷位槽组合

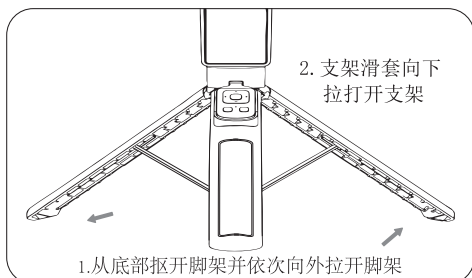 

1.从底部扳开脚架并依次向外拉开脚架

 投屏操作方法

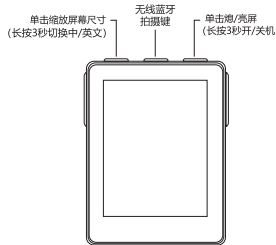

注:

部分手机投屏图像变形, 可单击缩放键调节合适的图像尺寸
(投屏是按手机尺寸比例缩放放到显示屏上, 无法做到统一敬请谅解!
开机后未连接WIFI或蓝牙5分钟后自动关机)

联机步骤

苹果手机:

- 1: 在手机 "设置" 打开WIFI功能并搜索CL07点击输入密码: 12345678.
- 2: 在下拉的控制中心找到镜像投屏 () 并搜索CL07连接后开始投屏.

安卓手机:

- 1: 在下拉的控制中心找到无线投屏 () 同时打开WIFI和蓝牙功能并搜索CL07连接后开始投屏.

关于安卓手机连接投屏后画面如何固定缩放某个APP?

- 1: 点击右上角的投屏中切换镜像

关于手机连接投屏后无法外放声音解决方法

 
- 1: 安卓手机点击右上角的投屏中切换镜像找到音视频切换点击选择本机.

- 2: 苹果手机投屏时不支持声音外放.

显示屏蓝牙拍摄功能:

打开设置点击打开蓝牙并搜索设备: CL07连接

蓝牙遥控器

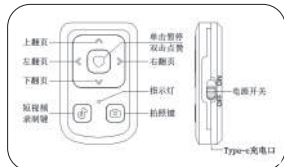

1. 拨动遥控器侧面开关 (ON开启/OFF关闭) 遥控器指示灯自动闪烁。
2. 打开手机 "设置" - "蓝牙" 开启蓝牙, 搜索 CL-SXP"点击设备名称配对, 显示已连接后, 指示灯停止闪烁, 即连接成功 (遥控器处于开启状态)。
3. 方向键: 看短视频时, 上/下键切换视频, 左/右键为左滑动右滑动。
4. 点赞键: 看短视频 (单击暂停/双击点赞)。
5. 短视频录制: 进入短视频界面, "单击"开始和暂停拍摄。
6. 拍照键: 进入像机拍摄界面, "单击"开始和暂停拍照。

* 苹果手机无法通过遥控器上下左右按键刷视频
需在手机自带设置1: 设置—辅助功能—触控—辅助触控(打开)—跟踪灵敏度(在辅助触控菜单内容下拉能找到跟踪灵敏度功能), 把小白点往乌龟方向调(在进度条调至1/3或者1/4遥控灵敏度最佳), 完成后即可上下左右遥控刷视频、看书 (长按上下按键可调节音量)。

故障排除

- 1 蓝牙遥控器无法开机。
>>>将遥控器进行充电, 待充电完毕后重试。
2. 开机后蓝牙无法连接/无法正常工作>>>移除手机上的蓝牙配对重启蓝牙遥控器后重新配对连接。
3. 安卓手机如果无法使用遥控器拍照>>> 按下拍照键可以调节音量:打开 App 相机界面, 打开设置图标一把 "音量键功能" 修改成默认或者使用音量键拍照, 即可使用遥控器 10 米远程拍照。

温馨提示

1. 请勿将产品置于低温、潮湿环境保存。
2. 请勿将产品置于曝晒、烘烤等高温环境。
3. 请勿在设备被限制的场所中使用, 避免违反公共秩序。
4. 本产品含有细小部件, 请放置于婴幼儿触摸不到的地方, 防止小孩误吞。
5. 包装及说明书等所示图片、尺寸仅供参考, 请以实物为准。
6. 长时间不使用遥控器, 请关掉侧面开关。



苹果系统操作视频



安卓系统操作视频