



# Manual

# Digital Door Lock

## SEMI SMALL CL-S1



# list of contents

General Product Information	05
1. Components of the Digital Door Lock	05
2. Technical Parameters	05
3. Accessories of the Digital Door Lock	06
4. Additional Accessories for Door Thickness	07
5. Dimensions of the Digital Door Lock	08
6. Product Information	09
Functionality of CL-S1	10
7. Functions and Usage	11
8. Factory Status	12
9. How to Reset or Restore Factory Settings	12
10. Locking / Unlocking : Internal Lock	13
10.1 Locking with the Handle	13
10.2 Unlocking with the Handle	13
10.3 Locking the Lock from the Inside	14
11. Locking from the Outside	15
12. Setup Instructions	16
User Management	17
13. Administrator Management	18
13.1 Add Administrator	18


---

User Settings	20
14. User Settings	21
14.1 Add User	21
14.2 Delete User	22
14.3 Delete All User	23
System Settings	24
15. System Settings	25
15.1 Time Setting	25
15.2 Volume Adjustment	26
15.3 Normally Open	27
15.4 Double Verification	28
15.5 Anti Tampering (ON/OFF)	29
15.6 Record Info	30
Remote Management	31
16. Network Setting	32
About the System	34
17. Code for Changing Languages	34
18. USB-C Port Usage	35
19. Unlocking with The Emergency Key	36
20. Product Warranty Policy	38
21. Safety Manual and Precautions	39
22. Additional Information	39

SEMI AUTO  
DIGITAL DOOR LOCK  
MODEL NO. CL-S1



## 1. Components of the Digital Door Lock

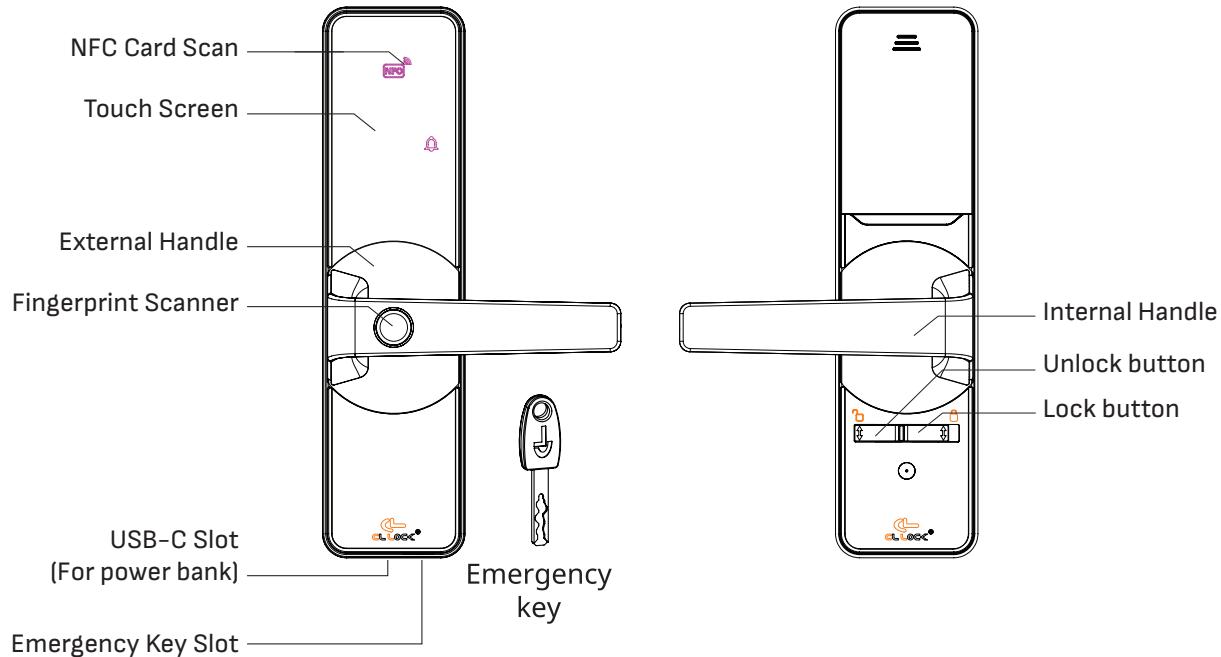

## 2. Technical Parameters

Administrator:	9 users (No. 001–009)
User:	291 users (No. 010–300)
Ways to Unlock:	Password, Fingerprint, NCF card, Emergency key, Application.
Network:	Wi-Fi 2.4 G
Power:	4 Pieces of AA alkaline battery
Low Battery Warning:	4.8–5 V
Emergency Power Supply:	USB type C
Password Length:	6–10 digits (fake password can be up to 29 digits.)
Product Dimensions:	Internal : 65*26*23 mm External: 68*263*29 mm


### 3. Accessories of the Digital Door Lock

1

2

3


4

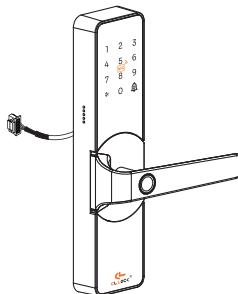

External handle lock(1 set)



 
Rubber gasket for external handle lock (1 piece)



Mortise lock case 50/50 or 60/50 (1 set)



Rubber gasket for internal handle lock(1 piece)

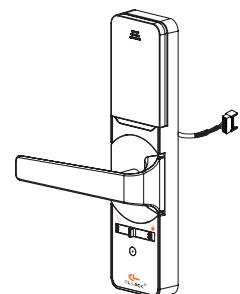

Internal handle lock (1 set)

6

7

8

9

 
10




Screw M4 x 25 mm (3 pieces)



Screw joint Head: M5, End: M4 Length: 28 mm (3 piece)



Lock bolt spindle size 65 mm (1 piece)

 

Emergency key (2 pieces)



Screw hole cover (2 piece)

11

12

 
13

14

15



Tongue receiver box (1 piece)




Tongue plate (1 piece)



M4 x 20 mm screw for mortise lock (2 pieces) and for strike plate (4 pieces)



 NFC card (2 pieces)



Alkaline batteries Size AA (1.5V) 4 pieces (For domestic sale only)




## 4. Additional Accessories for Door Thickness

Door thickness: 35–55 mm. If the door thickness falls outside this range, please contact us for more information. Please select the appropriate accessories based on the door thickness.


No	Details	Specification (mm)	Door thickness and quantity
			35-55mm
6	Screw M4 x 25 mm.		3
7	Screw joint Head: M5, End: M4 Length: 28 mm		3
8	Lock tongue spindle		1
13	Screw M4 x 20mm.		4

## 5. Dimensions of the Digital Door Lock


Unit: Millimeters

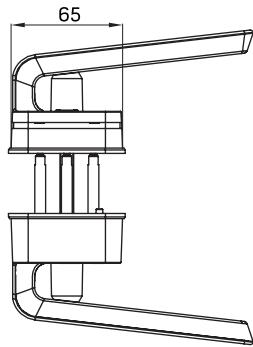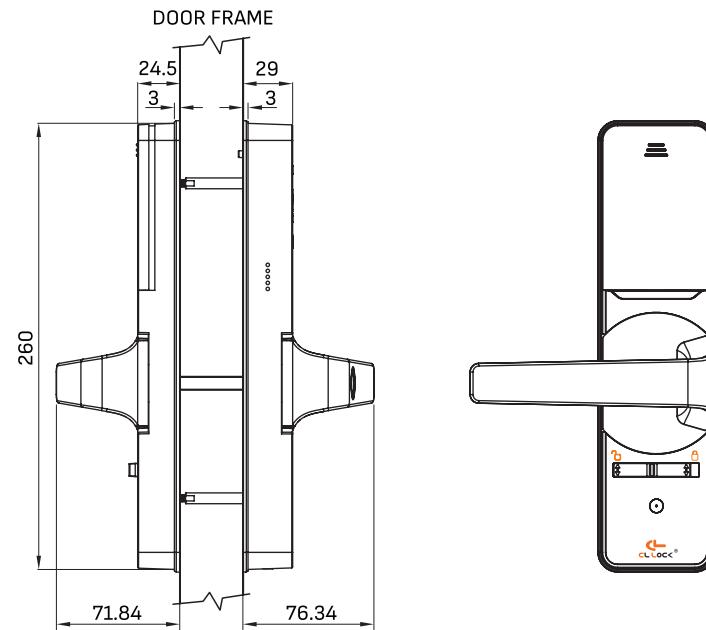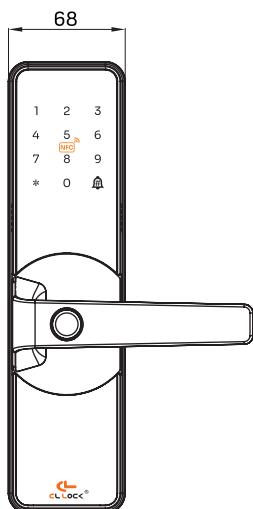

Lockcase 50/50

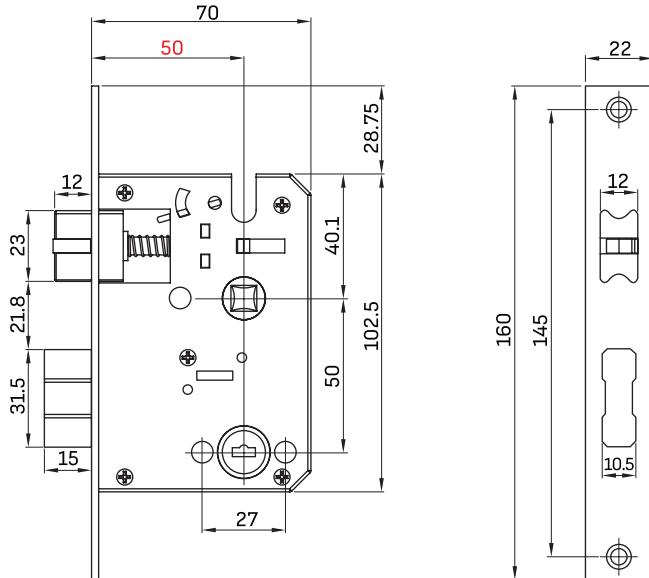

Lockcase 60/50

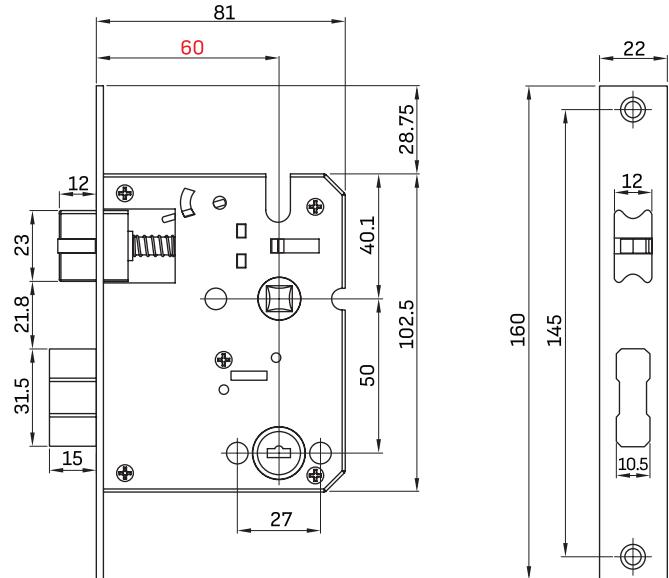



## 6. Product Information

- 1.Fingerprint registration requires scanning the finger 5 times for complete registration.
- 2.Card registration and usage should be within a distance of 0-30 mm for accurate registration and functionality.
- 3Entering the wrong password more than 5 times will trigger an alert, and the lock will remain locked for 180 seconds.(Registered fingerprints and NFC cards can still be used normally.)
- 4.A fake password can be up to 29 digits long.
- 5.If the lock is tampered with, the system will lock for 180 seconds.
- 6.If the battery is low, the application cannot be connected.
- 7.To check the software version, press 99#.
- 8.The first registered admin cannot be deleted.
- 9.To repeat instructions, press 0. To go back, press \*.



## FCC WARNING

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum 20cm distance between the radiator and your body: Use only the supplied antenna.

# Functionality

## CL-S1



## 7. Functions and Usage

### 1. Definition of Terms

1.1 Admin: Refers to the system administrator or homeowner.

1.2 User: Refers to other users or residents.

### 2. Unlocking from Outside

2.1 Unlock using fingerprint, passcode, card, mobile application, or emergency key.

### 3. Unlocking from Inside

3.1 Unlock by pushing the lever downward (refer to section 10.2, page 13).

### 4. Locking from Inside

4.1 Lock by pushing the lever upward (refer to section 10.1, page 13).

4.2 For internal lock systems, slide the lock to the right (this prevents regular users from unlocking it; refer to section 10.3, page 14).

### 5. Locking from Outside

5.1 Lock by pushing the lever upward (refer to section 11, page 15).

### 6. Button Functions

6.1 Press \*: To go back.

6.2 Press #: To confirm/accept.

### 7. Touch Activation

Touching the screen will activate the system and wake it up for operation.

### 8. Configuration Instructions

While configuring any function, do not allow the screen light to turn off. If it does, restart the configuration process.

### 9. Confirmation After Configuration

After successfully completing the configuration, press \* to return, or wait for the system to exit automatically.

## 8.Factory Status

In factory status, before registration, face recognition, palm scan, fingerprint, or card can be used to unlock at any time.

## 9.How to Reset or Restore Factory Settings


Reset Button (SET UP)

The reset button is located inside, beneath the battery.

How to Use

- 1.Open the battery cover.
- 2.Touch the screen to wake the device.
- 3.Use a pointed object to press and hold the reset (SET UP) button for 5 seconds.

The system will restore to factory settings.

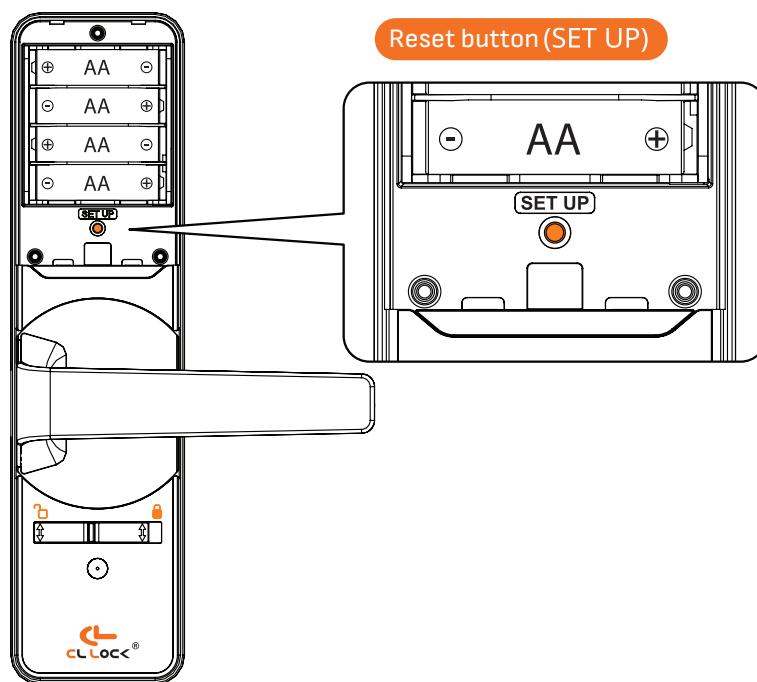

## 10.Lock / Unlock : Internal Lock

### 10.1 Locking with the Handle


Bolt set 1

Bolt set 2

Push up


-Rotate the handle upwards; both latch sets extend and enter the locked position.

### 10.2 Unlocking with the Handle

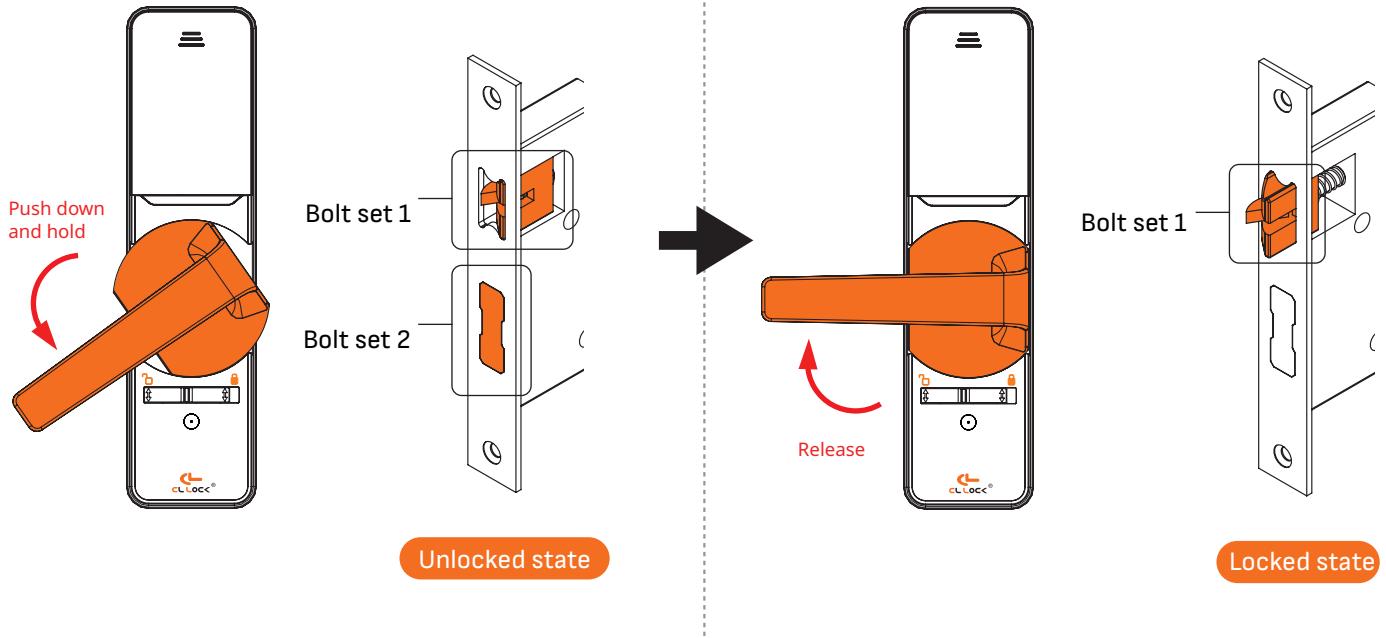


-Rotate the handle down and hold both latch sets retract, entering the **unlocked** position, allowing the door to be opened.  
 -Release the handle to return to its original position (automatically) the first latch set extends and enters the **locked** position.

### 10.3 Locking the Lock from the Inside

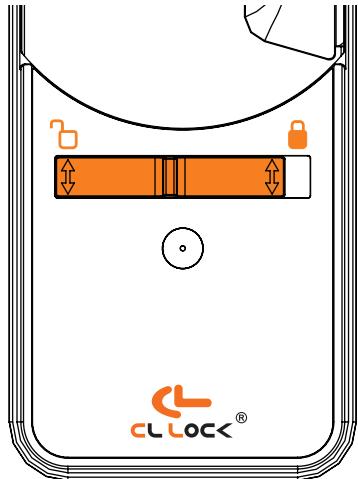

When the lock is in the unlocked position (as shown in the illustration), both the administrator and regular users can enter and exit normally according to the registration method.

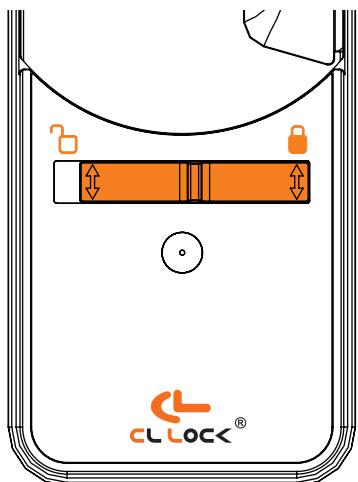


When the lock is slid to the right from the inside (as shown in the illustration), the system will lock from the inside.

The administrator can enter and exit normally, but regular users will not be able to enter.

## 11. Locking from the Outside


### How to lock with the external handle

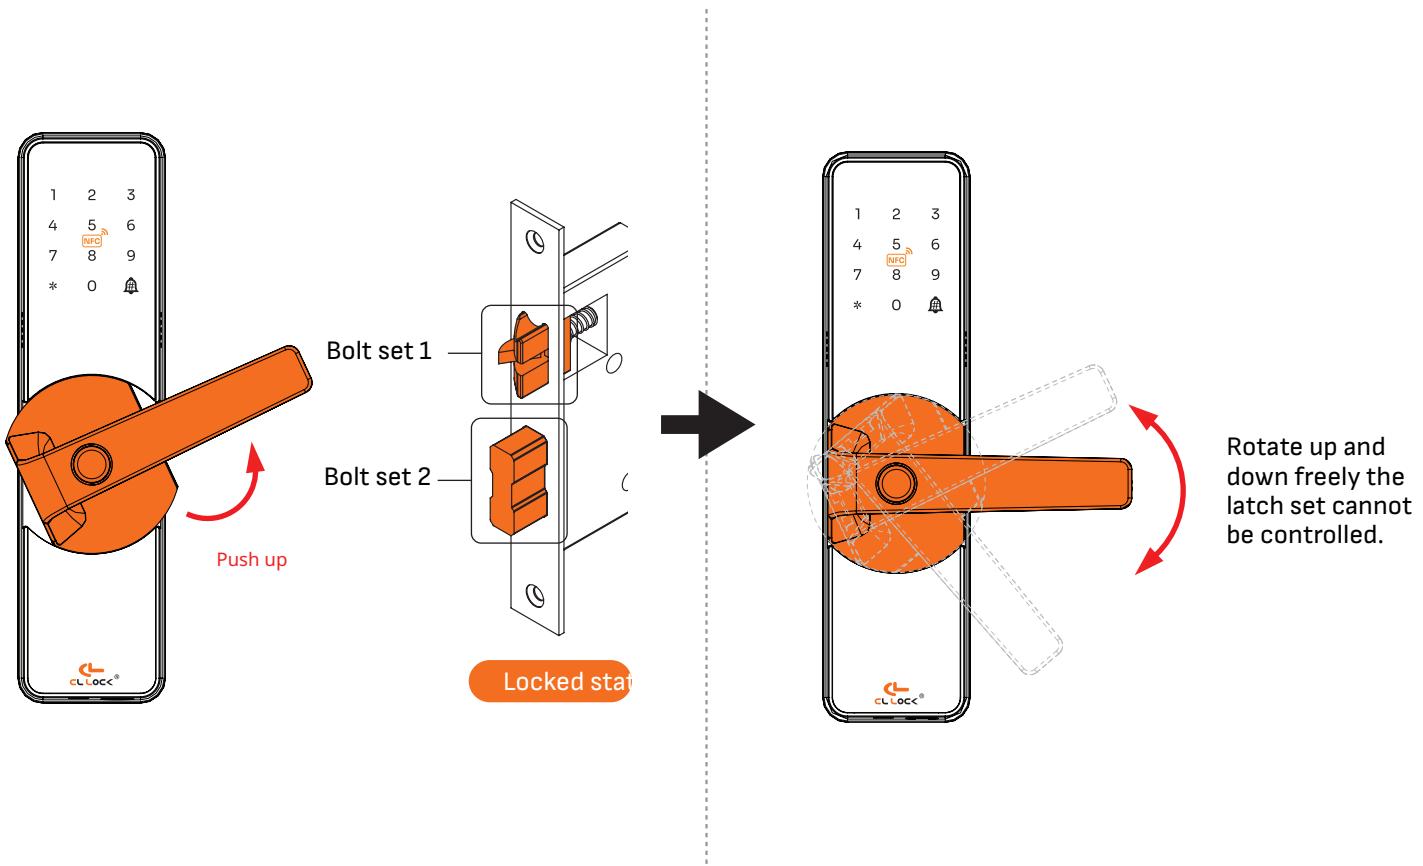

Rotate the handle upwards both latch sets extend and enter the **locked** position.  
(When the key is in the **locked** position, the external handle will rotate freely and cannot control the latch sets to lock or unlock.)

## 12. Setup Instructions
 
### 1. Administrator management

1.1 Add Administrator  Add Administrator  Enroll password, Fingerprint or NFC card:

 Delete Administrator  Enter the ID user and press #

### 2. User management

2.1 Add User  Add User  Enroll password, Fingerprint or NFC card:

 Delete User  Enter the ID user and press #

 Delete All

### 3. System Setting

3.1 Time Setting  Enter Year/Month/Date and Time

3.2 Volume Adjustment  Volume Low  
 Volume Medium  
 Volume High  
 Mute

3.3 Normally Open  Start normally open mode  
 Close normally open mode

3.4 Double Verification  Open double verification mode  
 Close double verification mode

3.5 Anti Tampering  ON  
 OFF

3.6 Record Info

### 4. Network Setting

 ON  
 OFF




Settings Video

Unlock Capacity	
Fingerprint	100
Password	300
NFC cards	300

# User Management


## CL-S1



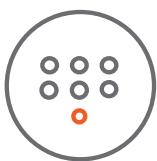

## 13. Administrator Management

### 13.1 Add Administrator

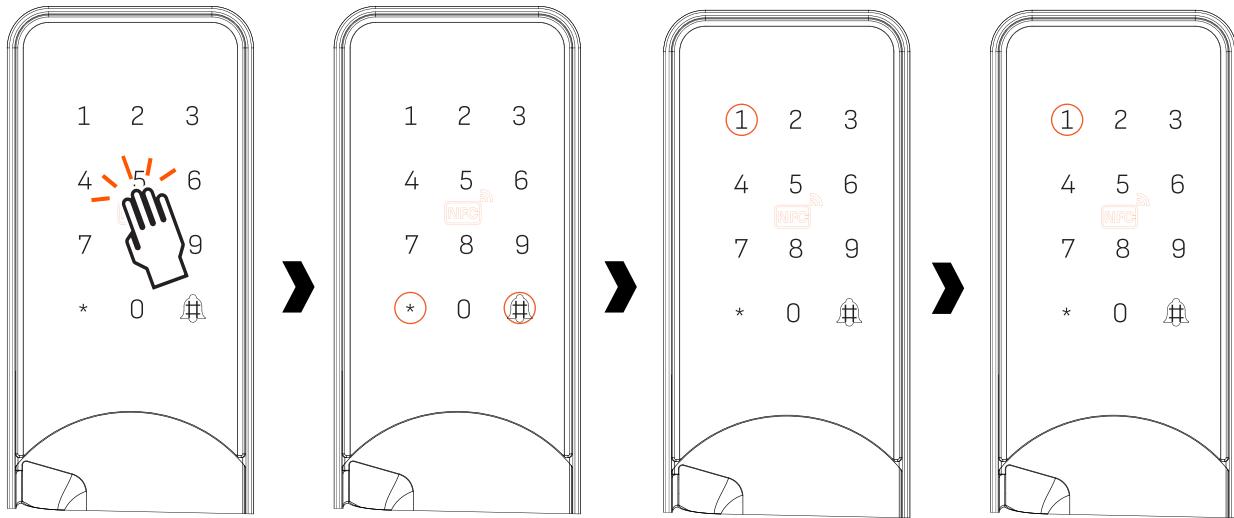

Touch the screen to light up

Press \* followed by #

Press 1  
Administrator Management

Press 1  
Add Administrator




Select your desired option:

- Enter a password of 6-10 digits
- Scan the NFC card
- Scan your fingerprint 5 times



- After registering the first admin, the factory code will change to "Admin."
- When registering a password, it must be entered twice to confirm the password.
- It is recommended to register the password first.
- When registering and using the NFC card, ensure the distance is between 0 - 30 millimeters for proper registration and usage.

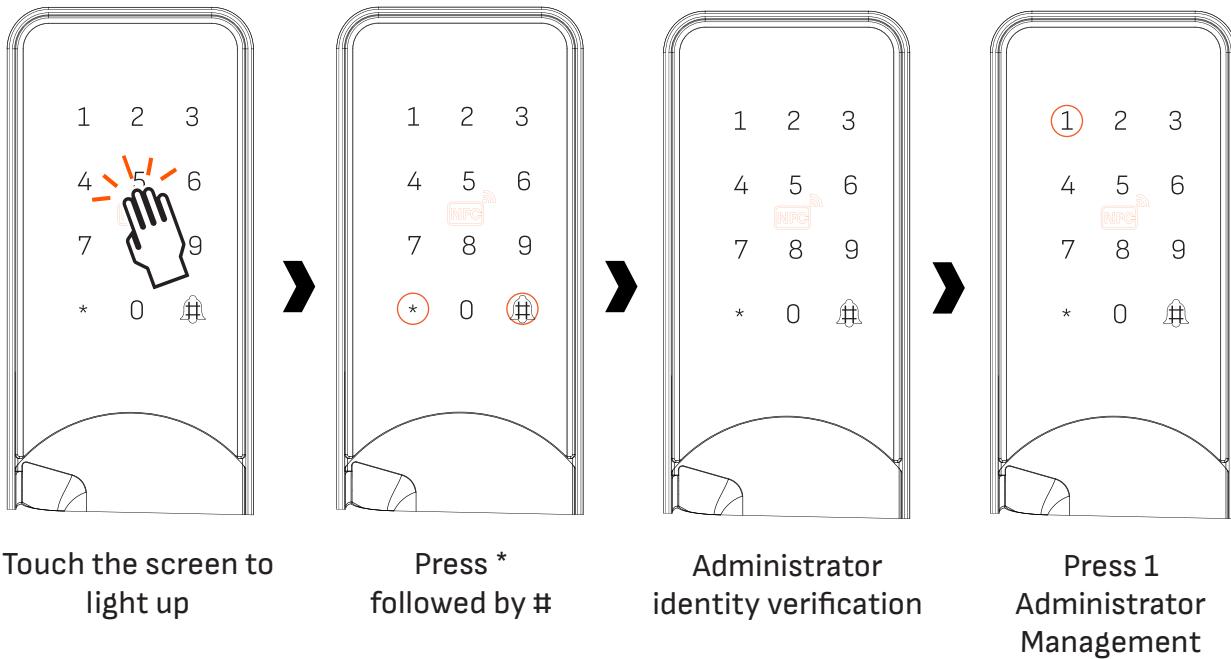**13.2 Delete Administrator**

**Press 2**  
**Delete Administrator**

- No. 0 cannot be deleted (in case of deletion, factory reset is required).

# User Settings


**CL-S1**





## 14. User Settings

### 14.1 Add User

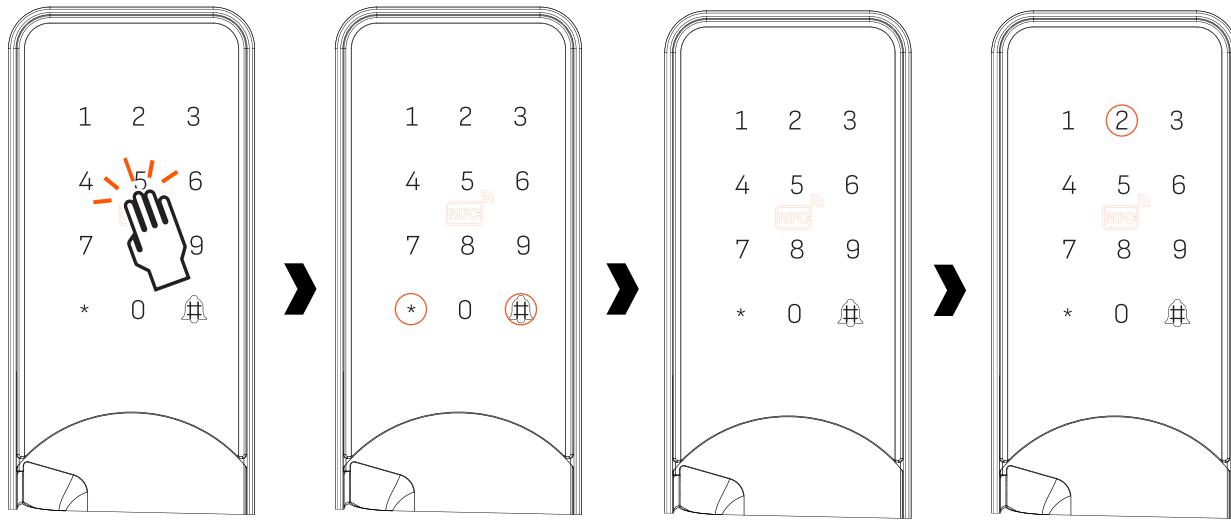


Touch the screen to light up

Press \* followed by #

Administrator identity verification

Press 2 User Management

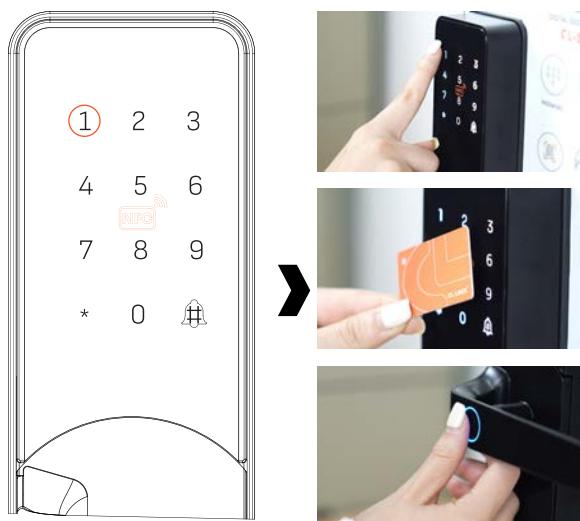


Press 1 Add User

Select your desired option:

- Enter a password of 6-10 digits
- Scan the NFC card
- Scan your fingerprint 5 times

- When registering a password, it must be entered twice to confirm the password.
- When registering and using the NFC card, ensure the distance is between 0 - 30 millimeters for proper registration and usage.

## 14.2 Delete User

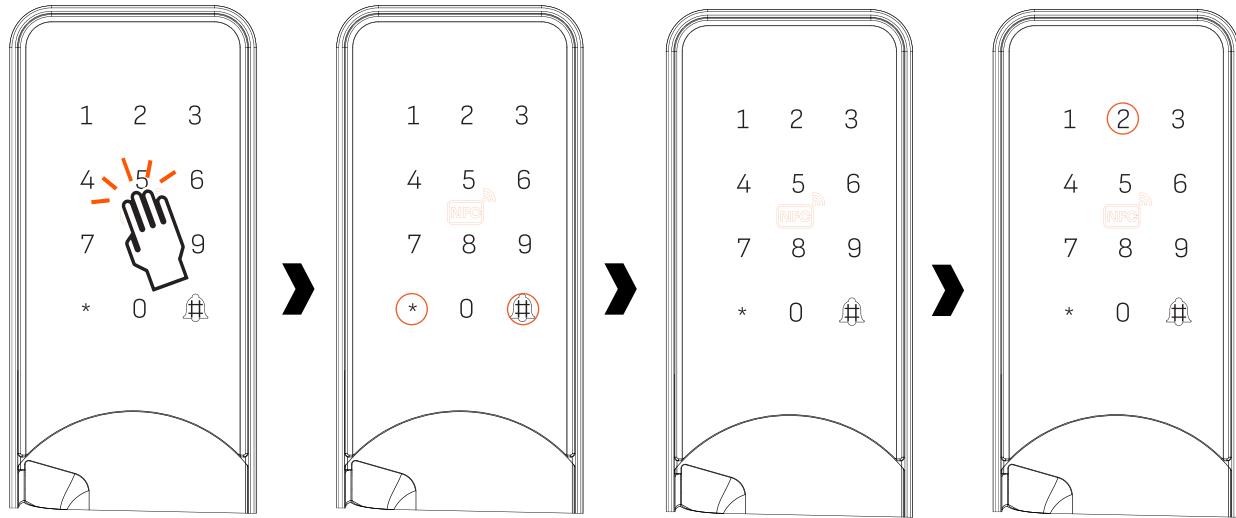


Touch the screen to light up

Press \* followed by #

Administrator identity verification


Press 2 User Management

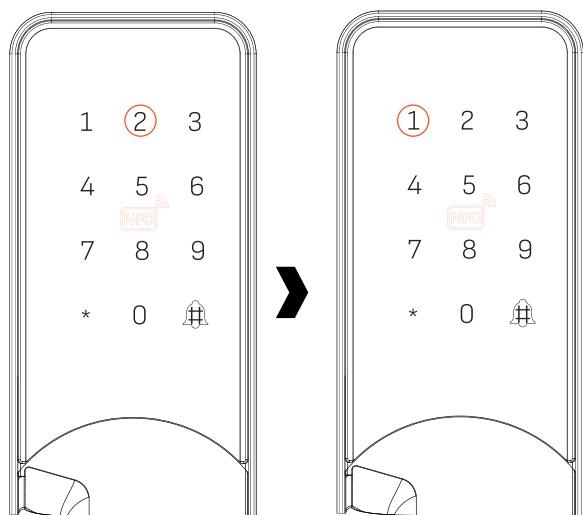

Press 2 Delete Management

Press 1 Delete by number

Enter the user ID (2-3 digits) and press #

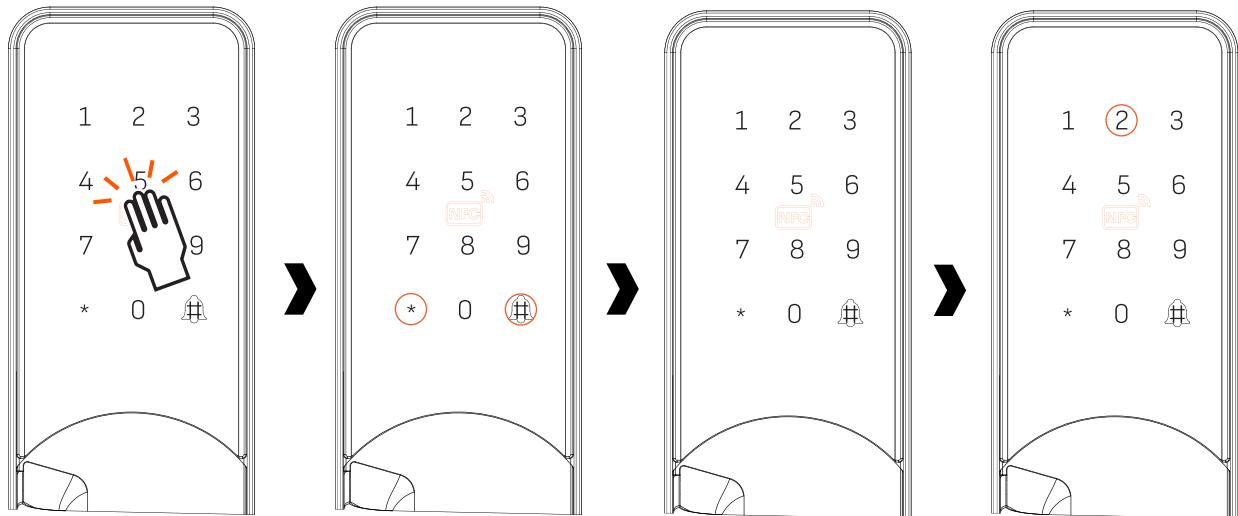
**14.3 Delete All Users**

Touch the screen to  
light up

Press \*  
followed by #

Administrator  
identity verification

Press 2  
User Management

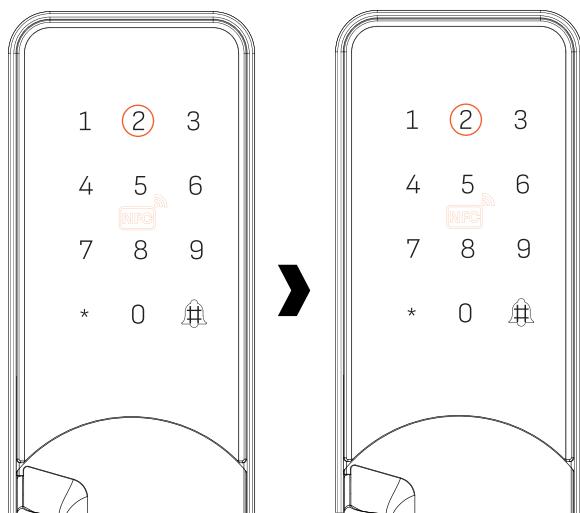

Press 2  
Delete user

Press 2  
Delete all user



# System Settings

**CL-S1**





## 15. System Settings



### 15.1 Time Setting

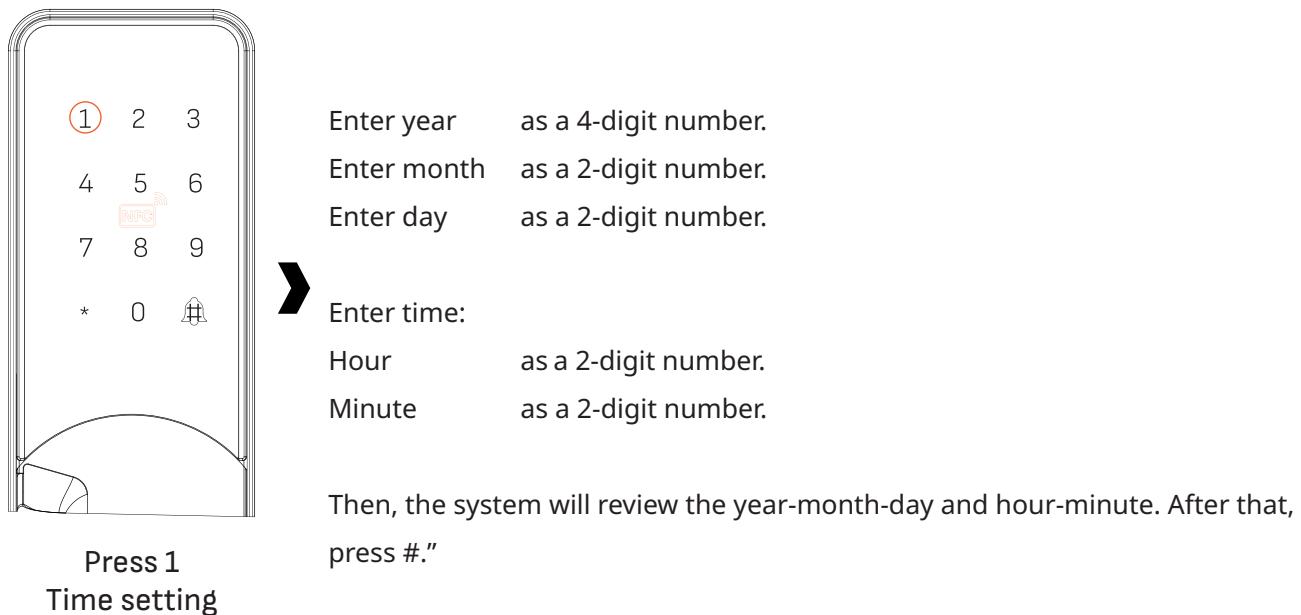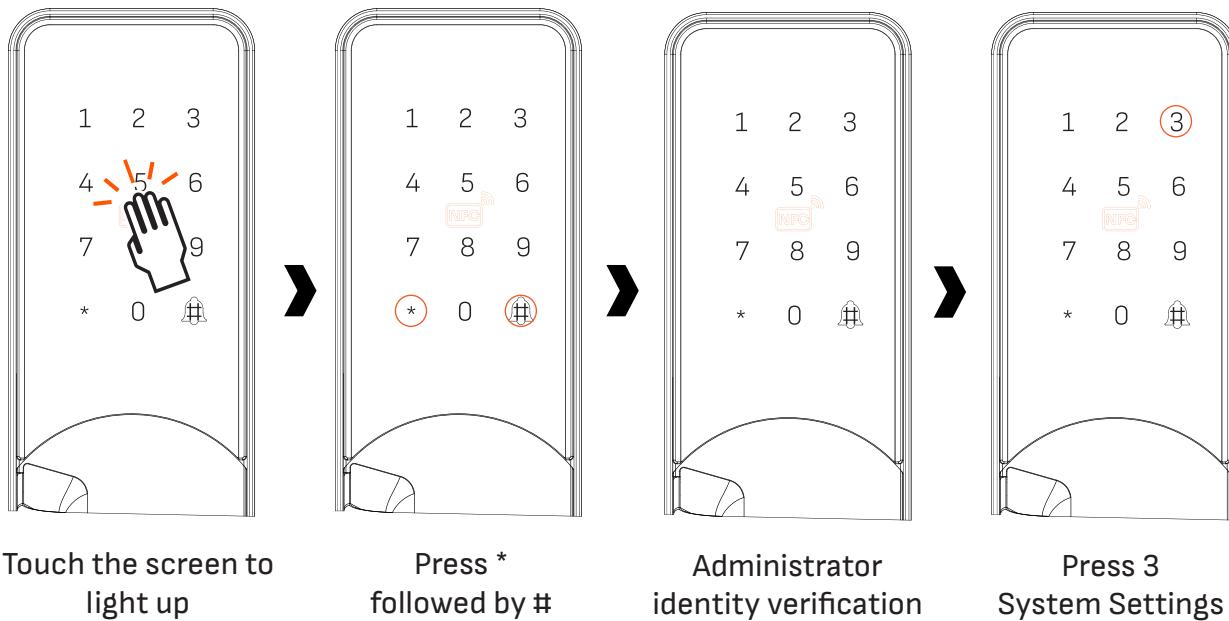


- If connected to the application, the date and time will be set automatically.
- Enter the year in AD only

## 15.2 Volume Adjustment

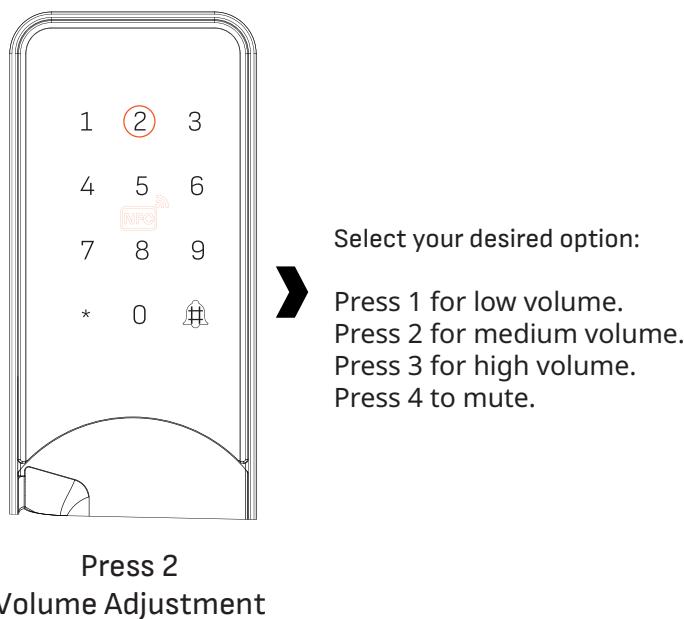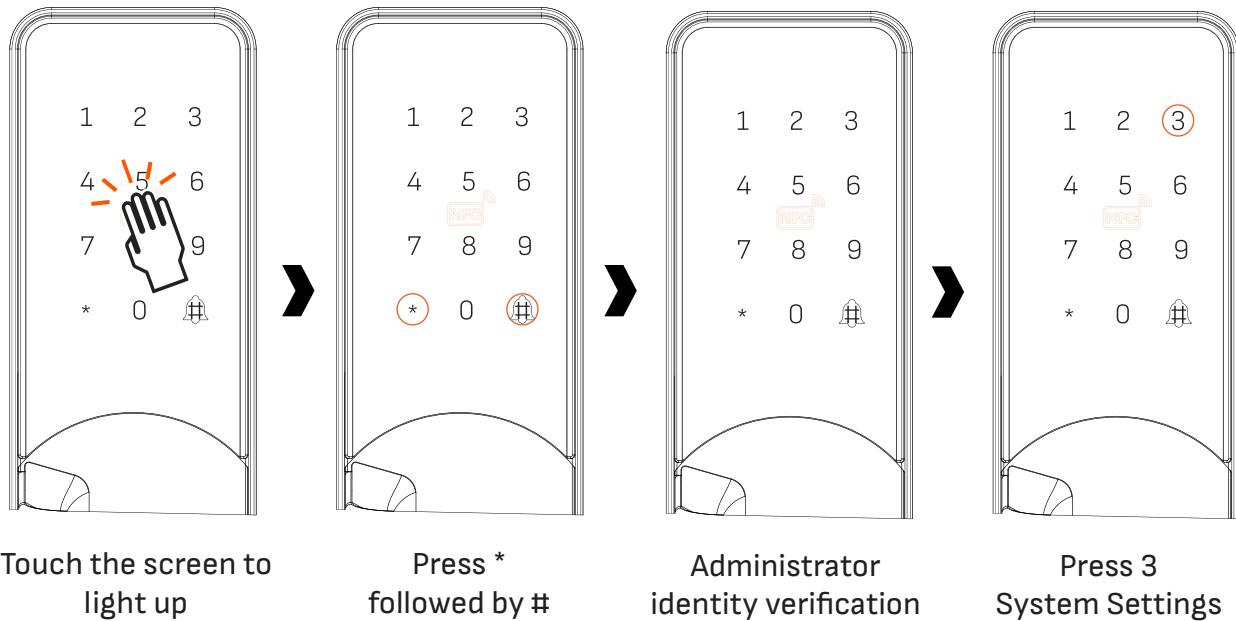

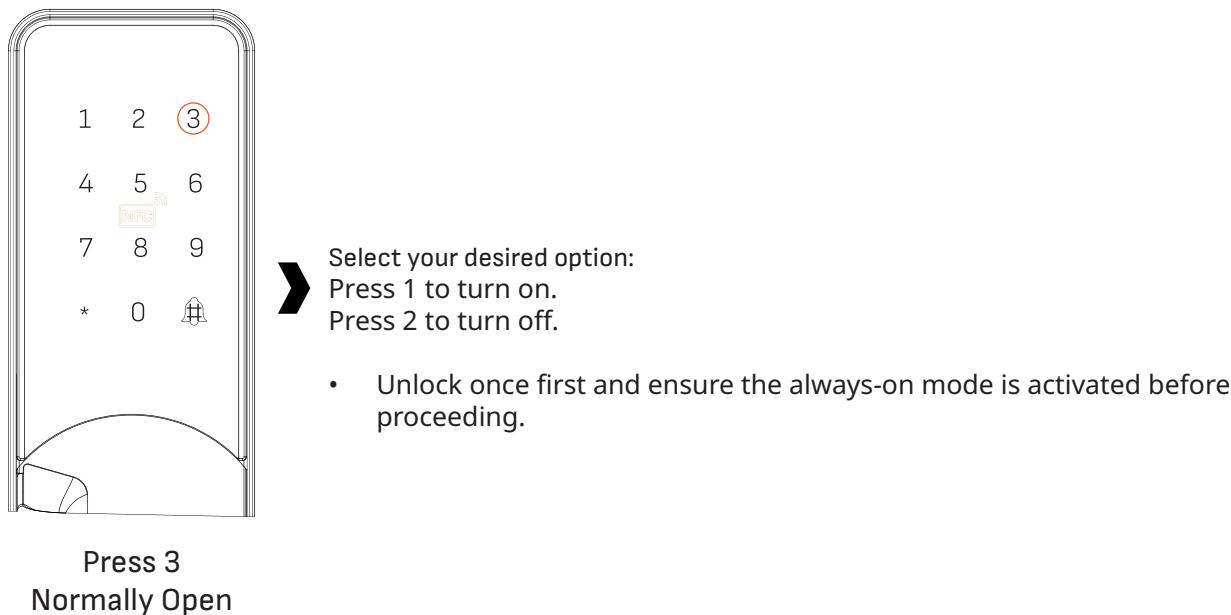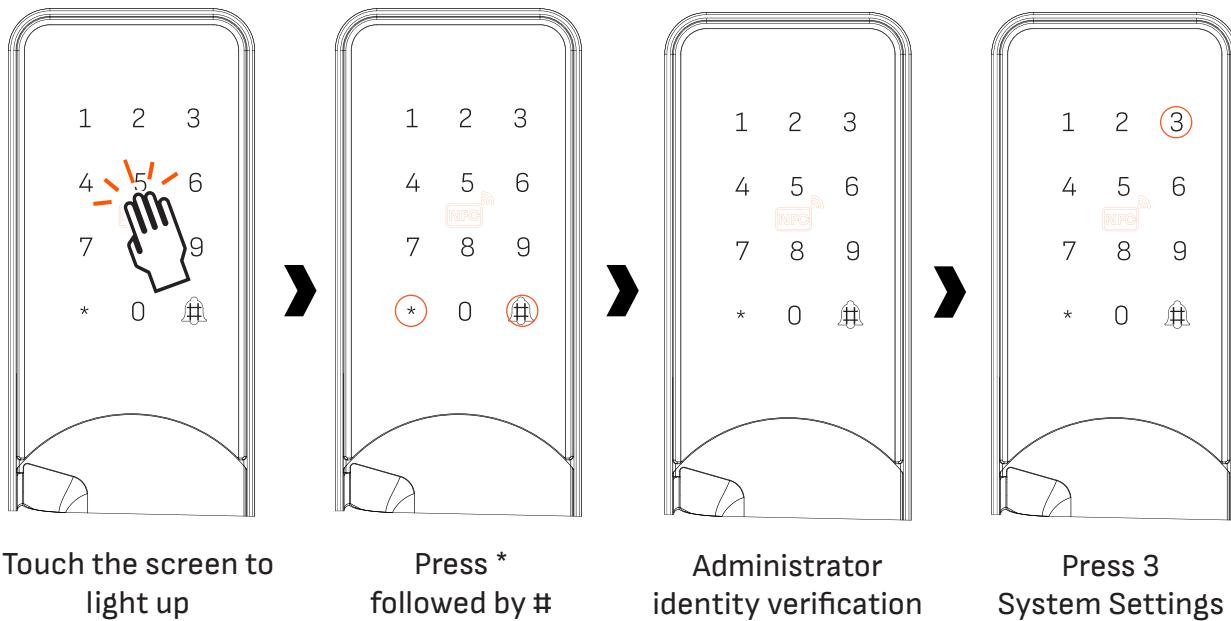**15.3 Normally Open**

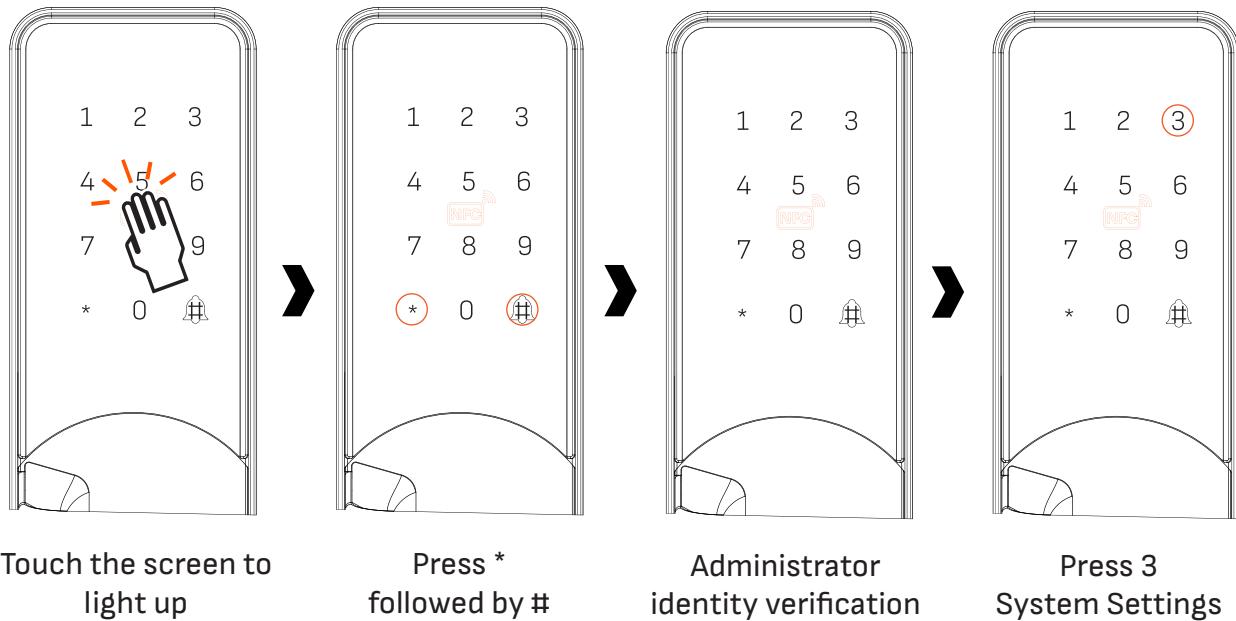
**15.4 Double Verification**

Touch the screen to  
light up

Press \*  
followed by #

Administrator  
identity verification

Press 3  
System Settings

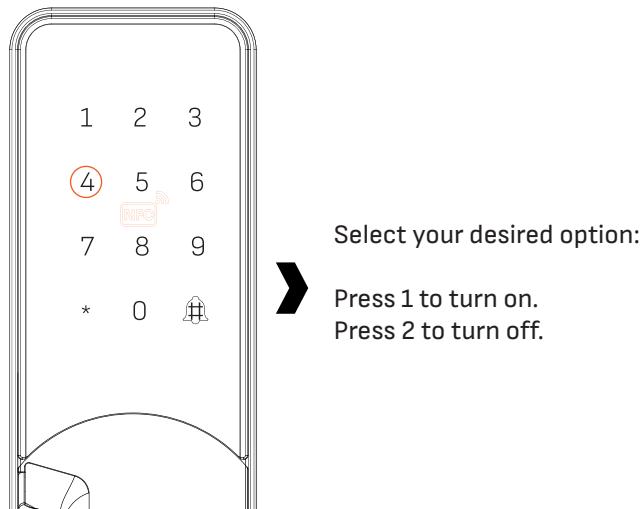

Press 4  
Double Verification