

***Sam's.com (171D)***


Item#:H54884-03956

Desc: 84in Animated Skeleton Pirate

Size: 89 x 21cm

120g

\*This page is not printed.

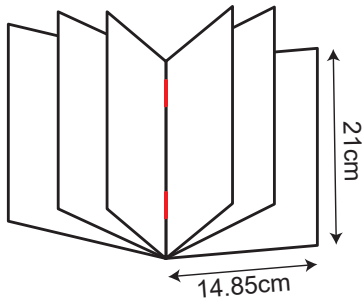



**ASSEMBLY INSTRUCTIONS & USER'S MANUAL  
FOR MEMBER'S MARK  
84IN ANIMATED SKELETON PIRATE**



# READ CAREFULLY & RETAIN FOR FUTURE REFERENCE!



**Questions, problems, missing parts?** Before returning to your retailer, Email our customer service department at [info@pan-asian.com.hk](mailto:info@pan-asian.com.hk)



**WARNING:** This is not a toy. For decoration purposes only. For indoor and outdoor use. Not intended for use by children under the age of 14. Do not place the product near an open heat source such as a fire or other heat source, such as a radiator, stove, fireplace, etc.

## KEEP OFF!! DO NOT SIT OR CLIMB ON SKELETON PIRATE. THIS IS NOT A TOY. THIS ITEM IS FOR DECORATIVE USE ONLY.

### WARNING

This item is not a toy and should be used for decoration only. This item contains small parts that can be a choking hazard. Keep all plastic and wire parts away from children.

1. Please use the adapter supplied by manufacturer.
2. Please assemble item according to instructions. Connect all wires.
3. Children should be supervised by adults. Item should not be grabbed, as it becomes a tipping hazard. Keep all away from the adapter, as it heats up during operation.

**IMPORTANT:** This product can be powered by a UL Listed, output 4.5 V/2A, input 100-240V/50-60Hz adapter (included). Adapter should be plugged into 120V household outlet.

### SAFETY INSTRUCTIONS:

1. All cautions in these operating instructions should be followed completely.
2. Do not display figure near any heat source such as radiators, stoves, fireplaces, etc.
3. Display should be set up by a qualified person only. Do not attempt to set up this unit beyond what is described in the operating instructions.
4. Take extra care when displaying any figure that may contain small parts around small children.
5. Use of this decoration should always be supervised by an adult.
6. Unplug AC/DC adapter when not in use.

### IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be practiced including the following:

1. READ AND FOLLOW ALL SAFETY INSTRUCTIONS.
2. Read and follow all instructions that are on the product or provided with the product.
3. Reference the National Electrical Code, ANSI/NFPA 70, specifically for the installation of wiring and clearance from power and lighting conductors.
4. Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction.
5. Do not install or use within 10 feet of a pool.
6. Do not use in a bathroom.
7. **WARNING: Risk of Electric Shock.** When used outdoors, install only to a covered Class A GFCI protected receptacle that is weatherproof with the power unit connected to the receptacle. If one is not provided, contact a qualified electrician for proper installation. Ensure that the power unit and cord do not interfere with completely closing the receptacle cover.
8. **WARNING: Risk of Fire.** Installation involves special wiring methods to run wiring through a building structure. Consult a qualified electrician.
9. **WARNING: Risk of Electric Shock.** Mount the unit at a height greater than 1 foot from the ground surface.
10. Not for use with receptacles that are weatherproof only when the receptacle is covered (attachment plug cap not inserted and receptacle cover closed).

SAVE THESE INSTRUCTIONS – This manual contains important safety and operating instructions for power units.

### WARRANTY INFORMATION

#### Limited Warranty

This product is covered by the Sam's Club Member Satisfaction Guarantee. Please visit [samsclub.com](http://samsclub.com) for more information. If you have any questions regarding the warranty or spare / replacement parts, please email us at [info@pan-asian.com](mailto:info@pan-asian.com)

NOTE: Please consider recycling all applicable packaging material

SKU#: 990399616


Model Number: H54884-03956

Customer Assistance (spare/replacement parts) Email: [info@pan-asian.com](mailto:info@pan-asian.com)


# PARTS LIST

|                                                                                                                            |                                                                                                                                        |                                                                                                                             |                                                                                                                            |
|----------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------|
| <b>A. Support Base</b><br>                 | <b>B. Leg Supports</b><br><br><b>X2</b>               | <b>C. Right Boot</b><br>                   | <b>D. Left Peg Leg</b><br>               |
| <b>E. Body / Costume / Control Box</b><br> | <b>F. Right Arm</b><br>                               | <b>G. Left Arm</b><br>                     | <b>H. Squeezebox</b><br>                 |
| <b>I. Skeleton's Head</b><br>             | <b>J. Hat</b><br>                                    | <b>K. AC/DC Adapter and Cable</b><br>     | <b>L. Ground Stakes</b><br><br><b>X4</b> |
|                                                                                                                            | <b>M. TRY ME Step Pad (For indoor use only)</b><br> | <b>N. Click Lock Pin Access Tool</b><br> |                                                                                                                            |


# ASSEMBLY FOR THE SKELETON PIRATE

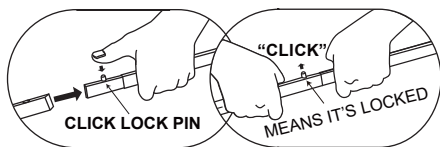


**NOTE:** Follow this 'Click Lock' procedure for Support Stand & Pirate parts assembly.

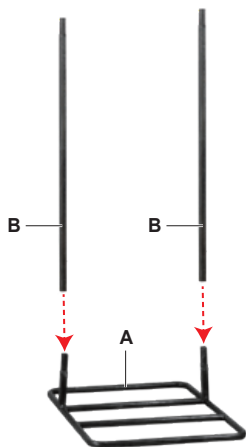

1. Align & 'Click Lock' the Left & Right Leg Supports (B) into the Support Base (A).

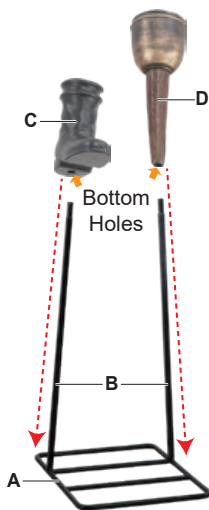


2. Align holes on bottom & top of parts (C & D), slide to bottom of Base (A).

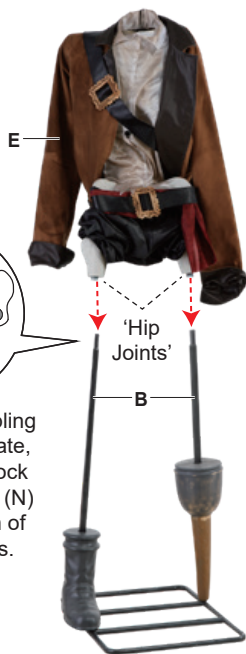


When disassembling the Skeleton Pirate, use the "Click Lock Pin Access Tool" (N) to depress each of the locking pins.

3. Align & 'Click Lock' the 'Hip Joints' on Body (E) into the top of Left & Right Leg Supports (B).

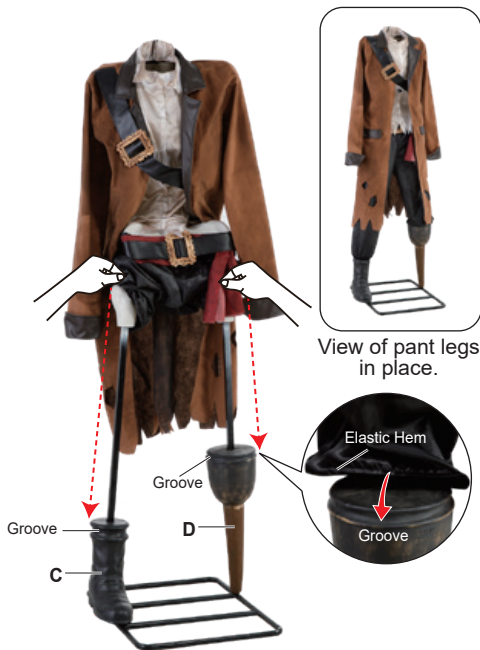


4. Pull bottoms of both pant legs down, snap elastic hems into grooves on top of Boot (C) and Peg Leg (D).

ASSEMBLY FOR THE SKELETON PIRATE

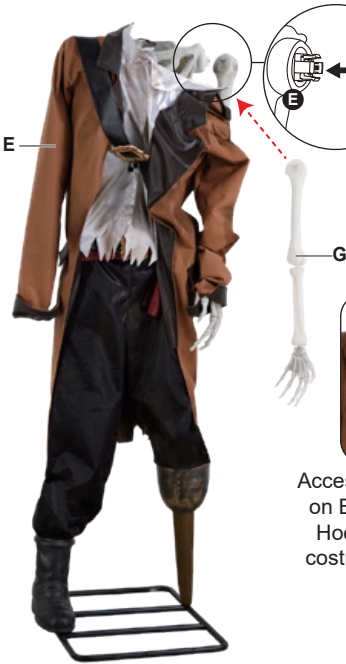

**5.** Align & Snap-In to Lock the Left (G) & Right (F) Arms into shoulder joints on the Body (E).

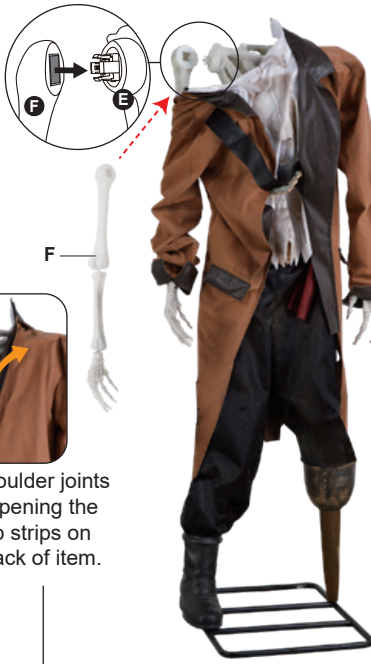

**6.** Pull bottoms of both sleeves down to cover Left (G) & Right (F) Arms to wrists, as shown above.



Access the shoulder joints on Body by opening the Hook & Loop strips on costume at back of item.



View of Costume in place.



**7.** Align & 'Click Lock' the Squeezebox (H) into the post protruding from chest area of Body (E). Attach both hands to Squeezebox by placing the index, middle fingers inside the fabric elastic bands on each side.




Fabric Elastic Band

2-fingers



View of both hands holding Squeezebox in place.

ASSEMBLY FOR THE SKELETON PIRATE

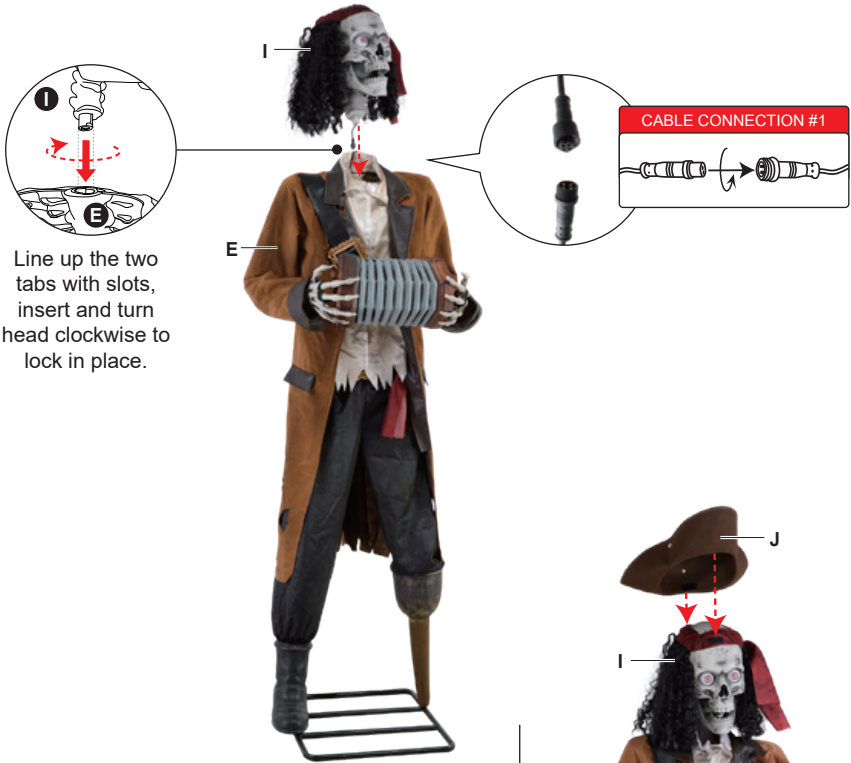

8. Align the two tabs on neck on the Pirate Skeleton's Head (I) with the slots in the neck area of the Body (E), insert & turn Head clockwise to lock in place.

9. Cable Connect #1. Screw in Power Cable from Head (I) to the cable end attached to the Control Box on back of Pirate's Body (E).


10. Secure Hat (J) to Head (I) by connecting the Hook & Loop strips on both parts together.

11. Insert 4 Ground Stakes (L) over the base and into soft ground for additional stability where applicable.




# OPERATION INSTRUCTIONS

12. Attach Adapter Cable to Control Box on back of figure and into household power supply, then select function to operate item.

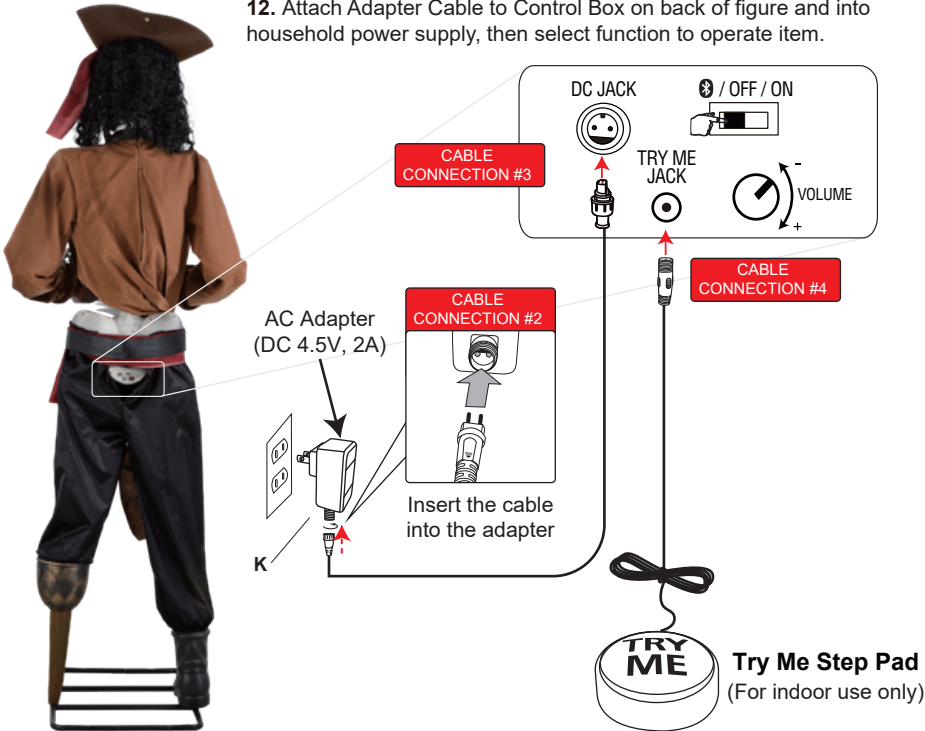

**Motion Sensor Detection  
& Activation Range**

**DO NOT BLOCK, OBSTRUCT OR  
COVER THE MOTION SENSOR**  
as this will affect the ability of  
the item to function properly.

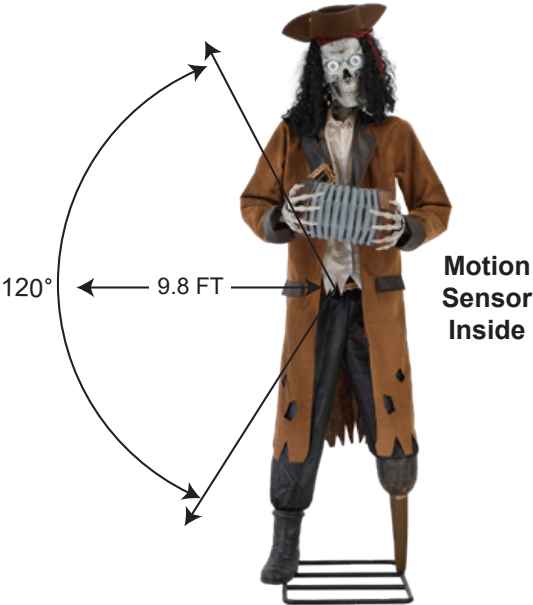



## ITEM FUNCTION:



Slide the switch into the 'B' position. Search for the name 'PAC-171' on your device. Click on this name. NO PASSWORD necessary to activate item. Once engaged, the item will play your music selection and LED Lights with motion.

**OFF**

Slide the switch into the "OFF" position to activate the Try Me feature. Press the Try Me Step Pad for shortened version of lights, sound and motion demonstration.

**ON**

Slide the switch into the "ON" position to activate the "Motion Activated" function. When activated, the unit will come to life. The unit will play full version of lights, sound and motion. (Note: The "Motion Sensor" is activate at angle 120° and the detection zone within 9.8 feet).



Raise or lower the volume using the volume control turn dial, turn all the way down to turn the volume off.

**WARNING:** To assure continued compliance, any changes or modifications not expressly approved by the party. Responsible for compliance could void the user's authority to operate this equipment.

### FCC Statement

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### FCC Radiation Exposure Statement:

The equipment complies with FCC Radiation exposure limits set forth for uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

## TROUBLESHOOTING:

| Problem                                                                                                                                                              | Solution                                                                                                                                          |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>The product does not work</b>                                                                                                                                     | 1. Check all wire connections and make sure all parts are securely attached.                                                                      |
|                                                                                                                                                                      | 2. Check and make sure the B/OFF/ON switch is in the correct position.                                                                            |
|                                                                                                                                                                      | 3. When in B position ensure PAC-171 is selected & engaged on your device.                                                                        |
|                                                                                                                                                                      | 4. Check to make sure the adapter is connected to a working power source. Make sure the adapter is plugged into a standard 120V household outlet. |
| <b>The motion sensor does not work</b>                                                                                                                               | 1. Check the B/OFF/ON switch is located in the "ON" position only.                                                                                |
|                                                                                                                                                                      | 2. Reorient the products location or environment and try again.                                                                                   |
|                                                                                                                                                                      | 3. Check if the ambient temperature is too high. Place the product in a normal temperature environment.                                           |
| <b>If you are still experiencing problems with the product please email <a href="mailto:info@pan-asian.com.hk">info@pan-asian.com.hk</a> for further assistance.</b> |                                                                                                                                                   |

### **Questions or Comments?**

We would love to hear about your  
Member's Mark experience! Visit us at:  
**[samsclub.com/membersmarkhelp](https://samsclub.com/membersmarkhelp)**

**Distributed by Sam's West Inc.**

2101 SE Simple Savings Dr.  
Bentonville, Arkansas 72716-0745

Made in China



Need Assistance? Visit us at: [samsclub.com/membersmarkhelp](https://samsclub.com/membersmarkhelp)