


USER MANUAL
V80 In-Ear Wireless Sports Earphones

2 **PACKING LIST**

	Charging Case x1
	Earbuds x1 Pair
	Type-C Cable x1
	User Manual x1

01

3 **PRODUCT OVERVIEW**

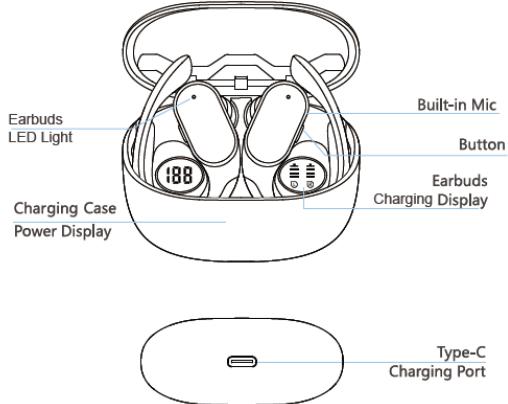

4 **FIRST-TIME USE**

- Prior to first use, please remove the blue insulation sticker.
- Fully charge the both earbuds and charging case.
- Keep the charging port dry before charging.
- Use the provided Type-C charging cable, or place the charging case on a wireless charger to get charge.

5 **WARNINGS**


- Keep away from liquids and extreme heat.
- Keep the earbuds out of children's reach.
- Do not throw or drop the earbuds to avoid damage.
- Do not disassemble the earbuds, or make any modifications to the structure or any part of it.
- Please charge with a rated voltage charger.
- Low Battery Warning : Earbud LED Red light is always on.

02 **03**

6 CHARGING CASE

⑩ Battery indicator of Charging Case

The display will light up to show the remaining power of charging case when you open (or close) the lid, then go off after 8 secs. The digits will flash when the charging case being charged, display "100%" when fully charged, and stay on until the power supply is cut off.

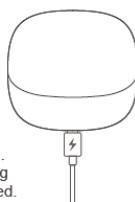

⑪ Battery Indicator of Earbuds

Put the earbuds back into the case to charge. The fashing battery icons display the charging status, and will stop flashing after fully charged.


* Features with NTC tempera control protection, V80 earbuds will not charge if the temperature reaches 45 degrees or higher. (Charging case will automatically protect themselves in that case.) It is recommended to stop charging (or disconnect wireless charging) firstly, recharge after the temperature drops below 45 degrees.

04

7 POWER ON/OFF

⑫ Automatically Power On/Off

Open the lid of the charging case and the earbuds will power on automatically. Put the earbuds into the charging case and close the lid, the earbuds will power off automatically.

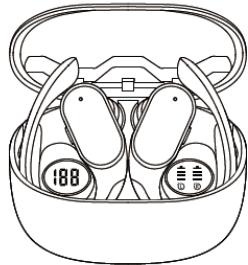

05

⑬ Manually Power On

Press & hold both earbuds for 3 secs, it will flash **Blue** light and then power on.



⑭ Manually Power Off

Press & hold either earbud for 5 secs, it will flash **Red** light and then power off.



Note: The earbuds will automatically power off if there is no devices connected within 5 mins.

06


8 BLUETOOTH CONNECTION

Step 1

Open the lid of the charging case, two earbuds will automatically power on and enter pairing mode.

Step 2

Activate Bluetooth setting on your phone, search and connect "V80".

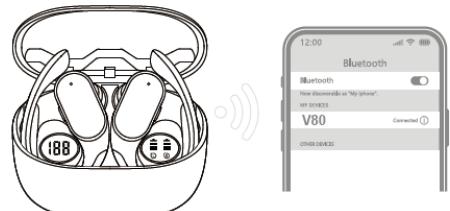

07

08 SINGLE MODE

- When on dual mode, put an earbud into the charging case.
- Only take the other out of the charging case and connect it.



09 OTHER INSTRUCTIONS

- Each time you use your earbuds, it will automatically pair with your last successfully connected device.
- The earbuds will automatically power off if there is no devices connected within 5 mins.
- The fully charged charging case can work as a power bank to recharge the earbuds for 3-4 times without being plugged into power supply.

08

- If one of the earbuds has no sound output, place the both earbuds back in the charging case. Make sure that the both earbuds are charging, and take them out again.
- If your earbuds won't charge, make sure that the power adapter is firmly plugged into a power outlet. Place the earbuds in the charging case and close the lid.
- The wireless operating range is 10m(33ft) . If you exceed this range, the earbuds will disconnect from your paired device. The connection will be re-established if you re-enter the wireless range within 5 minutes. The earbuds will automatically re-pair with the last connected device. To connect with other devices, repeat the previous pairing steps.

10 FACTORY RESTORE SETTING

When should I reset?

- When only one side play music.
- When you can't use the two earbuds together.
- When both earbuds fail to pair with each other or occur connection-related issues.

09


11 How to reset?

- Step1: Press & hold either earbud for 5 secs, it will flash Red light and then power off.
- Step2: Press & hold the both earbuds for 12 secs to clean the pairing record of the last connected device, reset successfully. (* Both earbuds will flash Red & Blue light for 10 secs, then turn to Red light and stay on for 1 sec to go off.)
- Step3: Put the earbuds back into charging case and close the lid for 2~3 secs.
- Step4: Now open the charging case and turn on the Bluetooth of your device, search and connect "S13", they should work properly (* If it still doesn't work, please repeat the steps to try again.)

10


12 MULTI-FUNCTION OPERATIONS

Incoming Call

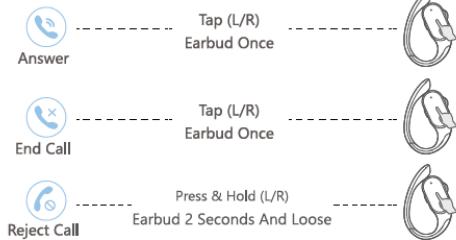

Voice Assistant

Note: in standby/ play mode

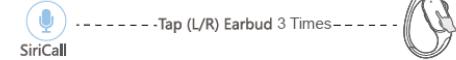

11

12 Music Mode

	Play/Pause	Tap (L/R) Earbud Once	
	Next Track	Press & Hold (R) Earbud 2 Seconds	
	Previous Track	Press & Hold (L) Earbud 2 Seconds	
	Volume+	Tap (R) Earbud Twice	
	Volume-	Tap (L) Earbud Twice	

Note: Prompt sound "Du" will be produced when the volume reach minimum or maximum level.

12

13 SPECIFICATIONS

- Model: V80
- Name: In-Ear Wireless Sports Earphones
- Play/Talk time: About 7-9H (60% volume)
- Chip Version: V5.4
- Transmission Distance: About 10 meterS
- Frequency Response: 20-20KHz
- Impedance: 32Ω
- Charging Box Battery Capacity:charge for headphones 5-6 times
- Supported Protocols: A2DP, HFP, HSP, AVRCP
- Standby Time: Approximately 400H
- Charging Time: Charging compartment approximately 2H /headphones approximately 1.5H
- Charging Voltage: DC 5V

14 Q&A

Q: Why does the music cut in and out sometimes?

A: 1- Please make sure there is no obstacle between the earbuds and your device.

13

2- Please make sure there is no Microwave oven/Wifi transmitter around you, which are more likely to produce electromagnetic interference and result in signal interruption.

Note: Keep the device and the earbuds as close as possible to ensure a more stable Bluetooth connection.

Q: What should I do if the Earbuds stop charging?

A: 1- We suggest you to charge the earbuds by using the original charging cable we supply.
2- Please make sure the charging pins and charging points are clean & dry before charging.
3- Please confirm the earbuds battery was run out if sometimes it can't be charged properly.

Q: I've connected the earbuds with my smartphone but can't hear any sounds

A: Double-check the volume level on your smartphone and the earbuds. Some smartphones require you to setup the earbuds as an audio output device before the audio can be transmitted. If you're using a multiplayer or other device, please make sure it supports the A2DP profile.

14

Q: What's the wireless range of earbuds?

A: The maximum range is 10m (33ft). However, the actual range depends on environmental factors. For optimal performance, keep your device connected within a range of roughly 4m to 8m and make sure that there are no major obstacles (like reinforced steel walls) between the earbuds and your device.

Q: I put the earbuds back in the charging case, but the earbuds are still connected.

A: The charging case is probably out of power. Try charging it. Or press and hold the earbuds multi-function button for 5 seconds to power off.

Product Care&Use

Keep away from liquids and extreme heat resources. Don't use the earbuds at high volume for extended periods, as this may cause permanent hearing damage or loss.

Thank you very much for choosing S13

15

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.