

ziovo

User Manual


Z168

Please read this instruction thoroughly before using this product
and keep it for future reference.

ZIOVO

ZIOVO Customer Technical Team

Scan any QR code below to get Free-technical support:

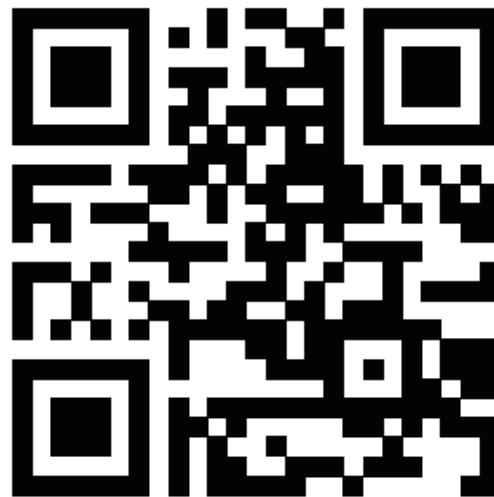

Mail QR Code



WhatsApp QR Code

If you encounter any product problems, please scan the QR code above to get professional worry-free technical support immediately

VALID FOR LIFETIME, BELONGING TO THE ZIOVO BRAND TEAM



INTRODUCTION

Congratulations on choosing to buy an ZIOVO product. All products brought to by ZIOVO are manufactured to the highest standards of performance and safety

Before use, please read this manual carefully. It gives important instructions about safety, use and maintenance of your Tablet. We hope you enjoy using your purchase for many years to come.

Remove all packaging material. You may wish to keep packaging for future use or storage of your Tablet. Alternatively, disposed of accordingly.

⚠ WARNING

- **GARDER** les piles neuves et usagées **HORS DE LA PORTÉE DES ENFANTS**
- **Consulter immédiatement** un médecin si l'on soupçonne qu'une pile a été avalée ou insérée dans une partie du corps.

⚠ WARNING

- **BEWAHREN SIE** neue und gebrauchte Batterien außerhalb **DER REICHWEITE VON KINDERN AUF**
- **Suchen Sie sofort einen Arzt auf**, wenn der Verdacht besteht,dass eine Batterie verschluckt oder in einen Teil des Körpers eingeführt wurde.

⚠ WARNING

- **TENERE** le batterie nuove e usate **FUORI DALLA PORTATA DEI BAMBINI**
- **Rivolgersi immediatamente a un medico** se si sospetta che una batteria sia stata ingerita o inserita in una parte del corpo.

⚠ WARNING

- **MANTENGA** las pilas nuevas y usadas **FUERA DEL ALCANCE DE LOS NIÑOS.**
- Acuda inmediatamente al médico si sospecha que se ha tragado o introducido una pila en cualquier parte del cuerpo.

⚠ WARNING

- **KEEP** new and used batteries **OUT OF REACH of CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.

FUNCTION OVERVIEW	01
GETTING STARTED	01
HOME SCREEN	02
SETTING BASICS	02
NETWORK CONNECTION	04
APP MANAGEMENT	04
INTERNET NAVIGATION	04
MULTIMEDIA	04
SPECIFICATION	05
TROUBLESHOOTING	05
GUARANTEE	06

English





EN

Getting started

Before Powering up the Tablet, ensure that it is fully charged.

1. Reset
2. Power On/Off
3. Volume +
4. Volume -
5. USB Type-C interface
6. 3.5mm AUX Slot
7. 5.0MP Camera
8. Double Speaker
9. 8.0MP Camera
10. Lights Flash

Power On/Off

Press and hold the power button for 2-3s to turn on your tablet:Select your language and set up your tablet following the start guide:

Press and hold the power button for 2s,then release it. It will show Power Off and Restart on the screen.Tap Power Off to turn off the tablet.

Press and hold the power button for 5s to do a forced shutdown when it's frozen.

Battery

Rechargeable Li-ion battery is installed in the tablet.

We suggest you drain the battery completely once a month if only use your tablet occasionally.

DO NOT dispose of tablet in a fire.

Sleep Mode


Simply press the power button once to switch the tablet to the Sleep Mode when the tablet is ON; press again to wake it up.

Tip :

Go to Settings>Display>Sleep to set the time of Sleep Mode.

HOME SCREEN

Icons on the Bottom Menu

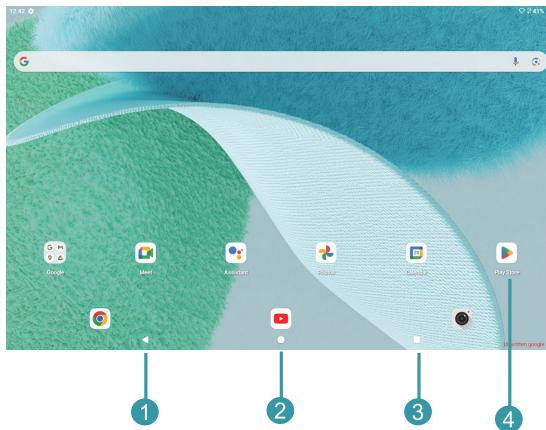

1. Back
2. Home Screen
3. Recent Activities
4. Apps Collection

Wallpapers, Widgets and Home Settings

Tap and hold the empty section of a Home screen. WALLPAPERS, WIDGETS and HOME SETTINGS will be displayed

Tap WALLPAPERS icon to change the current wallpaper of the tablet from the default wallpapers or your photos,


Tap WIDGETS, touch and hold any widget (e.g.Clock), then slide and add it to a Home screen. Remove it by sliding to X.

Tap HOME SETTINGS to enable/disable adding icon to Home screen. This is applicable to the new Apps installed from Play Store.

SETTING BASICS

Quick Settings

Swipe down from the top of the screen to access Quick Settings

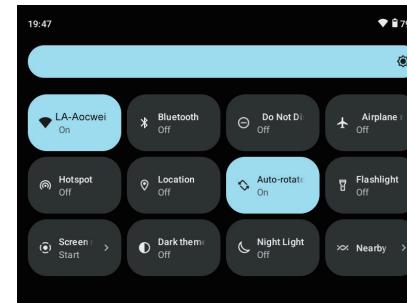

- Wi-Fi Tap to connect to a wireless network
- Bluetooth. Enable/disable the Bluetooth on the tablet; pair with other Bluetooth device or view paired devices
- Do Not Disturb. Block sounds or vibrations according to the different modes (Total silence, Alarms only and Priority only)
- Portrait /Auto-rotate/ Landscape
- Battery Saver. Enable/disable the low power mode
- Airplane Mode. Turn on/ off all the network connectivity.

Tap the icon to change the options in the Quick Settings.

More Settings

Swipe down from the top of the screen, then tap the icon to enter the detailed Setting interface. Or, tap the Settings icon on the Home screen to enter.

Network & Internet

- * Connect to any working Wi-Fi
- * Enable/disable the Airplane Mode
- * Monitor the data usage

Connected devices

- * Turn on/off Bluetooth
- * Pair with Bluetooth devices and check the paired devices
- * Cast device and check the cast device
- * Add and check printers

Apps & notifications

- * Check the Apps recently opened
- * Check all the Apps on the tablet
- * Set the App permissions
- * Uninstall the third-party Apps
- * Adjust App notification settings
- * Clear the cache of the Apps

Battery

- * Display the remaining battery power as a percentage
- * Enable/disable the Battery Saver
- * Adjust the time of entering the Sleep Mode

Display

- * Adjust the screen brightness
- * Adjust the font size and display size
- * Set a screen save
- * Change the wallpaper
- * Adjust the time of entering the Sleep Mode

Sound

- * Set volume levels for media, alarms, and notifications
- * Set preferences of Do Not Disturb
- * Set the tunes for notifications and alarms
- * Turn on/off the sound for screen lock, charging and touch

Screenshot

- * Set the delay time for screen shot
- * Set the location folder of screen shots
- * Switch on/off Show the screen shot button in the statusbar

Tip :


Press the volume down button and the power button together to capture a screen shot. Or, switch on show the screen shot button in the statusbar, then tap the  icon on the bottom menu to capture a screen shot.

Storage

- * View and manage your storage space

Security&location

- * Set screen lock pattern,e.g.password, PIN,Swipe etc.
- * Enable/disable all the notifications while the screen is locked
Enable / disable services.
- * Turn on/off the location services for specific Apps
- * Set to show/hide the password when input a password

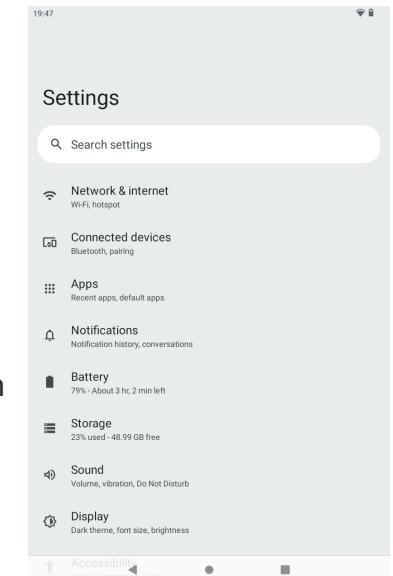

Users&accounts

- * Add and manage the user accounts on your tablet

Accessibility

- * For vision and hearing impaired users, manage settings for Screen readers, Subtitle, and more

Google

- * Set the preferences for Google related services

System


- * Set Language.
Tap Languages&input>Languages>+add, a language to add your language. After adding, hold and slide to the top to change the language.
- * Restore factory setting.
Tap Reset options> Erase all data (factory reset) to restore the factory setting.
- * Set the date and time
- * Turn on/off the Backup
- * Check the detailed information about the tablet

NETWORK CONNECTION

Go to Wi-Fi settings in the Settings interface or directly enter Quick Settings.

Wi-Fi Connection

- 1.Tap Network and Internet and turn on the Wi-Fi,All Wi-Fi connections available will be listed;
- 2.Select your Wi-Fi and input the correct password.

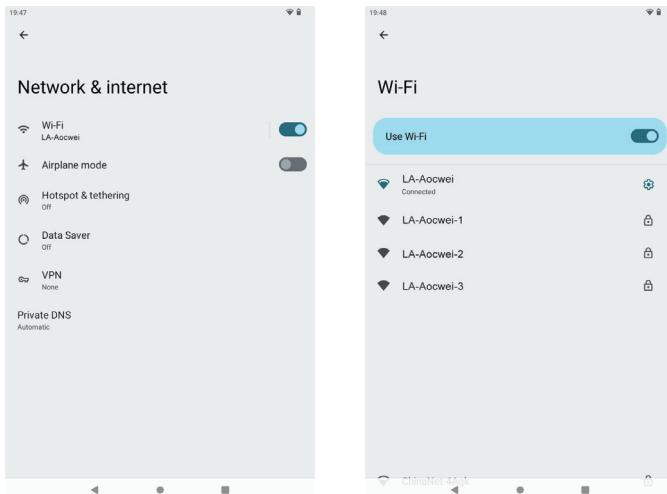

Bluetooth Paring

Please turn on the Bluetooth on your tablet and your bluetooth device.

- 1.Tap Connected devices and turn on the Bluetooth;
- 2.Tap Bluetooth>+pair new device to enter the scanning interface.
Devices available will be displayed after a few seconds;
- 3.Tap the desired device to get a paring code and click PAIR on both devices. An automatic connection will be applied to some devices.

APP MANAGEMENT

App Download and Installation

- 1.Tap and open Play Store on the Home screen;
- 2.Log into your Google account, search and download the App you need.

App Management

Move the App

Tap and hold the App, then slide it to a desired screen.

Remove the App from the Home screen

Tap and hold the App, then slide to X to remove it from your Home screen.

Uninstall the App

Tap and hold the App, then slide to the trash bin to uninstall the App.

Clear the Cache of the App

- 1.Go to Settings>Apps¬ifications;
- 2.Select an App>Storage>CLEAR CACHE.

INTERNET NAVIGATION

Please make sure the tablet is connected to a working Wi-Fi network before navigating the Internet.

You may use the Chrome™ browser pre-installed or use another browser downloaded

MULTIMEDIA



Connecting to the Computer

- 1.Connect your tablet to the computer with USB cable and go to Quick Settings;
- 2.Tap Android"Systems.USB charging this device>Tap for more options>Use USB to;
- 3.Select Transfer files;
- 4.Go to your computer and find your tablet Z168 to transfer files between your tablet and computer.

Tip :

Select Charging this device to charge your tablet;



Select Transfer photos(PTP)to transfer photos between the devices.

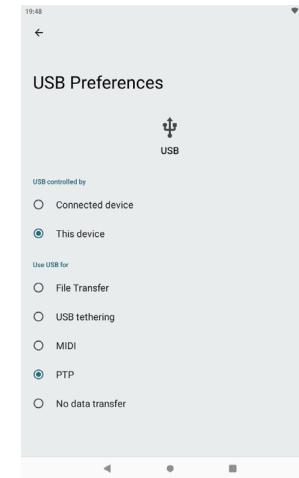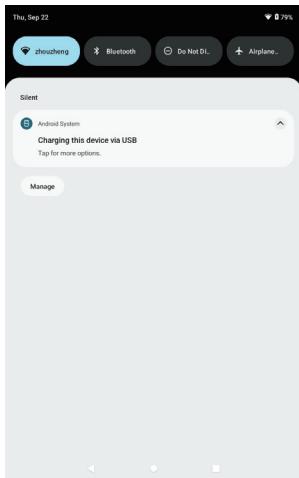**Connecting to an External Device**

1.1. Install a micro SD card into the micro SD card slot and go to Quick Settings;

2. Tap New micro SD card detected or Set Up prompt;

3. Set the micro SD card as a portable storage by selecting Use as portable storage. Enter micro SD Card storage to move files between the card and tablet.

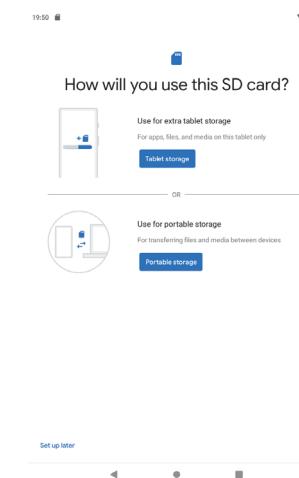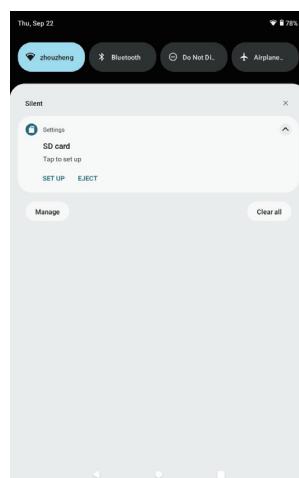

SPECIFICATION

Size	10.1"	Connection	Wi-Fi
RAM	22GB(6GB+16GB)	ROM	128GB
Ports	Type-c Port/microSD Card Slot		
Display	IPS/1280*800	Front-facing Camera	5MP
Network	2.4G/5G 802.11a/b/g/n/ac		
Back Camera	8MP	Power Supply	DC 5V 2A
Battery	8000mAh	Touch	Multi-touch
Operating System	Android		

TROUBLESHOOTING

Q1. The tablet doesn't power on .

- * Reboot your tablet after charging for 30 minutes;
- * Press the power button to check if the tablet is in the Sleep Mode;
- * Press and hold the power button for 5s to turn tablet, then reboot it;
- * Press the Reset button with a pin to reboot the tablet.

Q2. The tablet doesn't charge.

- * Make sure the USB cable is properly plugged into the charging port;
- * Try another compatible USB cable and adapter.

Q3. Error message occurs during the operation.

- * Uninstall the APP with the error message, then download and install again;
- * Press the Reset button with a pin to reboot the tablet.

 **GUARANTEE**

 Keep the card
for Guaranty

Q4.The tablet cannot be detected by the computer.

- * Make sure the tablet is powered on;
- * Try another USB cable;
- * Try another USB port on the computer;
- * Instead of Charge this device,choose Transfer files or Transfer photos (PTP) when connecting the tablet to the computer.

Q5.The tablet cannot connect to the Wi-Fi.

- * Make sure the Wi-Fi in your tablet is ON;
- * Make sure you input the correct password when connecting the Wi-Fi;
- * Restart the router;
- * Make sure there is no filter setting or device connection limitation in the setting of the router;
- * Forget the current Wi-Fi,reset the router and connect the Wi-Fi again.

Q6.The storage space of the tablet is not enough.

- * Delete the Apps you don't use;
- * Clear the cache of the Apps regularly;
- * Install an microSD card to expand the storage.

User Name		Sex		Age
Address				
Telepone		Zip		
Purchasing Address				
Retail Price		Odd Numbers		
Commodity Name & Specication		Model No		
Dealer Signature		User Signature		

Guarantee Item

1. months upon date of purchase,if there is function problem,We should offer the Same item subject to goods and packing maintain perfect.
2. 1 year upon date of purchase,we will guarantee to keep the goods in repair.(not including fittings)
3. Guarantee service is subject to normally using
4. All of damage by man-made (tear open the housing.tear off the sticker, un-normalusing), or losing this card,we will not guarantee.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Worry-free service

@

ZIOVO-UK@hotmail.com
ZIOVO-US@hotmail.com

Guaranteed

- 1.FBA Fast Shopping Guarantee
- 2.Product Lifetime Warranty Guarantee
- 3.Recycling, free guarantee for next-generation products
- 4.Lifetime Customer Support

Your email and valid order NO. will be used for
Warranty & Anything Service

Activation

ZIOVO

Scan any QR code below to get Free-technical support:



Mail QR Code



WhatsApp QR Code

If you encounter any product problems, please scan the QR code above to get professional worry-free technical support immediately

VALID FOR LIFETIME, BELONGING TO THE ZIOVO BRAND TEAM
Thank you for your reading

FCC ID : 2AW6V-M7, IC ID: 30246-S2X, ISED HVIN : ZN863A-G-MB

