


# Auusda

T1XXX SERIES USERS' MANUAL

---

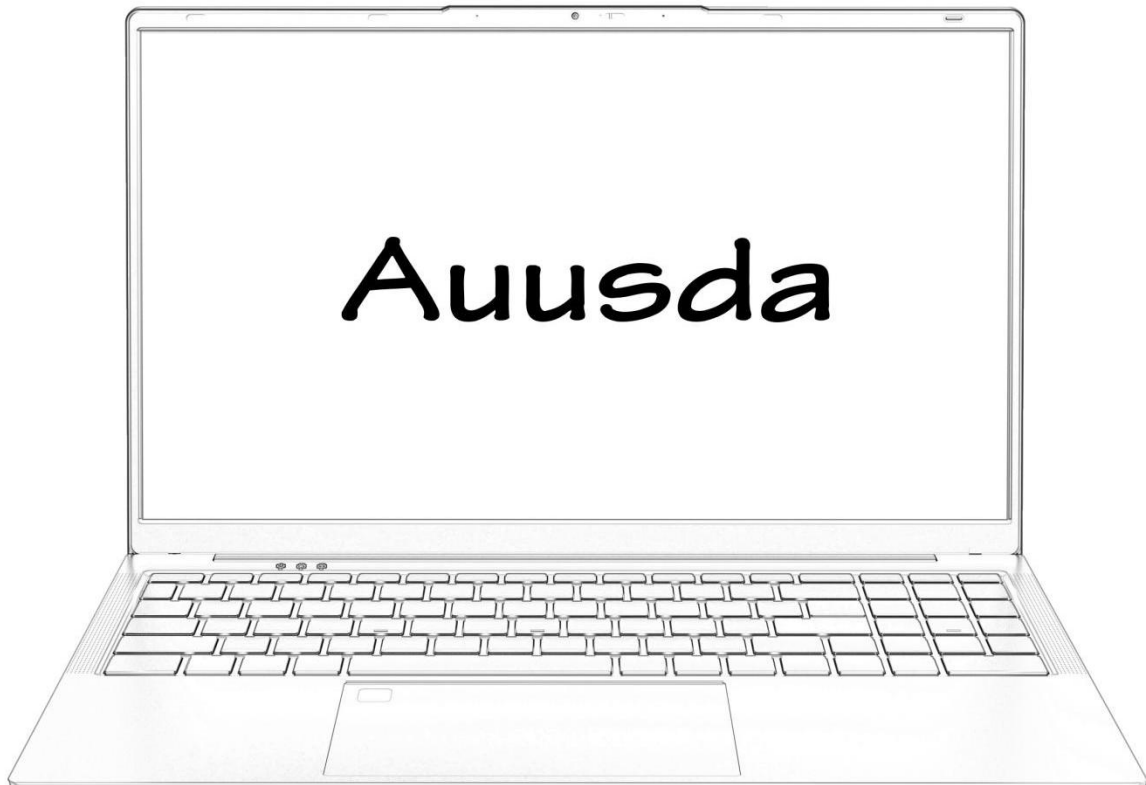

# LAPTOP

Users' Manual

This section introduces the computer hardware features to give you the basic information you will need to start using the computer.

Note: Your computer might look different from the illustrations in this topic.

## Front view

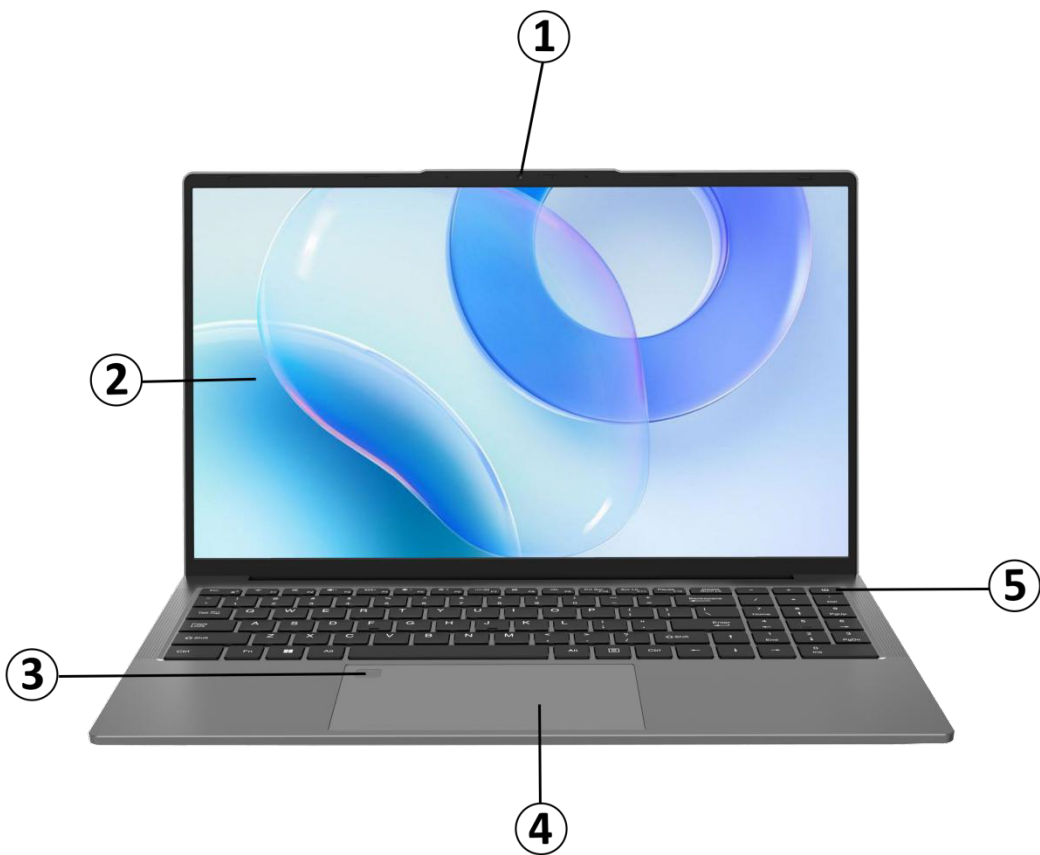


Figure 1. Front view

|                                |                |
|--------------------------------|----------------|
| 1. Camera with Privacy Shutter | 2. LCD Display |
| 3. Fingerprints                | 4. Touchpad    |
| 5. Power on/off                |                |

### 1. Camera with Privacy Shutter

Use the camera to take pictures or hold a video conference.

### 2. LCD Display

A flat surface, as part of a computer, on which pictures or words are shown.

### 3. Fingerprints

Fingerprints, as a part of the computer, are used to unlock devices or access protected information by recognizing the user's unique fingerprint.

### 4. Touchpad

Pointing, selecting, and dragging are all part of a single process that you can perform without moving your fingers from a typing position.

### 5. Power on/off

Press the power button to turn on the computer or put the computer into sleep mode.

## Right-side view



Figure 2. Right-side view

|                      |                       |
|----------------------|-----------------------|
| 1. Micro SD          | 2. USB 2.0 connector  |
| 3. USB 3.0 connector | 4. 3.5mm Audio in/out |

### 1. Micro SD

A Micro SD card is a type of memory card that can store data for various devices, such as digital cameras, smartphones, and laptop.

### 2. USB 2.0 connector

The Universal Serial Bus (USB) 2.0 connector is used for connecting USB-compatible devices, such as a USB printer or a digital camera.

**Attention:** When you attach a USB cable to the USB 2.0 connector, ensure that the USB mark is facing upward. Otherwise the connector might be damaged.

### 3. USB 3.0 connector

The Universal Serial Bus (USB) 3.0 connector is used for connecting USB-compatible devices, such as a USB printer or a digital camera.

**Attention:** When you attach a USB cable to the USB 3.0 connector, ensure that the USB mark is facing upward. Otherwise the connector might be damaged.

### 4. 3.5mm Audio in/out

Connect headphones or a headset that has a 3.5-mm (0.14-inch), 4-pole plug to the audio connector to listen to the sound from the computer.

#### Notes:

- If you are using a headset with a function switch, for example, a headset for an iPhone mobile digital device, do not press this switch while using the headset. If you press the switch, the headset microphone will be disabled, and the integrated microphones on the computer will be enabled instead.

#### DANGER



To avoid the risk of electrical shock, do not connect the charger to the Audio jack.

## Left-side view



Figure 3. Left-side view

|                             |                                    |
|-----------------------------|------------------------------------|
| 1. DC in                    | 2. Full-featured Type C (36 watts) |
| 3. HDMI Type A              | 4. USB 3.0 connector               |
| 5. Security Slot (optional) |                                    |

### 1. DC in (Power connector)

When the ac power adapter is connected to the ac power connector, the ac power adapter provides power to the computer and charges the battery.

### 2. Full-featured Type C (36 watts)

For charging, data transfer and output display.

### 3. HDMI Type A

**(Remark:** Specifically, please refer to the actual item.)

High-Definition Multimedia Interface (HDMI) connector is a digital audio and video interface that can connect a compatible digital audio device or video monitor, such as a DVD player or a high-definition digital television (HDTV).

### 4. USB 3.0 connector

The Universal Serial Bus (USB) 3.0 connector is used for connecting USB-compatible devices, such as a USB printer or a digital camera.

**Attention:** When you attach a USB cable to the USB 3.0 connector, ensure that the USB mark is facing upward. Otherwise the connector might be damaged.

### 5. Security Slot

The lock hole plus the lock of the computer can prevent the role of computer theft, give your property an additional method of protection.

## Bottom view

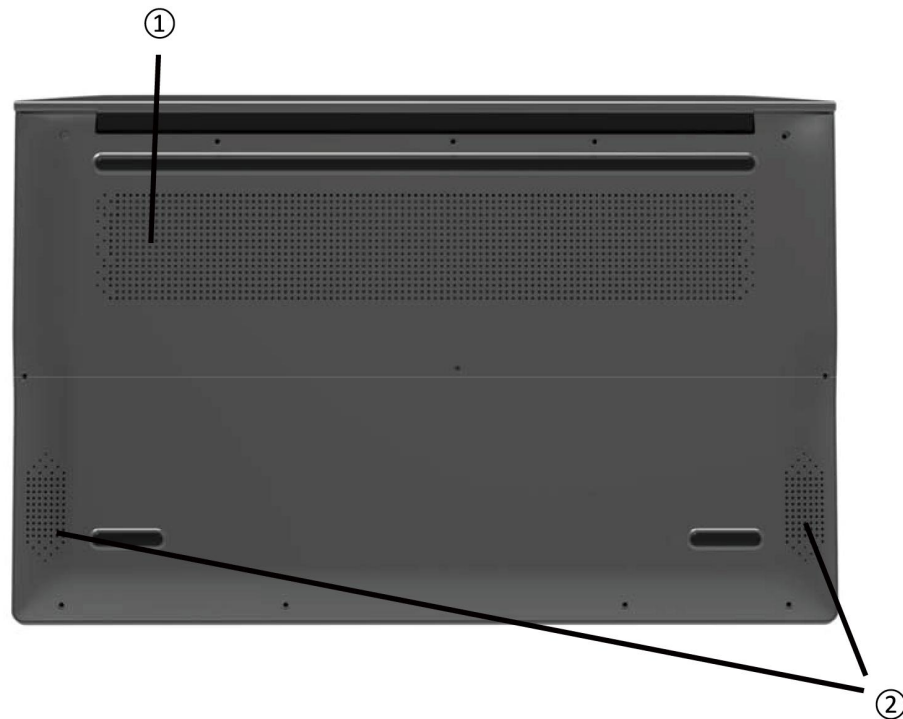


Figure 4. Bottom view

|                   |             |
|-------------------|-------------|
| 1. Cooling system | 2. Speakers |
|-------------------|-------------|

### 1. Cooling system

The cooling system in a computer laptop typically consists of fans and heat sinks, sometimes including heat pipes or heat pipe coolers. Fans draw in surrounding air and expel it to maintain safe temperatures inside the computer.

**Notes:** Do not obstruct the cooling system's air vents, as this may lead to overheating. Ensure that the

bottom and sides of the computer's vents remain clear of obstructions.

### Status indicators

The status indicators show the current status of your computer.

**Note:** Your computer might have slight variations from the following illustrations.

#### 2. Speakers

The audio signal played is converted into sound and output, allowing the user to hear a variety of sound effects.

### Left-side view



|                       |                        |
|-----------------------|------------------------|
| 1. Power indicator    | 2. Caps lock indicator |
| 3. Num lock indicator |                        |

#### 1. Power indicator

The indicator shows the power on/off status.

#### 2. Caps lock indicator

When the indicator is on, it indicates that Caps Lock mode is enabled. You can type all alphabetic characters (A-Z) in upper case directly.

### 3. Num lock indicator

When the indicator is on, it indicates that numeric keyboard is on, or else, the numeric keyboard is off.

### Product Specification

|                  |                                                                             |
|------------------|-----------------------------------------------------------------------------|
| <b>Model No.</b> | <b>T141J (Intel Jasper Lake platform)</b>                                   |
| <b>LCD</b>       | 14.1 inch 1920*1080 IPS                                                     |
| <b>Processor</b> | Intel® Celeron® Processor N5105 4M Cache, up to 2.90 GHz                    |
| <b>GPU</b>       | Intel® UHD Graphics 800MHz                                                  |
| <b>RAM</b>       | DDR4 8GB/16GB/32GB                                                          |
| <b>Storage</b>   | M.2 SATA3.0/NVMe 256GB/512GB/1TB SSD                                        |
| <b>Camera</b>    | 0.3M/1.0MP/2.0MP with Privacy Shutter                                       |
| <b>Speaker</b>   | Stereo Speakers 8R/1.0W*4                                                   |
| <b>WIFI</b>      | 802.11ac/b/g/n, 2.4/5 GHz Dual-band                                         |
| <b>Bluetooth</b> | Bluetooth 4.2/5.0                                                           |
| <b>I/O Ports</b> | DC Jack*1, Type C*1, USB 3.0*2, USB 2.0*1, HDMI*1, Audio Jack*1, Micro SD*1 |
| <b>Battery</b>   | Lithium-Ion Polymer Battery 7.7V 6000mAh 46.2Wh                             |
| <b>OS</b>        | Windows 11 Pro                                                              |
| <b>Charger</b>   | 3.5mm x 1.35mm round jack, DC 12V/3 A                                       |

|                  |                                                                                                                  |
|------------------|------------------------------------------------------------------------------------------------------------------|
| <b>Model No.</b> | <b>T156A (Intel Alder Lake-N platform)</b>                                                                       |
| <b>LCD</b>       | 15.6 inch 1920*1080 IPS                                                                                          |
| <b>Processor</b> | Intel® Celeron® N95 Processor 6M Cache, up to 3.40 GHz<br>Intel® Celeron® N97 Processor 6M Cache, up to 3.60 GHz |
| <b>GPU</b>       | Intel® UHD Graphics 1.20 GHz                                                                                     |
| <b>RAM</b>       | DDR4 8GB/16GB/32GB                                                                                               |
| <b>Storage</b>   | M.2 SATA3.0/NVMe 256GB/512GB/1TB SSD                                                                             |
| <b>Camera</b>    | 0.3M/1.0MP/2.0MP with Privacy Shutter                                                                            |
| <b>Speaker</b>   | Stereo Speakers 8R/1.0W*2                                                                                        |
| <b>WIFI</b>      | 802.11ac/b/g/n, 2.4/5 GHz Dual-band                                                                              |
| <b>Bluetooth</b> | Bluetooth 4.2/5.0                                                                                                |
| <b>I/O Ports</b> | DC Jack*1, Type C*1, USB 3.0*2, USB 2.0*1, HDMI*1, Audio Jack*1, Micro SD*1                                      |
| <b>Battery</b>   | Lithium-Ion Polymer Battery 7.7V 8000mAh 61.6Wh                                                                  |
| <b>OS</b>        | Windows 11 Pro                                                                                                   |
| <b>Charger</b>   | 3.5mm x 1.35mm round jack, DC 12V/3 A                                                                            |

|                  |                                                                                          |
|------------------|------------------------------------------------------------------------------------------|
| <b>Model No.</b> | <b>T1568/T1567 (AMD Ryzen 7 )</b>                                                        |
| <b>LCD</b>       | 15.6 inch 1920*1080 IPS                                                                  |
| <b>Processor</b> | AMD Ryzen™ 7 5825U Processor up to 4.5 GHz<br>AMD Ryzen™ 7 5700U Processor up to 4.3 GHz |
| <b>GPU</b>       | AMD Radeon™ Graphics 2.0 GHz                                                             |
| <b>RAM</b>       | DDR4 8GB/16GB/32GB <b>Dual channel SODIMM*2</b>                                          |
| <b>Storage</b>   | M.2 SATA3.0/NVMe 256GB/512GB/1TB SSD <b>NVME SSD slot*2</b>                              |
| <b>Camera</b>    | 0.3M/1.0MP/2.0MP with Privacy Shutter                                                    |
| <b>Speaker</b>   | Stereo Speakers 8R/1.0W*4                                                                |
| <b>WIFI</b>      | 802.11ac/b/g/n, 2.4/5 GHz Dual-band                                                      |
| <b>Bluetooth</b> | Bluetooth 4.2/5.0                                                                        |
| <b>I/O Ports</b> | DC Jack*1, Type C*1, USB 3.0*3, HDMI*1, Audio Jack*1, Micro SD*1                         |
| <b>Battery</b>   | Lithium-Ion Polymer Battery 11.4V 5000mAh 57Wh                                           |
| <b>OS</b>        | Windows 11 Pro                                                                           |
| <b>Charger</b>   | 3.5mm x 1.35mm round jack, DC 19V/3.42 A                                                 |

|                  |                                                                      |
|------------------|----------------------------------------------------------------------|
| <b>Model No.</b> | <b>T160R ( AMD Ryzen 3)</b>                                          |
| <b>LCD</b>       | 16 inch 1920*1200 IPS                                                |
| <b>Processor</b> | AMD Ryzen™ 3 3250U Up to 3.5 GHz<br>AMD Ryzen™ 3 3200U Up to 3.4 GHz |
| <b>GPU</b>       | Radeon™ Vega 6 Graphics                                              |
| <b>RAM</b>       | DDR4 8GB/16GB/32GB <b>Dual channel SODIMM*2</b>                      |
| <b>Storage</b>   | M.2 SATA3.0 256GB/512GB/1TB SSD <b>SATA SSD slot*1</b>               |
| <b>Camera</b>    | 0.3M/1.0MP/2.0MP with Privacy Shutter                                |
| <b>Speaker</b>   | Stereo Speakers 8R/1.0W*4                                            |
| <b>WIFI</b>      | 802.11ac/b/g/n, 2.4/5 GHz Dual-band                                  |
| <b>Bluetooth</b> | Bluetooth 4.2/5.0                                                    |
| <b>I/O Ports</b> | DC Jack*1, Type C*1, USB 3.0*3, HDMI*1, Audio Jack*1, Micro SD*1     |
| <b>Battery</b>   | Lithium-Ion Polymer Battery 11.4V 5000mAh 57Wh                       |
| <b>OS</b>        | Windows 11 Pro                                                       |
| <b>Charger</b>   | 3.5mm x 1.35mm round jack, DC 19V/3.42A                              |

|                  |                                                                  |
|------------------|------------------------------------------------------------------|
| <b>Model No.</b> | <b>T160H ( Intel 13<sup>th</sup> Gen Core I7 )</b>               |
| <b>LCD</b>       | 16 inch 1920*1200 IPS                                            |
| <b>Processor</b> | Intel® Core™ i7-13620H Processor 24M Cache, up to 4.90 GHz       |
| <b>GPU</b>       | Intel® UHD Graphics for 13th Gen Intel® Processors               |
| <b>RAM</b>       | DDR4 8GB/16GB/32GB/64GB <b>Dual channel SODIMM*2</b>             |
| <b>Storage</b>   | M.2 SATA3.0/NVMe 256GB/512GB/1TB SSD <b>NVME SSD slot*2</b>      |
| <b>Camera</b>    | 0.3M/1.0MP/2.0MP with Privacy Shutter                            |
| <b>Speaker</b>   | Stereo Speakers 8R/1.0W*4                                        |
| <b>WIFI</b>      | 802.11ac/b/g/n, 2.4/5 GHz Dual-band                              |
| <b>Bluetooth</b> | Bluetooth 4.2/5.0                                                |
| <b>I/O Ports</b> | DC Jack*1, Type C*1, USB 3.0*3, HDMI*1, Audio Jack*1, Micro SD*1 |
| <b>Battery</b>   | Lithium-Ion Polymer Battery 11.4V 5000mAh 57Wh                   |
| <b>OS</b>        | Windows 11 Pro                                                   |
| <b>Charger</b>   | 3.5mm x 1.35mm round jack, DC 19V/3.42A                          |

### Remarks:

\*The configuration is subject to the actual product, and the instruction manual is for reference only. \*

### WARRANTY CARD

|                     |  |               |  |
|---------------------|--|---------------|--|
| User Information    |  |               |  |
| User Name           |  | Contact phone |  |
| Mailing Address     |  |               |  |
| Sales Information   |  |               |  |
| Distributor Address |  |               |  |
| Product Model       |  |               |  |
| Contact phone       |  | Sale Date     |  |

|                              |               |                |                        |
|------------------------------|---------------|----------------|------------------------|
| Commodity Maintenance Record |               |                |                        |
| Date                         | The diagnosis | Fault handling | Signature of repairman |
|                              |               |                |                        |
|                              |               |                |                        |
|                              |               |                |                        |

### Guarantee item

7 days upon date of purchase, if there is function problem, we should offer the same item subject to goods and packing maintain perfect.

One year upon date of purchase, we will guarantee to keep the goods in repair (not including fittings).

Guarantee service is subject to normally using.

There is no warranty for any man-made damage (shell disassembly, hard disk replacement, system upgrade, abnormal use).

## IMPORTANT NOTICE

**To reduce the possibility of injuries or accidents of the computer, please be aware of the following mistakes.**

- Do not obstruct the air vents for heat dissipation.
- Do not press or touch the display panel.
- Do not subject the computer to magnetic fields.
- Do not place on uneven or unstable work surface.
- Do not expose the computer to rain or moisture.
- DO NOT slam your laptop shut.
- Do not expose to direct sunlight.
- Do not use or store in extreme temperatures.
- DO NOT spray water or any other cleaning fluids directly on the display.
- Do not place the laptop near fire or other sources of heat.
- Do not tamper with the batteries. Keep them away from children.
- If you are traveling with your computer, remember to carry it in a hand luggage.

For any question, please contact

[pcservice.help@outlook.com](mailto:pcservice.help@outlook.com)

Please contact us with your order number to get a free one-year warranty extension.

## **AVIS IMPORTANT** (Français)

**Pour réduire les risques de blessures ou d'accidents liés à l'ordinateur, veuillez prendre en compte les erreurs suivantes**

- Ne pas obstruer les événements de ventilation pour la dissipation de la chaleur.
- Ne pas appuyer sur ni toucher le panneau d'affichage.
- Ne pas exposer l'ordinateur à des champs magnétiques.
- Ne pas le placer sur une surface de travail irrégulière ou instable.
- Ne pas l'exposer à la pluie ou à l'humidité.
- NE PAS claquer violemment votre ordinateur portable pour le fermer.
- Ne pas l'exposer à une lumière directe du soleil.
- Ne pas l'utiliser ou le stocker à des températures extrêmes.
- NE PAS vaporiser d'eau ni tout autre liquide de nettoyage directement sur l'écran.
- Ne pas placer l'ordinateur portable près d'un feu ou d'autres sources de chaleur.
- Ne pas altérer les piles. Maintenez-les hors de la portée des enfants.
- Si vous voyagez avec votre ordinateur, pensez à le transporter dans un bagage à main.

Pour toute question, veuillez contacter

[pcservice.help@outlook.com](mailto:pcservice.help@outlook.com)

Veuillez nous contacter avec votre numéro de commande pour obtenir une extension de garantie gratuite d'un an.

## NOTICIA IMPORTANTE (Española)

**Para reducir la posibilidad de lesiones o accidentes de la computadora, tenga en cuenta los siguientes errores.**

- No obstruya las aberturas de ventilación para la disipación de calor.
- No presione ni toque el panel de visualización.
- No exponga la computadora a campos magnéticos.
- No la coloque en una superficie de trabajo desigual o inestable.
- No exponga la computadora a la lluvia o la humedad.
- NO cierre la tapa de su laptop de golpe.
- No la exponga a la luz solar directa.
- No la use ni la guarde a temperaturas extremas.
- NO rocíe agua ni ningún otro líquido limpiador directamente en la pantalla.
- No coloque la computadora portátil cerca del fuego u otras fuentes de calor.
- No manipule las baterías. Manténgalas fuera del alcance de los niños.
- Si viaja con su computadora, recuerde llevarla en el equipaje de mano.

Para cualquier pregunta, por favor contacte

[pcservice.help@outlook.com](mailto:pcservice.help@outlook.com)

Comuníquese con nosotros con su número de pedido para obtener una extensión de garantía gratuita por un año.

## AVVISO IMPORTANTE (Italiano)

**Per ridurre la possibilità di lesioni o incidenti del computer, tenere presente i seguenti errori.**

- Non ostruire le prese d'aria per la dissipazione del calore.
- Non premere o toccare il pannello del display.
- Non esporre il computer a campi magnetici.
- Non posizionare su una superficie di lavoro irregolare o instabile.
- Non esporre il computer alla pioggia o all'umidità.
- NON chiudere il laptop sbattendolo.
- Non esporre alla luce solare diretta.
- Non utilizzare o conservare a temperature estreme.
- NON spruzzare acqua o altri liquidi detergenti direttamente sul display.
- Non posizionare il portatile vicino al fuoco o ad altre fonti di calore.
- Non manomettere le batterie. Tenerli lontani dalla portata dei bambini.
- Se viaggi con il tuo computer, ricordati di portarlo nel bagaglio a mano.

Per qualsiasi domanda, si prega di contattare

[pcservice.help@outlook.com](mailto:pcservice.help@outlook.com)

Vi preghiamo di contattarci con il numero dell'ordine per ottenere un'estensione gratuita della garanzia di un anno.

## WICHTIGER HINWEIS (Deutsch)

**Um die Möglichkeit von Verletzungen oder Unfällen des Computers zu verringern, beachten Sie bitte die folgenden Fehler.**

- Blockieren Sie nicht die Lüftungsschlitze zur Wärmeableitung.
- Drücken oder berühren Sie nicht das Anzeigefeld.
- Setzen Sie den Computer keinen magnetischen Feldern aus.
- Nicht auf unebene oder instabile Arbeitsflächen stellen.
- Setzen Sie den Computer weder Regen noch Feuchtigkeit aus.
- Schlagen Sie Ihr laptop NICHT zu.
- Nicht direktem Sonnenlicht aussetzen.
- Nicht bei extremen Temperaturen verwenden oder lagern.
- Sprühen Sie KEIN Wasser oder andere Reinigungsflüssigkeiten direkt auf das Display.
- Stellen Sie den Laptop nicht in der Nähe von Feuer oder anderen Wärmequellen auf.
- Nehmen Sie keine Manipulationen an den Batterien vor. Halten Sie sie von Kindern fern.
- Wenn Sie mit Ihrem Computer reisen, denken Sie daran, ihn im Handgepäck mitzuführen.

Bei Fragen wenden Sie sich bitte an

[pcservice.help@outlook.com](mailto:pcservice.help@outlook.com)

Bitte kontaktieren Sie uns unter Angabe Ihrer Bestellnummer, um eine kostenlose Garantieverlängerung um ein Jahr zu erhalten.

## 重要なお知らせ(日本語)

コンピュータの怪我や事故の可能性を減らすために、次の間違いに注意してください。

- 放熱のため通風口をふさがないでください。
- 表示パネルを押したり触れたりしないでください。
- コンピューターを磁場にさらさないでください。
- 平らでない不安定な作業台の上に置かないでください。
- コンピューターを雨や湿気にさらさないでください。
- ノートを勢いよく閉じないでください。
- 直射日光にさらさないでください。
- 極端な温度で使用または保管しないでください。
- 水やその他の洗浄液をディスプレイに直接スプレーしないでください。
- ラップトップを火やその他の熱源の近くに置かないでください。
- 電池をいじらないでください。 お子様の手の届かない場所に保管してください。
- コンピューターを持ち運ぶ場合は、必ず手荷物に入れて持ち運んでください。

ご質問がございましたら、次のアドレスまでお問い合わせください

[pcservice.help@outlook.com](mailto:pcservice.help@outlook.com)

無料の1年間保証延長を受けるには、注文番号とともにお問い合わせくだ

## (عربي) هام إشعار

التالية الأخطاء إلى الانتباه يرجى للكمبيوتر، تحدث قد التي الحوادث أو الإصابات احتمالية لتقليل.

- الحرارة لتبديد التهوية فتحات تعوق لا.
- العرض لوحة تلمس أو تضغط لا.
- المغناطيسية للحقول الكمبيوتر تعرض لا.
- مستقر غير أو مستوي غير عمل سطح على تضعه لا.
- الرطوبة أو للمطر الكمبيوتر تعرض لا.
- بقوة الكمبيوتر تثقف لا.
- المباشرة الشمس لأشعة تعرضه لا.
- متطرفة حرارة درجات في تخزينه أو تستخدم لا.
- الشاشة على مباشرة تنظيف سوائل أي أو الماء ترش لا.
- أخرى حرارة مصادر أو النار من بالقرب المحمول الكمبيوتر تضع لا.
- الأطفال متناول عن بعيدة ابقها. البطاريات مع تتلاعب لا.
- يد حقيبة في تحمله أن تذكر بك، الخاص الكمبيوتر مع رحلة في كنت إذا.

الإلكتروني البريد عبر التواصل يرجى سؤال،

[pcservice.help@outlook.com](mailto:pcservice.help@outlook.com)

واحد عام لمدة مجاناً للضمان تمديد على للحصول طلبك رقم مع بنا الاتصال الرجاء

## **ВАЖНОЕ УВЕДОМЛЕНИЕ (русский язык)**

**Чтобы снизить возможность травм или несчастных случаев с компьютером, пожалуйста, будьте внимательны к следующим ошибкам.**

- Не загромождайте вентиляционные отверстия для отвода тепла.
- Не нажимайте и не касайтесь дисплея.
- Не подвергайте компьютер воздействию магнитных полей.
- Не ставьте на неровную или неустойчивую поверхность.
- Не подвергайте компьютер воздействию дождя или влаги.
- НЕ захлопывайте крышку ноутбука сильно.
- Не подвергайте воздействию прямых солнечных лучей.
- Не используйте и не храните в экстремальных температурах.
- НЕ распыляйте воду или другие чистящие жидкости непосредственно на экран.
- Не ставьте ноутбук рядом с огнем или другими источниками тепла.
- Не вмешивайтесь в батареи. Держите их вдали от детей.
- Если вы путешествуете с компьютером, не забудьте носить его в ручной клади.

Для любых вопросов, пожалуйста, свяжитесь с нами по следующим адресам:

[pcservice.help@outlook.com](mailto:pcservice.help@outlook.com)

Пожалуйста, свяжитесь с нами, указав номер вашего заказа, чтобы получить бесплатное продление гарантии на один год.

## **WAŻNE OGŁOSZENIE (Polski)**

**Aby zminimalizować możliwość urazów lub wypadków związanych z komputerem, prosimy pamiętać o następujących błędach.**

- Nie przysłaniaj otworów wentylacyjnych dla odprowadzania ciepła.
- Nie naciskaj ani nie dotykaj panelu wyświetlacza.
- Nie wystawiaj komputera na działanie pól magnetycznych.
- Nie umieszczaj na nierównej lub niestabilnej powierzchni roboczej.
- Nie wystawiaj komputera na deszcz lub wilgoć.
- NIE zatrzaskuj mocno pokrywy laptopa.
- Nie wystawiaj na bezpośrednie działanie światła słonecznego.
- Nie używaj ani nie przechowuj w skrajnych temperaturach.
- NIE rozpylaj wody ani innych płynów do czyszczenia bezpośrednio na ekran.
- Nie umieszczaj laptopa blisko ognia ani innych źródeł ciepła.
- Nie ingeruj w baterie. Trzymaj je z dala od dzieci.
- Jeśli podróżujesz z komputerem, pamiętaj, aby nosić go w bagażu podręcznym.

W przypadku jakichkolwiek pytań, proszę skontaktować się z nami pod poniższymi adresami:

[pcservice.help@outlook.com](mailto:pcservice.help@outlook.com)

Proszę skontaktować się z nami podając numer zamówienia, aby otrzymać bezpłatne przedłużenie gwarancji o jeden rok.

## **DŮLEŽITÉ UPOZORNĚNÍ (čeština)**

**Aby byla minimalizována možnost zranění nebo nehod s počítačem, prosím, uvědomte si následující chyby.**

- Není dovoleno zakrývat ventilační otvory pro odvod tepla.
- Nenutit nebo nedotýkat se displeje.
- Nepodléhejte počítač působení magnetických polí.
- Nenkládejte na nerovný nebo nestabilní pracovní povrch.
- Nepřevádějte počítač dešti nebo vlhkosti.
- NEZAVÍREJTE laptop silně.
- Nenexponujte přímému slunečnímu záření.
- Nepoužívejte nebo neukládejte při extrémních teplotách.
- NEPOSTŘÍKUJTE vodu nebo jiné čisticí prostředky přímo na displej.
- Nenastavujte laptop blízko ohně nebo jiných zdrojů tepla.
- Nerušte s bateriemi. Uchovávejte je mimo dosah dětí.
- Pokud cestujete s počítačem, pamatujte, abyste ho nosili v ruce.

Pro jakékoliv otázky prosím kontaktujte nás na následujících adresách:

[pcservice.help@outlook.com](mailto:pcservice.help@outlook.com)

Pro získání bezplatného prodloužení záruky o jeden rok nás prosím kontaktujte s číslem vaší objednávky.

## **BELANGRIJKE MEDEDELING (Nederlands)**

**Om de kans op verwondingen of ongelukken met de computer te verminderen, wees u bewust van de volgende fouten.**

- Blokkeer de luchtopeningen niet voor warmteafvoer.
- Druk niet op of raak het beeldscherm niet aan.
- Stel de computer niet bloot aan magnetische velden.
- Plaats het niet op een ongelijke of instabiele werkplek.
- Stel de computer niet bloot aan regen of vocht.
- SLA UW laptop niet dicht.
- Stel het niet bloot aan direct zonlicht.
- Gebruik of bewaar het niet bij extreme temperaturen.
- SPUIT GEEN water of andere reinigingsvloeistoffen rechtstreeks op het scherm.
- Plaats de laptop niet in de buurt van vuur of andere warmtebronnen.
- Knoei niet met de batterijen. Houd ze buiten het bereik van kinderen.
- Als u met uw computer reist, vergeet dan niet om het in uw handbagage te dragen.

Voor elke vraag kunt u contact met ons opnemen via de volgende adressen:

[pcservice.help@outlook.com](mailto:pcservice.help@outlook.com)

Neem contact met ons op met uw bestelnummer om een gratis verlenging van de garantie met één jaar te ontvangen.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### FCC Radiation Exposure Statement

This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. The device can be used in portable exposure condition without restriction.