

120mm

SAFETY INFORMATION

**Read the following recommendations before using the Bluetooth speaker:**

- Don't try to disassemble the product as it may get damaged and void the warranty.
- Don't use intensive chemical products or detergent to clean the product.
- Don't scratch the surface with sharp objects.

FCC NOTICE

This device complies with Part 15 of the FCC Rules. Operation is subject to the two following conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

TECHNICAL SUPPORT

Please do not attempt to fix the product by yourself. If you are experiencing any problems with the product, please do not return it to the store you bought it from. You can contact our technical support representatives and they will assist you with any questions you might have.

For assistance operating your product, please consult the User's Manual first, then feel free to contact Mercury Innovations technical support:

**Mercury Innovations**  
45 Broadway, 3rd Floor  
New York, New York 10006  
www.mercuryinnovations.com  
E-mail: support@mercuryinnovations.com

MERKURY  
INNOVATIONS

© 2025 Mercury Innovations LLC  
To explore our full selection of products, visit us at: [www.mercuryinnovations.com](http://www.mercuryinnovations.com)  
The illustrated product and specifications may differ slightly from that supplied.  
The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc.  
All other trademarks and trade names are those of their respective owners.


Made in China.

MERKURY  
INNOVATIONS

Bluetooth®

ROVER

OUTDOOR WIRELESS SPEAKER



IPX5 RATED  
WATER RESISTANT

See details inside  
before use.

USER MANUAL MI-BT136

Includes: RaveRover Speaker, USB-C Charging Cable, User Manual

If you have any questions or problems email: [support@mercuryinnovations.com](mailto:support@mercuryinnovations.com)

[www.mercuryinnovations.com](http://www.mercuryinnovations.com)

\* IMPORTANT: Please read before using this product

155mm

ON-BOARD CONTROLS (TOP OF SPEAKER)

1

2

3

4

5

1. Volume Decrease/Previous Track

2. Volume Increase/Next Track

3. Play/Pause

4. Audio Mode Select Button:  
BT/USB-A Drive, TF-Card/Aux-In.

5. Power On/Off, Answer/Reset Call

SPEAKER INPUTS (BACK OF SPEAKER)

1

2

3

4

1. Micro-SD Card Slot

2. AUX Audio Input Port

3. USB-A Drive Input Port

4. USB-C Charging Port


 
 
CHARGING

- Locate the waterproof silicone plug on the back of the speaker and open it.
- Plug the included USB charging cable into the USB-C port, and connect the other end of the cable to any compatible 5V USB adapter charger or wall outlet.
- When charging, the small LED indicator (on the top of the speaker) will glow red - when fully charged, the LED indicator will turn off.
- Charging time is approximately 3-5 hours\*.

**NOTE:** Fully charge the speaker before using for the first time.

\*Depends on individual use and may be slightly more or less than the time specified.

TURN ON/OFF

- Press & hold the power button “” for 2-4 seconds; the speaker will turn on and emit a tone and the LED light will turn on.
- Press & hold the power button “” for 2-4 seconds; the speaker will turn off and the LED light will turn off.
- Press & hold the power button “” for 8 seconds; the speaker automatically resets and powers off. (use only if the speaker crashes and will not connect properly to your Bluetooth® enabled device).

 
 
 
 
PAIR & CONNECT WITH A NEW DEVICE

- Turn the speaker on; after a few seconds it will automatically enter into pairing mode and the LED indicator light will quickly flash blue.
- On your Bluetooth® enabled device, navigate to the Bluetooth® settings menu, turn on the Bluetooth® feature and search for new devices. Wait a few seconds and select “**MERKURY BT136**”. The speaker will emit a tone when successfully paired and the LED indicator light will remain blue.
- To disconnect Bluetooth® connection, press once again the button “**M**” and switch playing mode.

**NOTE:** If your device's Bluetooth® version is below version 2.1, you may need to enter the password “0000”.

OPERATION

WIRELESS SPEAKER

- Connect your device to the speaker via Bluetooth® (see “Pair & Connect with a New Device”).
- Open your favorite music app and press play.
- Control the music, track & volume from your device, or control them from the controls on the speaker.
- Press the “” button once to play/pause music.
- When a phone call comes in: press “” button once to answer/end the call or press & hold for 2 seconds to reject the incoming call.
- Press “” or “” buttons to raise/lower the volume on the speaker. Press & hold to skip to the next/previous track.
- All audio, including music, games, videos, and notifications will be routed through the speaker.

**NOTE:** Volume levels on your device and on the speaker are controlled separately.

- USB

- Insert USB Flash Drive into USB-A port, any supported audio files found on the USB Flash Drive will begin to play automatically through the speaker. (USB Flash Drive not included).
- MICRO SD CARD

- Insert Micro-SD Card into Micro-SD Card slot, any supported audio files found on the Micro-SD Card will begin to play automatically through the speaker. (Micro-SD Card not included).
- AUX MODE

- Connect Device to speaker via 3.5mm AUX cable.
- Select music from your device and control the music, track & volume from your device, or control them from the controls on the speaker.
- SWITCH PLAYING MODE

- Press once “**M**” button to switch between the available audio input sources: BT, USB-A Drive, TF-Card, Aux-In.

RECONNECT BLUETOOTH®

- You only need to pair your Bluetooth® device with the speaker once.
- With your previously paired device's Bluetooth® turned on and in range, power on the speaker.
- The speaker will automatically reconnect to the last Bluetooth® device it was connected to.
- If you have a previously paired device that does not auto-reconnect, navigate to the Bluetooth® settings menu on your device and select “**MERKURY BT136**” from the list of paired Bluetooth® devices and press “**forget this device**” and then proceed to follow the instructions on how to pair the speaker to a Bluetooth® enabled device.

TROUBLESHOOTING

No power	Recharge your speaker using the included USB charging cable. Try using a different USB cable.
Music is not playing over Bluetooth®	Make sure your Bluetooth® device has A2DP profile. Check if both devices are paired and connected over Bluetooth®. Restart the speaker to reconnect your Bluetooth® device.
Bluetooth® device will not reconnect with the speaker	Navigate to your Bluetooth® settings menu on your Bluetooth® device, tap “ <b>MERKURY BT136</b> ,” and select “Forget.” Now follow the steps to pair your device again.

IMPORTANT WATERPROOF/SAFETY INFORMATION

- **IMPORTANT: DO NOT submerge the speaker in water. This device is not intended to function properly after being underwater.**
- This speaker is rated IPX5, which means the speaker can be splashed with water or left in the rain (but not submerged in water). If the speaker gets wet, it is recommended that you dry the speaker completely before using it again.
- While the speaker has a silicone encasing for protection, it does NOT mean that the speaker is drop-proof or indestructible. Speaker may be damaged when dropped from any height.
- All actions done with the speaker are done at your own risk. While the speaker is weather-proof and has a protective case, it is not a guarantee for complete damage protection.

Speaker Specifications:

Waterproof Level: IPX5  
Total Power Output: 5W  
Driver Size: 52 mm  
Freq. Response: 60Hz – 20KHz

Bluetooth® Information:

Bluetooth®: V5.3  
Operating Distance: 30 feet  
BT IC Model/Version:  
AC6965A4, V5.3

Battery Information:

Battery Capacity: 1200 mAh, Input: 5V/1A  
Charging Time: Approx. 3-5 Hours\*  
Playback Time: Up to 8 Hours\*  
\*Depends on individual use

**FCC Caution:**

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.

-- Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.