


Kubota Tractor Corp. WorkSmart AutoSteer Label Location



- ECU label is placed into the rectangular box directly under the connector on the waffled mounting panel.

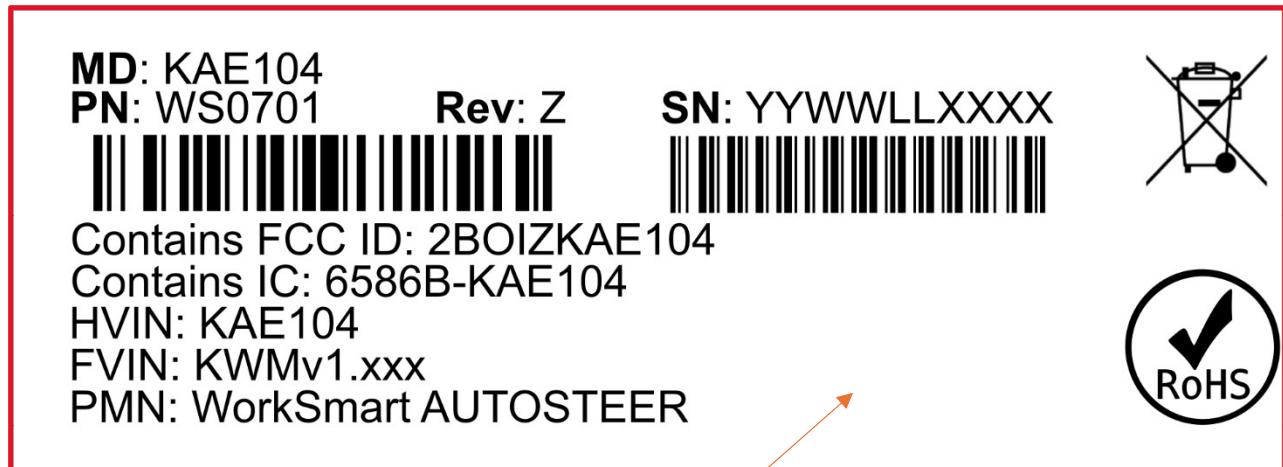