

SPL1204 User Manual

2025.3.14
Revision 1.0

List

1	Status LED	3
2	Insert sim card	4
3	Power on device and unlock	5
4	Device charging	6
5	Debug and update FW	7

1 Status LED



Signal Name	Function		Shipping Mode	Hibernate Mode	Active Mode
LED_ Green	Cell LED		off	off	on or blink
LED_ Orange	GPS LED		off	off	on or blink
LED_ Red	Lock LED		off	off	on or blink
LED_ Yellow	BLE LED		TBD	TBD	TBD
	Charge LED	Red	off	on	on or blink
LED_ R/G/B		Green	off	on	on or blink
		Blue	off	on	on or blink


2 Insert sim card

- A. Remove the two screws on the side of the device.
- B. Use the pickup needle to push out the sim card tray.
- C. Insert the 4ff-sim card into the sim card tray
- D. Push the sim card.
- E. Lock the screws in the direction of the plastic lid.



3 Power on device and unlock

- A. Power on the device, the device is in shipping mode, you can use pick up needle to press the following button for about 3s, and the battery led of the device will be on.
- B. Use the RD-ID card to unlock, the Lock led will be flashing on 0.5s, and there will be a 'ka~' sound, then lock led will be on.
- C. You need to pull the lock line out.
- D. If you want to lock, the lock line needs to be pulled in, and there will be a 'ka~' sound, the Lock led will be off.

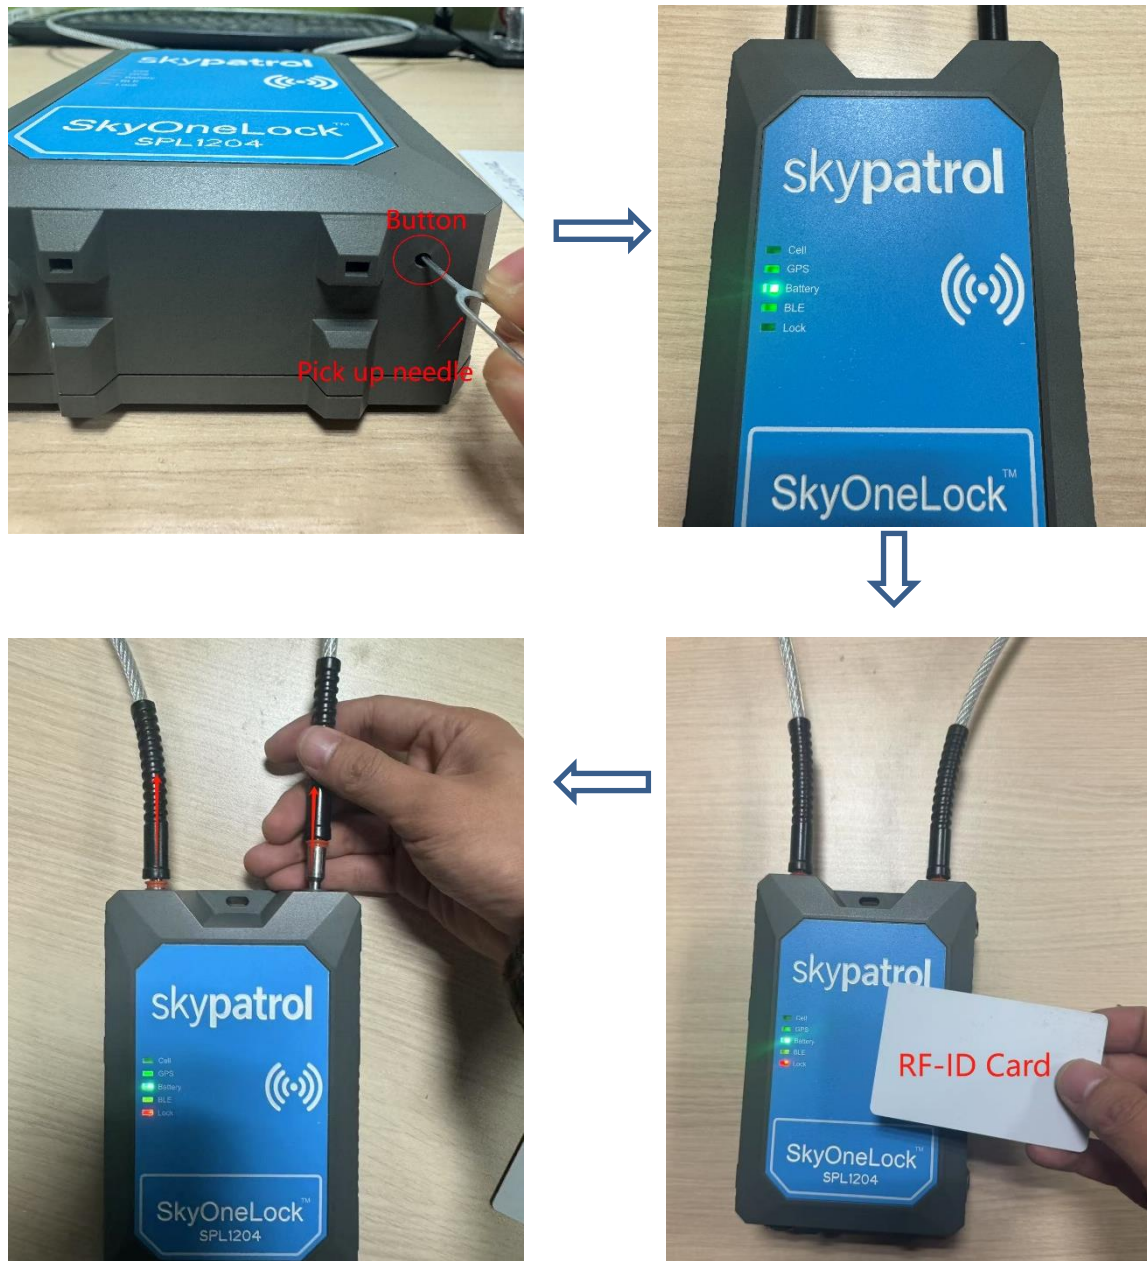

4 Device charging

- A. Charging by using the 12V power adapter supplied by ATEL.
- B. When charging, the battery led blinks.



5 Debug and update FW

- A. Remove the two screws on the side of the device
- B. Plug the ATEL supply debug cable into TYPE-C connector.



Safety Information

FCC Regulations:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference
(2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

FCC RF Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. To comply with FCC RF Exposure compliance requirements, this grant is applicable to only Mobile Configurations. The antennas used for the transmitter must be installed to provide a separation distance of at least 20cm from all persons and must not be co - located or operating in conjunction with any other antenna or transmitter.