

# 蓝牙耳机通用说明书

## 适用多款车型

序号	实现功能	耳机状态	操作	提示音	指示灯
1	开机	关机	长按  键 2S	蓝牙模式	蓝红交替闪烁
2	关机	开机	长按  键 3S	关机	指示灯灭
3	进入配对	关机	开机后自动进入搜索状态	蓝牙模式	红蓝交替闪烁
4	配对成功	配对	/	“叮咚”	蓝灯常亮
5	与手机连接 断开	连接	/	“咚”	红蓝交替闪烁
6	开机回连	关机	开机后自动回连先前配对成功设备	“叮咚”	蓝灯常亮
7	远距离断开 回连	远距离断开	耳机离手机超出连接范围，自动断开蓝牙，红蓝灯交替闪，在约1分钟内耳机靠近手机则自动回连，不然1分钟后自动关机	“叮咚”	蓝灯常亮
8	音量调整	播放音乐	长按音量   键	最大/最小音量： 提示“滴滴”	/
9	上一曲	音乐播放中	短按  / - 键	/	/
10	下一曲	音乐播放中	短按 +/  键	/	/
11	音乐暂停/播放	音乐播放中	短按  /  键	/	/
12	电话提醒	来电话		铃铃铃...	/
13	接听电话	来电话	短按  键	/	/
14	拒接来电	来电话	长按  键	/	/
15	末码重接	来电话	双击  键	/	/
16	挂断电话	来电话	短按  键	/	/
17	低电报警	各种开机 状态中	电池电压低至于3.3V	每隔20秒提示 一下电量低 请充电	/
18	低电关机	各种开机 状态中	电池电压低至约3.0V	关机	/
19	充电中指示灯	充电	只要一充电就就红灯	/	红灯常亮
20	LINE	任何状态下	插入音频线，直接转到AUX LINE IN 模式，此时耳机为普通戴式耳机， 按键无效	关机	指示灯灭
21	充电饱和	充电	电池充满电		蓝灯亮
22	FM模式	开机状态中	短按 “M” 键进入FM模式 短按 “M” 键退出FM模式	FM模式	/
23	TF卡模式	TF卡模式	TF卡后插优先，有TF卡时 开机先读TF卡	TF卡模式	/
24	开/关灯	开机状态中	1. 长按  1S开关灯 2. 长按 “M” 1S开关灯 3. 长按  1S开关灯	注：根据耳机型 号按对应的按键	灯熄灭或 点亮

# Bluetooth Headset General Instructions

C-2370R

	Function	Headphone status	operate	Prompt sound	Indicator Lights
1	Power on	Shutdown	Long press  about 2S	Bluetooth Mode	Flashing blue and red alternately
2	Shutdown	Power on	Long press  about 3S	Shutdown	Indicator light off
3	Enter pairing	Shutdown	Automatically enter the search state after booting	Bluetooth Mode	Flashing red and blue alternately
4	Pairing successful	pair	/	“Ding Dong”	Blue light is always on
5	Disconnected from the phone	connect	/	“Dong”	Flashing red and blue alternately
6	Reconnect after booting	Shutdown	Automatically reconnect to previously paired devices after powering on	“Ding Dong”	Blue light is always on
7	Disconnect from a long distance	Long distance disconnection	When the headset is out of the connection range of the mobile phone, the Bluetooth will be automatically disconnected, and the red and blue lights will flash alternately. If the headset is close to the mobile phone within the connection range within about 1 minute, it will automatically reconnect. Otherwise, it will automatically shut down after 1 minute.	“Ding Dong”	Blue light is always on
8	Volume Adjustment	Play Music	long press  	Maximum/minimum volume: prompt “beep”	/
9	Previous song	Music playing	Short press  	/	/
10	Next song	Music playing	Short press  	/	/
11	Music Pause/Play	Music playing	Short press  	/	/
12	Phone reminder	Call	/	Ring, ring...	/
13	Answering a call	Call	Short press 	/	/
14	Reject call	Call	Long press 	/	/
15	Last code reconnection	Call	double click 	/	/
16	Hang up the phone	Call	Short press 	/	/
17	Low battery	In power on state	Battery voltage is as low as 3.3V	Every 20 seconds, it will remind you to charge the battery if it is low.	/
18	Low power shutdown	In power on state	Battery voltage is as low as about 3.0V	Shutdown	/
19	Charging indicator light	Charge	As long as it is charging, the red light	/	Red light is on
20	LINE	In any state	Insert the audio cable and switch directly to AUX LINE IN mode. The headset is now a normal headset and the buttons are invalid.	Shutdown	Indicator light off
21	Fully charged	Charge	Battery fully charged		Blue light on
22	FM Mode	In power on state	Short press the “M” key to enter FM mode Short press the “M” key to exit FM mode	FM Mode	/
23	TF card mode	TF card mode	TF card is inserted later first, when there is a TF card, read the TF card first when booting	TF card mode	/
24	Turn lights on/off	In power on state	1. Long press for 1S “  ” Note: Press the corresponding button according to the headset model. 2. Long press for 1S “  ” 3. Long press for 1S “  <img alt="volume down icon" data-bbox="415 955 435 975}”</img>	/	Light off or on key

## **FCC STATEMENT :**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

**Warning:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

## **RF warning statement:**

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.