



## Silver Bling Nutcracker

### Assembly & Operating Instructions

PLEASE KEEP A COPY OF YOUR RECEIPT WITH THESE INSTRUCTIONS.

**WARNING:** Do not turn prop on until fully assembled.  
Stay clear of the prop while operating. Keep all plastic & wire parts away from children.

Prop is intended for use with included components.  
For optimum performance, do not add additional weight onto prop.

Estimated Build Time: 10 minutes



### PARTS:



A. Base with Body  
B. Base Extensions Poles  
C. 5.9V 3A Power Adapter  
D. Left Arm  
E. Right Arm  
F. Head  
G. Silver Staff  
H. Staff Cap  
I. Dress

### ASSEMBLY




Place Base with Body (Part A) on a flat, suitable surface.

Pull up on the handle on the Base with Body (Part A) until it snaps & locks into place.

Attach Dress (Part I) to the Base with Body (Part A) using the hook & loop strips provided.

Attach Left Arm (Part D) to Base with Body (Part A). Ensure the spring pin snaps & locks into place. Tighten wingnuts to secure in place.

### ASSEMBLY

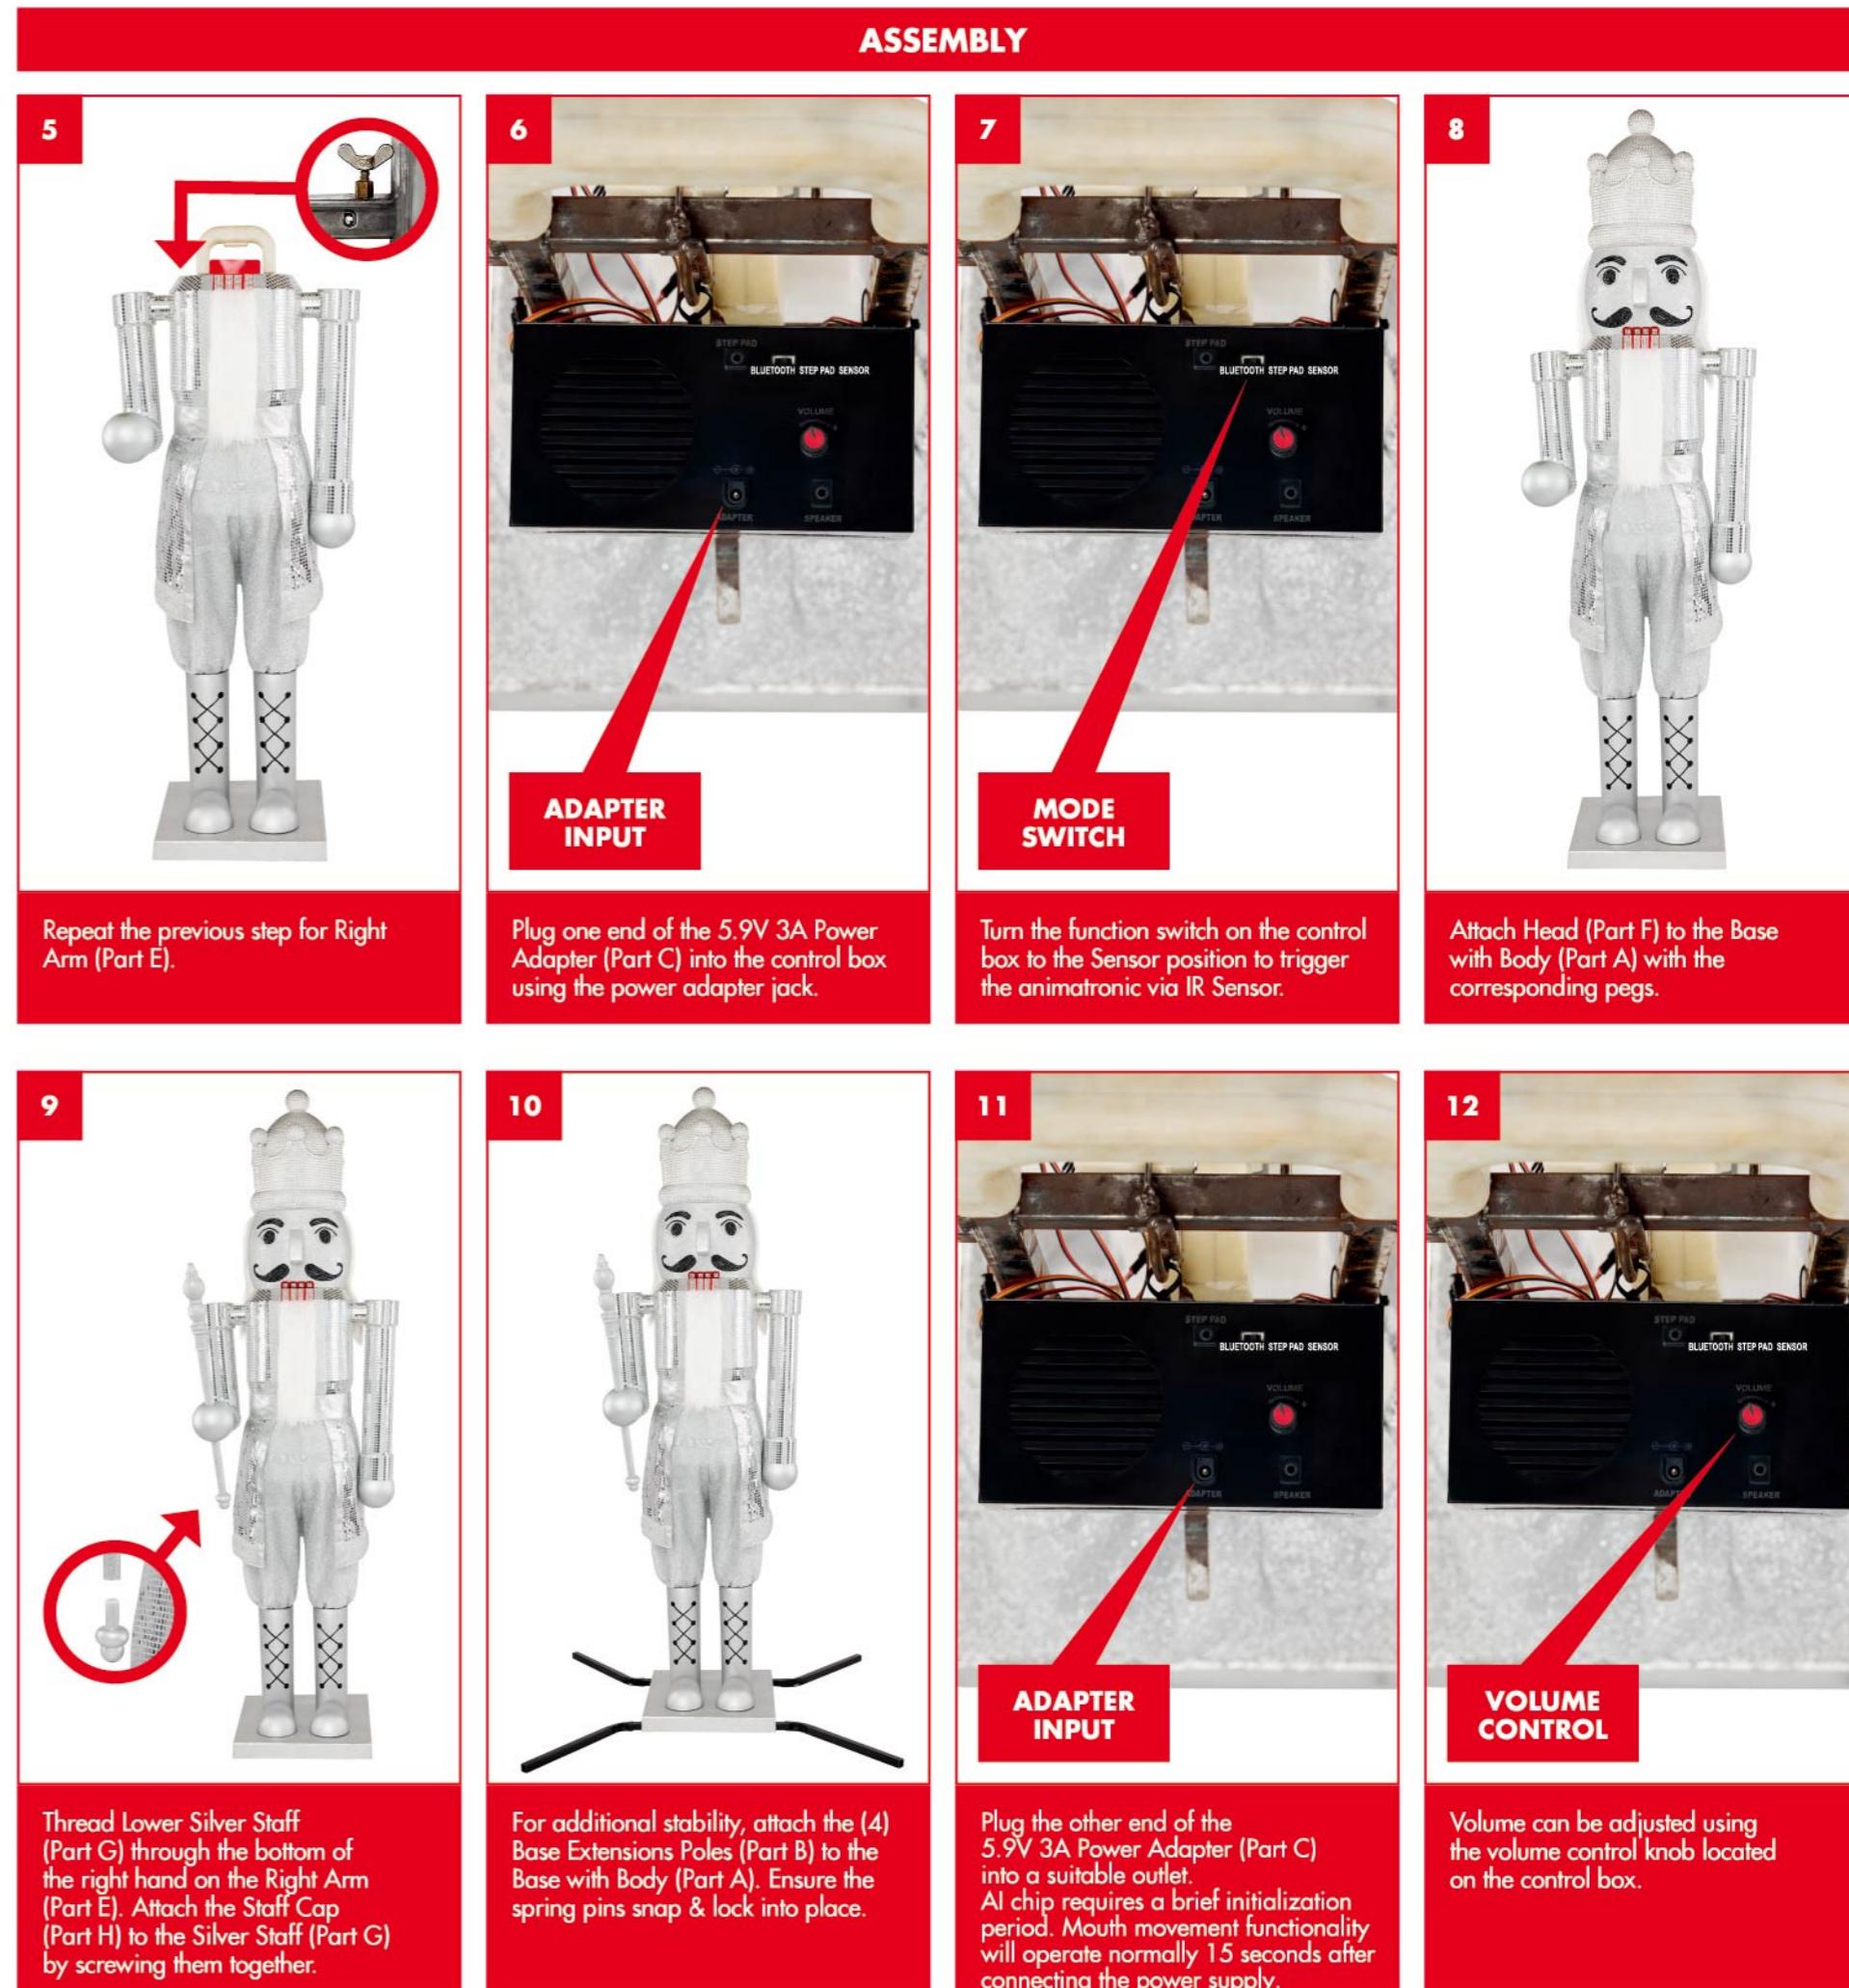

### USING THE BLUETOOTH™ FUNCTION

- Follow steps 1 – 12 of the assembly instructions.
- Trigger your preferred activator to activate the prop. Bluetooth audio will continue to play until manually stopped, track ends, or control box is set to either Sensor or Step Pad.
- Set the switch to the "Bluetooth" position to use the prop with Bluetooth Audio, allowing for the use of your own music or playlist.
- Adjust the volume using the volume buttons on your device.
- In the Bluetooth settings on your preferred device, locate the Bluetooth pairing address (BT\_01860212) which can also be found on the back of the Control Box, & pair.

### WARNINGS

- Do not turn the prop on until you have completely finished assembling it.
- CHOKING HAZARD – Small parts. Not for children under 3 yrs.
- This item is for decoration only. This is not a toy.
- Keep away from open flame and direct heat sources.
- This item is not intended for use by children.
- Stay clear of the prop while operating.
- This product is designed for indoor or covered porch use only and should not be placed outdoors subject to weather.

Questions about setup?  
There's no need to go back to the store.  
Ask the Holiday Tech Squad!



HTechSquad@SpiritChristmas.com  
1-888-526-2169



## WARNING

- Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## NOTE

- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.
- These limits are designed to provide reasonable protection against harmful interference in a residential installation.
- This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) this device may not cause harmful interference, and  
(2) this device must accept any interference received, including interference that may cause undesired operation.

### 1) The Responsible partyt information:

Name:Spirit Halloween Superstores LLC

Address:6826 Black Horse Pike, Egg Harbor Township, NJ 08234,USA

Telephone Number:609-645-3300

### 2) Identification of the product.

Product name:Bling Disco Nutcracker; Bling Candy Cane Nutcracker

Model Number(s): 01860212,AN000339,01860220,AN000340