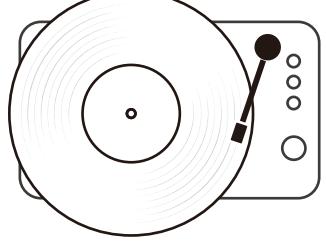
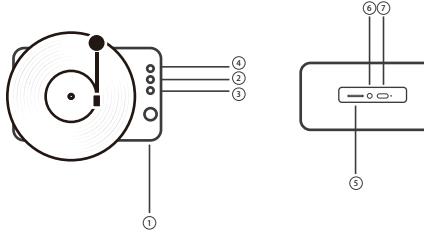


# 说明书:8\*8.1CM

<p><b>Little Luck Bluetooth Speaker</b> User Manual</p> 	<p><b>Product Parameters</b></p> <p>Product name: Gift Box Bluetooth Audio Product model: MYCP2466 Product size: 125*98*50mm Bluetooth version: 5.3 Input parameters: DC 5V0.5A Battery capacity: 3.7V/1200mAh Output power: 3W Loudspeaker: 40mm 4Ω-3W Transmission distance: Bluetooth, AUX, TF card Executive standard: GB4943.1-2022</p> <p><b>Device Link</b></p> <ol style="list-style-type: none"><li>1.If the audio is fully charged, long press the "On/Power on/Mode" button for about 3s to give an English prompt tone when the audio is turned on</li><li>2.The mobile phone or other device opens the wireless module to search, select "MYCP2466" in the search list and complete the wireless pairing. A prompt tone will be given when the link is successful..</li><li>3.After an audio is turned on, if a device with Bluetooth turned on appears within the range of the pairable distance and the mobile phone or device has successful matching record with the audio, and the mobile phone's Bluetooth is idle, the wireless pairing link with the device will be completed automatically.</li></ol>	 <p><b>Operating function</b></p> <ol style="list-style-type: none"><li>① Press and hold for about 3s to turn on/off.</li><li>② Short press: Play / Pause / Answer call, double-click: Turn on/off turntable rotation</li><li>③ ④ Volume up/down, previous/next track</li><li>④ Light button, warm light/colorful light/turn off light (warm light by default when turned on)</li><li>⑤ TF Card Mode, insert TF card to automatically switch</li><li>⑥ AUX audio cable mode, insert to automatically switch</li><li>⑦ Type-C charging port, can charge the speaker via Type-C charging cable</li></ol>
--	---	---

<p><b>Troubleshooting</b></p> <table border="1"><thead><tr><th>Troubleshooting</th><th>Possible causes</th><th>Solutions</th></tr></thead><tbody><tr><td>The radio module cannot search for an audio</td><td>The audio battery is dead and powers off</td><td>Charge the audio</td></tr><tr><td>The audio cannot be paired with the wireless module</td><td>The audio has been paired with another device or is not in wireless pairing mode</td><td>Turn off or delete other paired devices, restart the audio and search again</td></tr></tbody></table> <p><b>Precaution</b></p> <p>1.This product has a built-in battery. Do not go near the fire source or put it into the fire or water. 2.Do not press or crash the product. 3.Do not disassemble, decompose or transform it by yourself. 4.Children should be taken care to avoid childrens aged at 14 below to use it as toys, resulting in unnecessary accidents. 5.If any abnormal situation is found during the use of the product, please stop using it immediately. 6.The power adapter and the data cable provided by the factory should be used to charge the product.</p>	Troubleshooting	Possible causes	Solutions	The radio module cannot search for an audio	The audio battery is dead and powers off	Charge the audio	The audio cannot be paired with the wireless module	The audio has been paired with another device or is not in wireless pairing mode	Turn off or delete other paired devices, restart the audio and search again	<p><b>FCC Warning</b></p> <p>This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p>NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: - Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help.</p> <p>NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</p> <p>The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.</p>
Troubleshooting	Possible causes	Solutions								
The radio module cannot search for an audio	The audio battery is dead and powers off	Charge the audio								
The audio cannot be paired with the wireless module	The audio has been paired with another device or is not in wireless pairing mode	Turn off or delete other paired devices, restart the audio and search again								