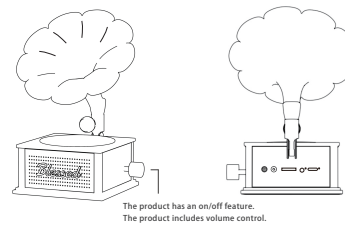



正反面

说明书 6.7*6.7CM

<h1>Blessed Lucky Phonograph</h1> <p>Instruction Manual</p> <p>使用说明书</p>	<h2>product parameters</h2> <table border="1"> <tbody> <tr> <td>Product Name</td><td>Lucky Gramophone</td></tr> <tr> <td>Product Dimensions</td><td>approximately 136*120*200mm</td></tr> <tr> <td>Input parameters</td><td>DC 5V/0.5A</td></tr> <tr> <td>product model</td><td>MHC9248B</td></tr> <tr> <td>battery capacity</td><td>3.7V/1200mAh</td></tr> <tr> <td>rated power</td><td>3W</td></tr> <tr> <td>loadspeaker</td><td>40mm 4Ω 3w</td></tr> <tr> <td>execution standard</td><td>GB/T2004-2008 GB87000-1 2015</td></tr> </tbody> </table> <h2>product features</h2> <ul style="list-style-type: none"> The product features a white noise function AUX, TF card, Bluetooth and other playback methods. The product is suitable for various scenarios. The product features a rotating turntable when playing music. The turntable is equipped with a lighting design.  <h2>The product features operational functions.</h2>  <p>The product allows for power on and volume adjustment. After being pressed for 3 seconds, the device will power on. By rotating the knob, you can control the volume level. Double-clicking the knob stops the turntable from spinning.</p> <p>lighting white noise</p> <ul style="list-style-type: none"> ▶ The device defaults to warm light when turned on, and a single press can switch the color (double-clicking fixes the color). ▶ Long press to switch between blue-white mode and white noise mode. When playing music, click once to play the next song. ▶ Double-click to play the previous song. <p>■ TF card mode. ● AUX mode. — Type-C charging port.</p>	Product Name	Lucky Gramophone	Product Dimensions	approximately 136*120*200mm	Input parameters	DC 5V/0.5A	product model	MHC9248B	battery capacity	3.7V/1200mAh	rated power	3W	loadspeaker	40mm 4Ω 3w	execution standard	GB/T2004-2008 GB87000-1 2015	<h2>FCC Rating</h2> <p>This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:</p> <ol style="list-style-type: none"> (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. <p>TNOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none"> - Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help. <p>TNOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</p> <p>The device has been evaluated to meet general RF exposure requirement. The device can be used in portable environment without restriction.</p>
Product Name	Lucky Gramophone																	
Product Dimensions	approximately 136*120*200mm																	
Input parameters	DC 5V/0.5A																	
product model	MHC9248B																	
battery capacity	3.7V/1200mAh																	
rated power	3W																	
loadspeaker	40mm 4Ω 3w																	
execution standard	GB/T2004-2008 GB87000-1 2015																	
<h2>Common troubleshooting.</h2> <p>Unable to search for the sound system:</p> <p>The sound system may be paired with another device. Please search again.</p> <p>The turntable is stuck or unable to rotate:</p> <p>Check if there are any heavy objects on the surface of the turntable.</p> <p>The music playback is choppy:</p> <p>Please charge the device first.</p>	<h2>Warranty statement.</h2> <p>-----</p> <h3>Warranty period and terms.</h3> <p>You will enjoy 180 days of free warranty service from the date of purchase. During the warranty period, you can obtain warranty service at the dealer with a valid purchase receipt. After the warranty period expires, paid repairs can be arranged with the dealer at their discretion.</p> <h3>Non-warranty statement.</h3> <p>Man-made damages include: abnormal wear and tear, dropping (resulting damage), water ingress, and other invisible man-made damages caused by improper use.</p> <p>Other damages caused by unauthorized modifications or additions.</p> <p>Damages caused by force majeure such as earthquakes, floods, fire, typhoons, etc.</p>	<h2>Brief precautions.</h2> <p>Do not attempt to disassemble or repair this product yourself.</p> <p>Do not get the product wet or operate it with wet hands.</p> <p>Please avoid placing this product in high temperature or humid environments to prevent damage.</p> <p>If there are any abnormal situations during the use or charging of the product, please stop using it immediately.</p> <p>The battery of this product is not replaceable. When the light source reaches the end of its life, the entire product should be replaced.</p> <p>The product does not include a power adapter. Please make sure to purchase a plug from a legitimate manufacturer that complies with the national IEC certification for charging.</p> <p>Thank you for purchasing this product. Please read the precautions carefully before first use.</p>																